

## Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [Vtech](#) /

› **VTech V.Smile (Motion) Handy Manny Game Cartridge User Manual - Model 84365**

## Vtech 84365

# VTech V.Smile (Motion) Handy Manny Game Cartridge User Manual

Model: 84365



## PRODUCT OVERVIEW

The VTech V.Smile (Motion) Handy Manny Game Cartridge, Model 84365, is an educational game designed for use with V.Smile and V.Smile Motion consoles. This game allows children to explore numbers, vocabulary, shapes, and colors through interactive play with the character Handy Manny.

It features two main modes: "Educational Adventure" and "Discovery Workshops," offering two difficulty levels and a 2-player mode for shared learning experiences. The game includes the authentic voice of Handy Manny.

vttech®

4-6  
ans

V. SMILE®  
APPRENDRE EN S'AMUSANT

Disney

MANNY ET SES OUTILS



### Apprends :

- L'espagnol
- Les directions
- La résolution de problèmes
- La logique
- Les nombres
- Les puzzles
- Les formes
- Les couleurs
- Les additions

Image: VTech V.Smile Handy Manny Game Cartridge. This image displays the game cartridge packaging, featuring the Handy Manny character and V.Smile branding.

## SAFETY INFORMATION

### WARNING:

- Not suitable for children under 3 years due to small parts which may present a choking hazard.

- Adult supervision is recommended during play.

## SETUP

1. **Compatibility Check:** Ensure your V.Smile console is either a V.Smile or V.Smile Motion model. This game cartridge is designed specifically for these systems.
2. **Insert Cartridge:** Locate the cartridge slot on your V.Smile console. Gently insert the Handy Manny game cartridge into the slot until it clicks into place. Ensure the label faces upwards.
3. **Power On:** Turn on your V.Smile console and television. Select the correct input channel on your TV.
4. **Start Game:** The game should automatically load. If not, navigate to the game selection menu on your console and select "Handy Manny."

No assembly is required for the game cartridge itself. Batteries are not required for the cartridge, as it draws power from the console.

## OPERATING INSTRUCTIONS

Once the game has loaded, follow the on-screen prompts to begin playing.

- **Game Modes:** The game offers two primary modes: "Educational Adventure" and "Discovery Workshops." Select your preferred mode from the main menu.
- **Difficulty Levels:** Two difficulty levels are available. Choose the appropriate level for the player's age and skill.
- **2-Player Mode:** If playing with another person, select the 2-player option from the menu. Ensure a second controller is connected to the V.Smile console.
- **Navigation:** Use the console's joystick or directional pad to move characters and select options. Use the action buttons to interact with the game environment.
- **Learning Objectives:** The game focuses on teaching numbers, vocabulary, shapes, and colors. Encourage children to engage with the educational content.

## MAINTENANCE

- **Cleaning:** To clean the game cartridge, gently wipe the plastic casing with a soft, dry cloth. Do not use liquid cleaners or solvents.
- **Storage:** Store the cartridge in its original packaging or a protective case when not in use to prevent dust and damage. Keep it away from direct sunlight and extreme temperatures.
- **Handling:** Avoid touching the metal connectors on the bottom of the cartridge. If they become dirty, gently clean them with a cotton swab and isopropyl alcohol. Allow to dry completely before re-inserting into the console.

## TROUBLESHOOTING

Problem	Possible Cause	Solution
Game does not start or load.	Cartridge not inserted correctly; dirty connectors; console issue.	Remove and re-insert the cartridge firmly. Clean cartridge connectors. Ensure the V.Smile console is functioning correctly with other games.

Problem	Possible Cause	Solution
Graphics or sound issues.	Dirty connectors; console connection issues.	Clean cartridge connectors. Check audio/video cables connecting the console to the TV.
Game freezes or crashes.	Temporary software glitch; dirty connectors.	Turn off the console, remove the cartridge, wait a few seconds, then re-insert and restart. Clean connectors if necessary.

## SPECIFICATIONS

- Model Number:** 84365
- Brand:** VTech
- Sub-brand:** Disney
- Compatible Consoles:** V.Smile, V.Smile Motion
- Material:** Plastic
- Product Dimensions (L x W x H):** 8.1 x 9 x 7.8 cm (3.19 x 3.54 x 3.07 inches)
- Item Weight:** 52 grams (1.83 ounces)
- Batteries Required:** No (for cartridge)
- Recommended Age:** 4 - 7 years (Manufacturer recommended: 4 - 6 years)
- Educational Objective:** Creativity, Numbers, Vocabulary, Shapes, Colors
- Cartoon Character:** Handy Manny
- GTIN:** 03417768843652

## WARRANTY AND SUPPORT

For warranty information and customer support, please refer to the documentation included with your V.Smile console or visit the official VTech website. Specific warranty details for game cartridges may vary by region.

**VTech Official Website:** [www.vtech.com](http://www.vtech.com)

For further assistance, please contact VTech customer service.