

## THOMSON CE-26

# THOMSON CE-26 Cassette/SD/USB Audio System Instruction Manual

Model: CE-26

## 1. INTRODUCTION

This instruction manual provides essential information for the safe and efficient use of your THOMSON CE-26 Cassette/SD/USB Audio System. Please read this manual thoroughly before operating the device and retain it for future reference. The CE-26 allows you to play audio from cassettes, USB drives, and SD/MMC cards, as well as record audio directly from cassettes or external sources to MP3 format on USB or SD/MMC media.

## 2. PRODUCT OVERVIEW

Familiarize yourself with the components and controls of your CE-26 audio system.

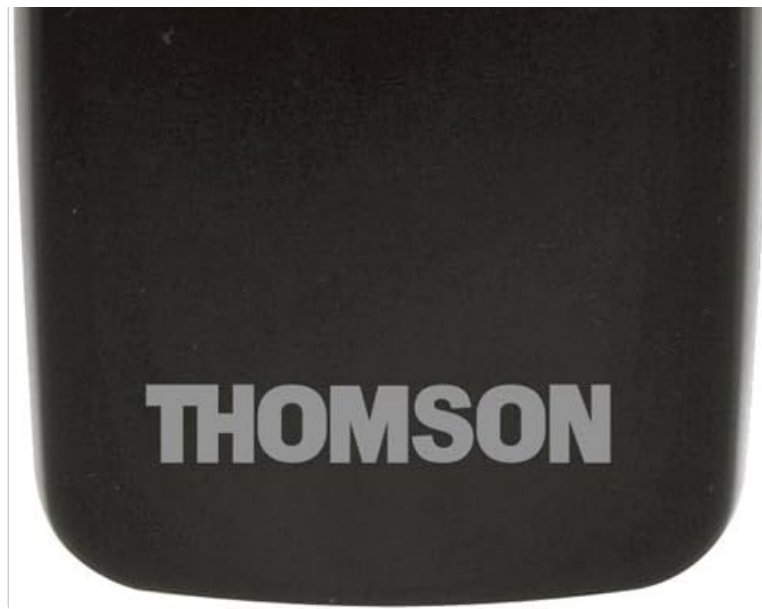 


**Figure 2.1: Front Panel View.** This image displays the front of the THOMSON CE-26 unit, showing the cassette deck, control buttons, display screen, USB port, SD/MMC card slot, and volume knob.



**Figure 2.2: Angled View.** This image shows the THOMSON CE-26 from an angled perspective, highlighting the integrated side speaker and the overall compact design.





**Figure 2.3: Remote Control Unit.** This image displays the included remote control for the THOMSON CE-26, featuring buttons for search, display, record, playback mode, program, folder navigation, and USB/SD selection.



**Figure 2.4: Feature Overview Diagram.** This diagram illustrates the key functionalities of the THOMSON CE-26, including direct recording from cassette to USB/SD, MP3/WMA playback, USB/SD memory copying, AUX input, built-in speaker, and remote control.

### Front Panel Controls:

- **Power Button:** Turns the unit on or off.
- **Display Screen:** Shows track information, mode, and time.
- **Cassette Deck:** For inserting and playing audio cassettes.
- **USB Port:** Connect USB flash drives for playback or recording.
- **SD/MMC Card Slot:** Insert SD or MMC cards for playback or recording.
- **Playback Controls:** Play, Pause, Stop, Fast Forward, Rewind, Skip Track.
- **Record Button:** Initiates recording.
- **Mode Button:** Switches between Cassette, USB, SD, and AUX input modes.
- **Volume Knob:** Adjusts the audio output level.
- **Headphone Jack:** For private listening.
- **AUX Input:** Connect external audio devices.

## 3. SETUP

1. **Power Connection:** Connect the AC power cord to the unit's power input and then to a standard wall outlet.

2. **Initial Power On:** Press the Power button to turn on the unit. The display will illuminate.
3. **Inserting Media:**
  - **Cassette:** Open the cassette door and insert an audio cassette with the open edge facing upwards. Close the door securely.
  - **USB Drive:** Insert a USB flash drive into the USB port. Ensure it is formatted to FAT32.
  - **SD/MMC Card:** Insert an SD or MMC card into the card slot until it clicks into place. Ensure it is formatted to FAT32.
4. **External Audio Device (Optional):** To use the AUX input, connect an external audio source (e.g., smartphone, CD player) to the AUX IN jack using a 3.5mm audio cable.

## 4. OPERATING INSTRUCTIONS

---

### 4.1. Cassette Playback

1. Insert a cassette tape.
2. Press the "Mode" button until "Cassette" mode is selected (or the cassette deck automatically starts playing).
3. Press the Play button (▶) on the unit or remote.
4. Adjust the volume using the Volume knob.
5. Use Fast Forward (▶▶) or Rewind (◀◀) buttons to navigate the tape.
6. Press Stop (■) to end playback.

### 4.2. USB/SD Playback

1. Insert a USB drive or SD/MMC card containing MP3 or WMA audio files.
2. Press the "Mode" button to select "USB" or "SD" mode. The unit will automatically scan and begin playing the first track.
3. Use the Play/Pause (▶/||), Stop (■), Next Track (▶▶), and Previous Track (◀◀) buttons to control playback.
4. The "Folder" buttons on the remote can be used to navigate between folders on the USB/SD media.

### 4.3. Recording Audio to MP3 (Cassette to USB/SD)

This feature allows you to convert your cassette tapes into digital MP3 files.

1. Insert a blank or desired USB drive/SD card into the respective slot.
2. Insert the cassette tape you wish to record.
3. Press the "Mode" button to select "Cassette" mode.
4. Start playing the cassette tape.
5. Press the "Record" button on the unit or remote. The recording indicator will light up, and the unit will begin converting the cassette audio to MP3 format on the selected USB/SD media.
6. To stop recording, press the "Stop" button. The recorded MP3 file will be saved on your USB drive or SD card.
7. **Note:** There might be a slight delay between pressing record and the actual start of recording. It is recommended to start recording slightly before the desired audio begins to avoid cutting off the start of a track.

### 4.4. Recording Audio to MP3 (AUX Input to USB/SD)

Record audio from an external device connected via the AUX input.

1. Connect your external audio device to the AUX IN jack.
2. Insert a blank or desired USB drive/SD card.
3. Press the "Mode" button to select "AUX" mode.
4. Start playback on your external audio device.
5. Press the "Record" button on the unit or remote. The recording indicator will light up, and the unit will begin converting the AUX audio to MP3 format on the selected USB/SD media.
6. To stop recording, press the "Stop" button.

4.5. Copying Files Between USB and SD/MMC

The CE-26 allows direct copying of MP3/WMA files between a USB drive and an SD/MMC card.

1. Ensure both a USB drive and an SD/MMC card are inserted into their respective slots.
2. Select either "USB" or "SD" mode using the "Mode" button, depending on which source you want to copy from.
3. Navigate to the file or folder you wish to copy.
4. Press and hold the "Copy" button (often labeled "USB/SD Copy" or similar) on the unit or remote. Follow any on-screen prompts to confirm the copy operation.
5. The display will indicate when the copying process is complete.

5. MAINTENANCE

- **Cleaning:** Use a soft, dry cloth to clean the exterior of the unit. Do not use liquid cleaners or abrasive materials.
- **Cassette Deck Care:** Periodically clean the cassette head and pinch rollers with a specialized cassette head cleaner to ensure optimal audio quality and prevent tape damage.
- **Storage:** When not in use for extended periods, disconnect the power cord and store the unit in a cool, dry place away from direct sunlight and extreme temperatures.

6. TROUBLESHOOTING

| Problem                                          | Possible Cause                                                           | Solution                                                                                                          |
|--------------------------------------------------|--------------------------------------------------------------------------|-------------------------------------------------------------------------------------------------------------------|
| No power                                         | Power cord not connected;<br>Power outlet not active.                    | Ensure power cord is securely connected. Check if the power outlet is working.                                    |
| No sound during playback                         | Volume too low; Incorrect mode selected; Headphones connected.           | Increase volume. Select the correct input mode (Cassette, USB, SD, AUX). Disconnect headphones if using speakers. |
| Cassette tape not playing or recording correctly | Tape tangled or damaged; Cassette heads dirty; Incorrect tape direction. | Check tape condition. Clean cassette heads and pinch rollers. Ensure tape is inserted correctly.                  |
| Recording stops prematurely or has gaps          | USB drive/SD card full; Media format issue; Intermittent power.          | Ensure sufficient storage space. Use FAT32 formatted media. Check power connection stability.                     |

| Problem                        | Possible Cause                                                            | Solution                                                                                |
|--------------------------------|---------------------------------------------------------------------------|-----------------------------------------------------------------------------------------|
| Poor audio quality from USB/SD | Corrupted files; Low bitrate MP3/WMA files.                               | Try different audio files. Ensure files are not corrupted.                              |
| Remote control not working     | Batteries depleted; Obstruction between remote and unit; Incorrect angle. | Replace remote control batteries. Ensure clear line of sight to the unit's IR receiver. |

 
## 7. SPECIFICATIONS

| Feature                 | Detail                                                                  |
|-------------------------|-------------------------------------------------------------------------|
| Brand                   | THOMSON                                                                 |
| Model Number            | CE-26                                                                   |
| Supported Media         | Cassette Tape, USB Memory, SD/MMC Card                                  |
| Supported Audio Formats | MP3, WMA (playback); MP3 (recording)                                    |
| Recording Function      | Direct digital recording from Cassette to MP3, AUX to MP3               |
| Connectivity            | USB Port, SD/MMC Card Slot, AUX Input (3.5mm), Headphone Output (3.5mm) |
| Built-in Speaker        | Yes                                                                     |
| Remote Control          | Included                                                                |
| Dimensions (approx.)    | 35.4 x 33.2 x 12 cm                                                     |
| Weight (approx.)        | 3.02 kg                                                                 |

## 8. WARRANTY AND SUPPORT


For warranty information and technical support, please refer to the warranty card included with your product or contact THOMSON customer service directly. Keep your purchase receipt as proof of purchase. For further assistance, please visit the official THOMSON website or contact their authorized service centers.

### Related Documents - CE-26
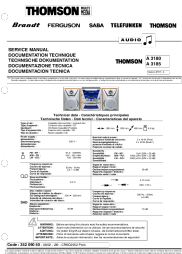
|                                                                                     |                                                                                                                                                                                                                                                                                                                                                |
|-------------------------------------------------------------------------------------|------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
|    | <p><a href="#">Thomson A3180/A3185 Service Manual</a></p> <p>Service manual for the Thomson A3180 and A3185 audio systems, providing technical data, schematics, and component information for service and repair.</p>                                                                                                                         |
|    | <p><a href="#">Manuel d'utilisation Thomson Boom Box portable RK250UDABCD</a></p> <p>Guide d'utilisation complet pour le Thomson Boom Box portable RK250UDABCD, couvrant les fonctions DAB, USB, CD, Cassette et radio FM. Inclut les instructions de sécurité et d'utilisation.</p>                                                           |
|   | <p><a href="#">THOMSON TLINK 11 BK GSM Mobile Phone Quick Start Guide</a></p> <p>Quick start guide for the THOMSON TLINK 11 BK GSM mobile phone, covering safety, setup, features, and compliance. Learn how to insert SIM cards, charge the battery, and use basic functions.</p>                                                             |
|  | <p><a href="#">Thomson Go TV User Manual</a></p> <p>This user manual provides comprehensive instructions for setting up and operating the Thomson Go TV. It covers safety information, installation, remote control usage, initial setup with Google services, and detailed settings for channels, media playback, and system preferences.</p> |
|  | <p><a href="#">Thomson ALTIMA 3080/3085 Service Manual and Technical Data</a></p> <p>Comprehensive service manual for the Thomson ALTIMA 3080 and ALTIMA 3085 audio systems, detailing technical specifications, circuit diagrams, adjustment procedures, and parts lists for servicing. Includes multilingual content.</p>                    |

|                                                                                                                                                                                                                                                             |                                                                                                                                                                                                                                                                                                                                                         |
|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|---------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <br><br> | <p><a href="#">Thomson Smart TV ar Google TV: Lietotāja rokasgrāmata</a></p> <p>Šī visaptverošā lietotāja rokasgrāmata sniedz būtisku informāciju jūsu jaunā Thomson Smart TV ar Google TV uzstādīšanai un lietošanai. Tā aptver visu, sākot no sākotnējās instalācijas un savienojumiem līdz funkciju, iestatījumu un problēmu novēršanas izpētei.</p> |
|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|---------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|

 Documents - THOMSON – CE-26

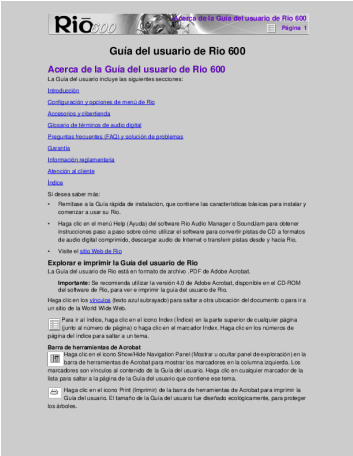

[\[pdf\]](#) Instructions Frequently Asked Questions Guide

Rio600 User Guide Spanish book barbaraw Guía del usuario de Rio 600 Instructions Manuals Lista reproducción Crea nuevas listas administra descargadas la Reproducción aleatoria La configuración Repeat es instructionsmanuals sites default files 2019 06 |||

Acerca de la Gua del usuario de Rio 600 Pgina 1 Gua del usuario de Rio 600 Acerca de la Gua del usuario de Rio 600 La Gua del usuario incluye las siguientes secciones: Introduccin Configuracin y opciones de men de Rio Accesorios y cibertienda Glosario de trminos de audio digital Preguntas frecuentes...

lang:es score:31 filesize: 423.3 K page\_count: 32 document date: 2000-07-19



[\[pdf\]](#) User Manual

Manual Cisco KMM3000 conteudos meo pt Documentos Manuais Box MEO Fibra ADSL |||

Manual de Instrues Cisco KMM3000 Manual de Instrues Instrues de segurana Por favor, e para sua segurana, atente s instrues que se seguem: Nunca abra o aparelho. Nunca toque nas ligaes com objectos pontiagudos ou metlicos. Coloque os cabos de forma que no sejam pisados e ningum tropece neles. ...

lang:pt score:13 filesize: 4.17 M page\_count: 44 document date: 2014-11-17




## [\[pdf\]](#) User Manual

 RX A3020 V3073 AV RECEIVER YAMAHA CORP Yamaha RXV 3073 Service Manual vintageshifi repertoire telecharge |||

RX-A3020/RX-V3073 AV RECEIVER YAMAHA CORP RX-A3020/RX-V3073 SERVICE MANUAL Note: When the DIGITAL P.C.B. or IC78 on DIGITAL P.C.B. is replaced, this unit will display Internal Error and will not operate at all without additional setting. In such a case, report the serial number of this unit to the following...


lang:en **score:10** filesize: 22.58 M page\_count: 216 document date: 2017-08-26

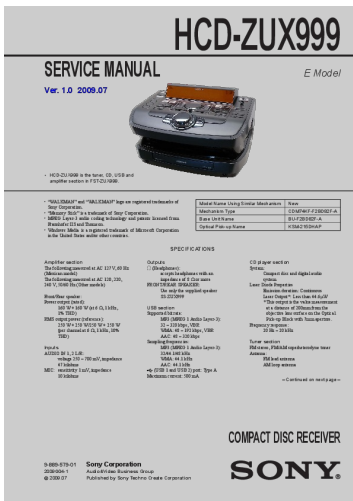

## [Sony HCD-ZUX999 Service Manual - Technical Guide](#)

Official service manual for the Sony HCD-ZUX999 Compact Disc Receiver, providing detailed technical specifications, disassembly instructions, diagrams, and parts lists for maintenance and repair.

 lang:en **score:10** filesize: 7.78 M page\_count: 122 document date: 2009-07-02

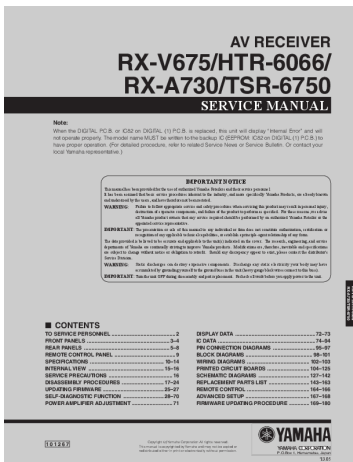

## [\[pdf\]](#) User Manual Service Bulletin

RX V675 HTR 6066 A730 TSR 6750 AV RECEIVER YAMAHA CORP Yamaha Service Manual vintageshifi repertoire telecharge

AV RECEIVER RX-V675/HTR-6066/ RX-A730/TSR-6750 SERVICE MANUAL Note:

When the DIGITAL P.C.B. or IC82 on DIGITAL 1 P.C.B. is replaced, this unit will display Internal Error and will not operate properly. The model name MUST be written to the backup IC EEPROM: IC82 on DIGITAL 1 P.C.B. to have p...

lang:en **score:10** filesize: 18.94 M page\_count: 182 document date: 2013-05-28



[Sony RDR-HXD870/HXD970/HXD1070 Service Manual](#)

Detailed service manual for Sony RDR-HXD870, RDR-HXD970, and RDR-HXD1070 DVD recorders, covering specifications, troubleshooting, disassembly, and repair procedures.

lang:en score:9 filesize: 11.17 M page\_count: 169 document date: 2007-10-30