



Manuals.plus /

› KODAK /

› Kodak PlaySport (Zx3) HD Waterproof Pocket Video Camera User Manual

KODAK Zx3

Kodak PlaySport (Zx3) HD Waterproof Pocket Video Camera User Manual

Model: Zx3 | UPC: 041771734787

1. INTRODUCTION

Thank you for choosing the Kodak PlaySport (Zx3) HD Waterproof Pocket Video Camera. This device is designed for capturing high-definition video and still images in various environments, including underwater. Its robust design allows for use in challenging conditions, making it suitable for active lifestyles. Please read this manual carefully to ensure proper use and to maximize the camera's performance and longevity.

2. PACKAGE CONTENTS

Verify that all items are present in your product package:

- Kodak PlaySport (Zx3) HD Waterproof Pocket Video Camera
- Rechargeable Lithium-Ion Battery
- USB Cable
- Wrist Strap
- Quick Start Guide (not included in this manual)

3. PRODUCT OVERVIEW

The Kodak PlaySport (Zx3) is a compact and durable video camera featuring a 2.0-inch color display and intuitive controls. It is designed to be waterproof up to 10 feet (3 meters), allowing for underwater capture.



Figure 3.1: Front view of the Kodak PlaySport camera, displaying a captured image on its screen.



Figure 3.2: Side view of the camera, highlighting the power button, USB port, and HDMI port.



Figure 3.3: Rear view close-up, showing the camera lens and its waterproof design with water droplets.

4. SETUP

4.1. Charging the Battery

1. Insert the rechargeable Lithium-Ion battery into the battery compartment.
2. Connect the camera to a computer or a USB power adapter using the supplied USB cable.
3. The charging indicator light will illuminate during charging and turn off when the battery is fully charged.

4.2. Inserting a Memory Card

The Kodak PlaySport (Zx3) supports SD and SDHC memory cards. A memory card is required to store videos and photos.

1. Open the memory card slot cover.
2. Insert the SD/SDHC card with the metal contacts facing down until it clicks into place.
3. Close the memory card slot cover securely to maintain waterproof integrity.

4.3. Powering On/Off

- To power on, press and hold the **Power** button.
- To power off, press and hold the **Power** button again until the screen turns off.

5. OPERATING THE CAMERA

5.1. Recording Video

The camera captures Full 1080p HD video with electronic image stabilization.

1. Turn on the camera.
2. Press the **Record** button (usually marked with a red dot or camera icon) to start recording.
3. Press the **Record** button again to stop recording.

5.2. Taking Photos

Capture 5-megapixel HD still images (16:9 aspect ratio).

1. Turn on the camera.
2. Switch to photo mode if available (refer to on-screen icons).
3. Press the **Shutter** button to take a picture.

5.3. Playback

View your captured videos and photos on the brilliant 2.0-inch color display.

1. Turn on the camera.
2. Press the **Playback** button (usually marked with a play icon).
3. Use the navigation buttons to browse through your media.
4. Press the **Select** button to play a video or view a photo.

6. WATERPROOF USAGE GUIDELINES

The Kodak PlaySport (Zx3) is waterproof up to 10 ft. (3 m). To ensure waterproof integrity:

- Ensure all compartment doors (battery, memory card, USB/HDMI) are securely closed and latched before exposing the camera to water.
- Do not open compartment doors while the camera is wet or submerged.
- After use in saltwater, rinse the camera thoroughly with fresh water and dry it completely before opening any compartments.
- Avoid dropping the camera or subjecting it to strong impacts, as this may compromise its waterproof seals.

7. CONNECTING TO A COMPUTER

To transfer your videos and photos to a computer:

1. Ensure the camera is powered on.
2. Connect the camera to your computer using the supplied USB cable.
3. The camera should appear as a removable drive on your computer.
4. Drag and drop files to transfer them. The camera may also include built-in software for editing and uploading to web services.

8. MAINTENANCE

- **Cleaning:** Wipe the camera body with a soft, damp cloth. For the lens, use a lens cleaning cloth.
- **Storage:** Store the camera in a cool, dry place away from direct sunlight.
- **Battery Care:** Remove the battery if the camera will not be used for an extended period.

9. TROUBLESHOOTING

9.1. Camera Does Not Power On

- Ensure the battery is fully charged.
- Check that the battery is inserted correctly.

9.2. Cannot Record Video/Take Photos

- Verify that a compatible SD/SDHC memory card is inserted.
- Check if the memory card has sufficient free space.
- Ensure the battery has enough charge.

9.3. Water Leakage

- Immediately power off the camera and remove the battery.
- Ensure all compartment doors were properly sealed before water exposure.
- Contact customer support if the issue persists after ensuring proper sealing.

10. SPECIFICATIONS

Brand	KODAK
Model Number	1734789
Photo Sensor Technology	CMOS
Video Capture Resolution	1080p
Effective Still Resolution	5 MP
Screen Size	2 Inches
Water Resistance Level	Waterproof up to 10 ft. (3 m)
Image Stabilization	Electronic Image Stabilization
Flash Memory Type	SD, SDHC
Connectivity Technology	USB
Item Weight	128 Grams

11. OFFICIAL PRODUCT VIDEO

Watch this official video for a visual guide on how to use your Kodak PlaySport camera:

Your browser does not support the video tag.

Video 11.1: Official tutorial demonstrating how to use the Kodak PlaySport camera, covering various features and functions.

12. WARRANTY AND SUPPORT

For warranty information, technical support, or service inquiries, please refer to the warranty card included with your product or visit the official KODAK support website. Keep your purchase receipt as proof of purchase for warranty claims.