

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [KODAK](#) /

› [Kodak Easyshare M530 Digital Camera Instruction Manual](#)

KODAK M530

Kodak Easyshare M530 Digital Camera Instruction Manual

Model: M530

1. INTRODUCTION

The Kodak Easyshare M530 is a 12-megapixel digital camera designed for ease of use and efficient photo sharing. It features a 3x optical zoom lens, a 2.7-inch LCD with KODAK Color Science Technology, and intelligent shooting modes to simplify photography.

Key features include:

- **12-megapixel resolution:** Enables stunning prints up to 30 x 40 inches.
- **3x optical zoom:** For capturing distant subjects with clarity.
- **2.7-inch LCD:** Features KODAK Color Science Technology for vibrant image display.
- **Kodak Smart Capture feature:** Automatically adjusts camera settings for optimal results in various environments.
- **Face Recognition feature:** Automatically identifies and optimizes settings for faces in a scene, and helps organize photos.
- **SD/SDHC memory card compatibility:** For expandable storage (memory card not included).

2. SETUP

2.1. Battery Installation and Charging

The Kodak Easyshare M530 uses a Kodak Rechargeable Li-Ion Battery KLIC-7006. Ensure the battery is fully charged before initial use.

1. Open the battery compartment cover located on the bottom of the camera.
2. Insert the KLIC-7006 Li-Ion battery, ensuring correct orientation according to the diagram inside the compartment.
3. Close the battery compartment cover securely.
4. Connect the camera to the Kodak USB AC adapter using the provided USB cable for in-camera charging. The charging indicator will illuminate.

2.2. Memory Card Installation

The camera supports SD/SDHC memory cards. A memory card is required to store a significant number of

photos and videos.

1. Open the memory card slot cover, usually located near the battery compartment.
2. Insert the SD or SDHC memory card into the slot with the metal contacts facing the correct direction (refer to the camera's internal diagram). Push until it clicks into place.
3. Close the memory card slot cover securely.

3. OPERATING THE CAMERA

3.1. Powering On/Off

Press the power button located on the top of the camera to turn it on or off. The lens will extend when powered on.

3.2. Taking Photos

1. Turn on the camera.
2. Frame your shot using the 2.7-inch LCD screen.
3. Press the shutter button halfway down to focus. The focus indicator will confirm focus.
4. Press the shutter button all the way down to capture the image.

3.3. Smart Capture Feature

Kodak's Smart Capture feature automatically detects the scene and adjusts camera settings for optimal exposure, focus, and ISO. This ensures clear, sharp pictures even in challenging lighting conditions.

3.4. Face Recognition Feature

The camera can automatically recognize up to 20 pre-tagged faces and up to five faces in a single image. This feature optimizes focus and exposure for faces and aids in organizing photos later.

3.5. Zoom Functionality

Use the zoom controls (typically a rocker switch) to adjust the 3x optical zoom for closer shots or wider views.

3.6. Flash Modes

The camera features various flash modes including Auto, On, Off, Slow Synch, and Rear Curtain Synch. Select the appropriate mode based on lighting conditions and desired effect.

3.7. Video Recording

The Kodak Easyshare M530 can record continuous VGA video (640 x 480) at 30 frames per second with audio. Video print options include 1- and 9-up prints.

3.8. Playback

To review captured images and videos, switch the camera to playback mode. Use the navigation buttons to browse through your media.

3.9. Sharing Images

The dedicated Share button allows you to tag pictures directly from your camera for easy uploading to platforms like YouTube, Facebook, Flickr, and Kodak Gallery sites, or for emailing. Connect the camera to your computer, and the Kodak Share button app will automatically upload your tagged pictures.

4. MAINTENANCE

4.1. Cleaning the Camera

Use a soft, lint-free cloth to clean the camera body and LCD screen. For the lens, use a specialized lens cleaning cloth and solution if necessary, avoiding abrasive materials.

4.2. Battery Care

To prolong battery life, avoid extreme temperatures. Store the battery in a cool, dry place when not in use. Recharge the battery using only the specified Kodak charger.

5. TROUBLESHOOTING

For common issues, refer to the full user guide. Ensure the battery is charged and the memory card is correctly inserted. If the camera is unresponsive, try removing and reinserting the battery.

6. SPECIFICATIONS

Feature	Specification
Photo Sensor Resolution	12 MP
Optical Zoom	3x
Screen Size	2.7 Inches
Display Type	LCD
Video Resolution	480p (VGA) at 30 FPS
Flash Memory Type	SD/SDHC card, Internal (32 MB)
Battery Type	Rechargeable Li-Ion Battery KLIC-7006
Item Weight	5.28 ounces
Connectivity Technology	USB

7. WHAT'S IN THE Box

- Kodak EasyShare M530 Digital Camera
- Kodak Rechargeable Li-Ion Battery KLIC-7006
- Kodak USB AC adapter for in-camera charging
- Wrist strap
- USB Cable
- User Guide

8. IMPORTANT INFORMATION

8.1. Legal Disclaimer

Camera has NO Flaws, therefore NO returns will be accepted.

9. PRODUCT VISUALS



Image 1: Front view of the Kodak Easyshare M530 Digital Camera in red, highlighting the lens and flash.



Image 2: Angled view of the Kodak Easyshare M530 Digital Camera in red, showing the compact design.



Image 3: Diagram illustrating the dimensions of the Kodak Easyshare M530 Digital Camera.

10. OFFICIAL PRODUCT VIDEOS

How To Use Your Kodak M530

Your browser does not support the video tag.

Video 1: A short video demonstrating the basic usage and features of the Kodak Easyshare M530 camera.

Introducing Kodak Easyshare M-Series Cameras

Your browser does not support the video tag.

Video 2: An introductory video showcasing the features and benefits of the Kodak Easyshare M-Series cameras, including

Related Documents - M530

	<p><u>M530</u></p> <p>M530</p>
	<p><u>Kodak EasyShare M530 and MD30 Digital Camera Service Manual for Minor Repairs</u></p> <p>This service manual provides detailed instructions for minor repairs of the Kodak EasyShare M530 and MD30 digital cameras. It includes sections on parts lists, diagnostics, troubleshooting, checkout procedures, and additional service procedures.</p>
	<p><u>KODAK EASYSHARE M853 Zoom Digital Camera: Features, Specifications, and Accessories</u></p> <p>Comprehensive overview of the KODAK EASYSHARE M853 Zoom Digital Camera, detailing its key features, technical specifications, package contents, system requirements, and available accessories for enhanced photography and printing.</p>
	<p><u>Kodak EasyShare M530 Control Buttons Replacement</u></p> <p>A step-by-step guide to replacing the control buttons on a Kodak EasyShare M530 digital camera, including necessary tools and parts for a successful repair.</p>
	<p><u>Kodak Easyshare C813 LCD Replacement</u></p> <p>Detailed, step-by-step repair guide from iFixit for replacing the LCD screen on a Kodak Easyshare C813 digital camera. Includes tools needed, disassembly instructions, and reassembly tips.</p>
	<p><u>Kodak EasyShare M1063 Digitalkamera Bedienungsanleitung</u></p> <p>Diese Bedienungsanleitung bietet detaillierte Anweisungen zur Installation, Bedienung und Wartung Ihrer Kodak EasyShare M1063 Digitalkamera, einschließlich Tipps zur Aufnahme, Bearbeitung und Übertragung von Bildern und Videos.</p>