

[Manuals.plus](#) /

› [KODAK](#) /

› Kodak Easyshare M530 12 MP Digital Camera with 3x Wide Angle Optical Zoom and 2.7-Inch LCD (Carbon)

KODAK M530

Kodak EasyShare M530 Digital Camera Instruction Manual

Model: M530 | Brand: KODAK

INTRODUCTION

The Kodak EasyShare M530 is a compact digital camera designed for ease of use and sharing. It features a 12-megapixel sensor, a 3x wide-angle optical zoom lens, and a 2.7-inch LCD screen. Key functionalities include Smart Capture for automatic scene detection, Face Recognition for easy organization, and a dedicated Share button for quick uploading to social media platforms and email.



Front view of the Kodak EasyShare M530 Digital Camera, showcasing its lens and sleek design.

INITIAL SETUP

Battery Installation and Charging

The Kodak EasyShare M530 uses a Kodak Rechargeable Li-Ion Battery KLIC-7006. To install, open the battery compartment cover, insert the battery with the correct orientation, and close the cover. The camera supports in-camera charging via the included USB AC adapter.



Side view of the camera, indicating the location of the USB port for charging and data transfer.

Memory Card Insertion

The camera is compatible with SD/SDHC memory cards (not included). Locate the memory card slot, typically near the battery compartment. Insert the memory card firmly until it clicks into place. Ensure the card is inserted in the correct direction to avoid damage.

Powering On/Off

To power on the camera, press and hold the power button located on the top or side of the camera. To power off, press and hold the same button until the camera shuts down.

OPERATING THE CAMERA

Taking Photos

To take a photo, frame your shot using the 2.7-inch LCD. Press the shutter button halfway down to focus, then press it completely to capture the image. The camera's Smart Capture feature automatically identifies the scene and adjusts settings for optimal results.

Using the Zoom

The camera features a 3x optical zoom. Use the zoom controls (often labeled 'W' for wide and 'T' for telephoto) to adjust the focal length and bring distant subjects closer or widen your field of view.

Reviewing Photos and Videos

Press the Review button (often indicated by a play icon) to view your captured images and videos on the LCD screen. Use the directional pad to navigate through your media.



The camera's 2.7-inch LCD displaying a captured image.

Sharing Features (Kodak Share Button)

The Kodak EasyShare M530 simplifies sharing. After capturing an image or video, press the red 'Share' button on the camera. A menu will appear allowing you to tag your media for various destinations such as YouTube, Facebook, Flickr, Kodak Gallery, or email. Once tagged, connect your camera to your computer via the USB cable, and the Kodak Share Button App will automatically upload your selected media to the chosen platforms.



The camera's LCD screen displaying the sharing options menu.

Face Recognition and Keyword Tagging

The camera features Face Recognition, allowing it to automatically recognize up to 20 pre-tagged faces and up to five faces in a single image. This aids in organizing and quickly locating photos of specific individuals. You can also add keyword tags to your photos for further organization based on events, locations, or other criteria.

Your browser does not support the video tag.

Official video demonstrating how to use the Kodak M530 camera, including basic operations and sharing features.

ADVANCED FEATURES

Smart Capture

Kodak's Smart Capture feature automatically identifies the scene and adjusts camera settings, including exposure, focus, and ISO, for clear and sharp pictures in various lighting conditions. It also reduces noise and clears dark shadows for vibrant, true-to-life colors.

HD Picture Capture

The camera is capable of capturing still images in High Definition (HD) format, allowing for viewing on HDTVs or other HD-compatible devices.

Video Recording

Record continuous VGA video (640 x 480) at 30 frames per second. Videos are captured in QUICKTIME Motion JPEG format with audio recording during capture and playback.

Kodak PERFECT TOUCH Technology

This technology, available in manual mode, enhances your pictures by making them more vivid, revealing richer details, clearing up dark shadows, and producing brighter images.

High ISO Mode

Utilize the high ISO mode (up to 1600) to capture details in low-light conditions and fast-action situations, reducing blur caused by subject movement or camera shake.

Multimedia Slideshow

Create dynamic multimedia slideshows directly on your camera, complete with pre-loaded sound themes and creative transitions.

Your browser does not support the video tag.

Official video introducing the Kodak EasyShare M-Series Cameras, highlighting their features and ease of use.

MAINTENANCE

To ensure the longevity and optimal performance of your Kodak EasyShare M530 camera, follow these maintenance guidelines:

- **Cleaning the Lens:** Use a soft, lint-free cloth specifically designed for camera lenses. Gently wipe the lens surface to remove dust or smudges. Avoid using abrasive materials or harsh chemicals.
- **Cleaning the LCD Screen:** Wipe the LCD screen with a soft, dry cloth. For stubborn smudges, a slightly dampened cloth with water can be used, followed by a dry wipe.
- **Body Cleaning:** Use a soft, dry cloth to clean the camera body. For dirt, a slightly dampened cloth can be used, but ensure no moisture enters the camera's openings.
- **Storage:** When not in use, store the camera in a cool, dry place away from direct sunlight, extreme temperatures, and high humidity. Consider using a camera case for added protection against dust and impacts.

- **Battery Care:** Remove the battery if the camera will not be used for an extended period. Store batteries in a cool, dry place.

TROUBLESHOOTING

If you encounter issues with your Kodak EasyShare M530, refer to the following common problems and their potential solutions:

Problem	Possible Cause / Solution
Camera does not power on.	Ensure the battery is fully charged and correctly inserted. The battery may need to be replaced if it no longer holds a charge.
Images are blurry.	Check for sufficient lighting. Ensure the camera is held steady during capture; use a tripod if necessary. Clean the lens. The Smart Capture feature should help optimize settings for sharpness.
Memory card error.	Reinsert the memory card. Try a different, compatible SD/SDHC card. Ensure the card is not full or corrupted.
Cannot connect to computer.	Ensure the USB cable is securely connected to both the camera and the computer. Verify that the Kodak Share Button App or appropriate drivers are installed on your computer.
Share button not working.	Ensure the camera is connected to a computer with the Kodak Share Button App running for automatic uploads. Check camera settings for sharing options.

SPECIFICATIONS

Feature	Detail
Model Name	M530
Effective Still Resolution	12 MP
Optical Zoom	3x
Screen Size	2.7 Inches
Video Resolution	VGA (640 x 480) at 30 fps
Photo Sensor Technology	CCD
Battery Type	Rechargeable Li-Ion Battery KLIC-7006
Internal Memory	32 MB
Memory Card Compatibility	SD/SDHC
Color	Carbon
Item Weight	0.33 Pounds
Model Number	8085730

WHAT'S IN THE BOX

The Kodak EasyShare M530 Digital Camera package typically includes:

- Kodak EasyShare M530 Digital Camera
- Kodak Rechargeable Li-Ion Battery KLIC-7006
- Kodak USB AC adapter for in-camera charging
- Wrist strap
- USB Cable
- User Guide (this manual)

OPTIONAL ACCESSORIES

Enhance your camera experience with these recommended accessories:

- SD/SDHC Memory Cards (4GB, 8GB, 16GB or higher, 60x speed recommended)
- Mini Tripods for stable shots
- Extra Kodak Rechargeable Li-Ion Battery KLIC-7006
- Camera Cases for protection and portability

WARRANTY AND SUPPORT

Warranty Information

This product is covered by a manufacturer's warranty. Please refer to the warranty card included in your package or visit the official Kodak website for detailed terms and conditions.

Customer Support

For further assistance, technical support, or to download the latest software and drivers, please visit the official KODAK website or contact their customer service department. You can find more information at the [KODAK Store on Amazon](#).

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question