

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [GPX](#) /

› **GPX Compact Personal CD Disc Player C3849 User Manual**

GPX C3849

GPX Compact Personal CD Disc Player C3849 User Manual

Model: C3849

INTRODUCTION

Thank you for purchasing the GPX Compact Personal CD Disc Player C3849. This device is designed for portable audio playback of standard audio CDs, CD-R, CD-RW, and MP3 CDs. For optimal performance and longevity, please read this manual thoroughly before use and retain it for future reference.

SAFETY INFORMATION

- Do not expose the unit to extreme temperatures, humidity, or direct sunlight.
- Avoid dropping or subjecting the unit to strong impacts.
- Do not attempt to disassemble or modify the unit. Refer all servicing to qualified personnel.
- Use only the specified power source (2 x AA batteries or compatible DC adapter, not included).
- Listening at high volume levels for extended periods can cause permanent hearing damage. Adjust volume to a moderate level.

PACKAGE CONTENTS

- GPX Compact Personal CD Disc Player C3849
- Deluxe Stereo Headphones
- User Manual (this document)

CONTROLS AND FEATURES

Familiarize yourself with the various controls and connections on your CD player:



Image: Back of GPX C3849 packaging, illustrating the location of controls and ports.

- 1. BATTERY COMPARTMENT:** Located on the bottom of the unit, for inserting AA batteries.
- 2. DC IN JACK:** For connecting an optional DC power adapter (not included).
- 3. HEADPHONE JACK:** 3.5mm stereo jack for connecting the included headphones.
- 4. VOLUME CONTROL:** Rotary dial to adjust the audio output level.
- 5. PLAY/PAUSE BUTTON (▶/—):** Press to start or pause playback.
- 6. STOP BUTTON (■):** Press to stop playback.
- 7. SKIP/SEARCH BUTTONS (◀◀/▶▶):** Press briefly to skip tracks. Press and hold to search within a track.
- 8. MODE BUTTON:** Cycles through playback modes (e.g., Repeat One, Repeat All, Random).

9. **PROGRAM BUTTON:** Used to program a sequence of tracks for playback.
10. **LCD DISPLAY:** Shows track number, playback status, and mode indicators.
11. **OPEN BUTTON:** Slides the CD compartment lid open.

SETUP

Powering the Device

The GPX C3849 can be powered by two (2) AA batteries (not included) or an optional DC power adapter (not included).

Battery Installation:

1. Locate the BATTERY COMPARTMENT on the bottom of the unit.
2. Open the battery compartment cover.
3. Insert two (2) AA batteries, ensuring correct polarity (+/-) as indicated inside the compartment.
4. Close the battery compartment cover securely.

Using a DC Power Adapter (Optional):

If using an optional DC power adapter, plug the adapter into the DC IN JACK on the unit and then into a standard wall outlet. Batteries will be bypassed when an adapter is connected.

Connecting Headphones

Plug the 3.5mm stereo jack of the included headphones into the HEADPHONE JACK on the side of the unit.

OPERATING INSTRUCTIONS

Loading a CD

1. Press the OPEN BUTTON to open the CD compartment lid.
2. Place a CD (audio CD, CD-R, CD-RW, or MP3 CD) onto the center spindle with the label side facing up.
3. Gently press the CD down until it clicks into place.
4. Close the CD compartment lid firmly until it latches. The LCD DISPLAY will show the total number of tracks.

Basic Playback

- **Play/Pause:** Press the PLAY/PAUSE BUTTON (►/--) to start playback. Press again to pause.
- **Stop:** Press the STOP BUTTON (■) to stop playback.
- **Skip Tracks:** During playback, press the SKIP/SEARCH BUTTONS (◀◀ / ►►) briefly to skip to the previous or next track.
- **Search:** During playback, press and hold the SKIP/SEARCH BUTTONS (◀◀ / ►►) to fast-forward or rewind within the current track.
- **Volume:** Rotate the VOLUME CONTROL dial to adjust the listening level.

Playback Modes (Repeat and Random)

Press the MODE BUTTON repeatedly to cycle through available playback modes, which may include:

- **Repeat One:** Repeats the current track.
- **Repeat All:** Repeats all tracks on the disc.
- **Random Play:** Plays tracks in a random order.

Programming Tracks (24-Track Programming)

You can program up to 24 tracks to play in a specific order:

1. With the CD stopped, press the PROGRAM BUTTON. The LCD DISPLAY will show 'P01' and the track number will flash.
2. Use the SKIP/SEARCH BUTTONS (◀◀ / ▶▶) to select the first track you wish to program.
3. Press the PROGRAM BUTTON again to confirm the selection. The display will advance to 'P02'.
4. Repeat steps 2 and 3 to add up to 24 tracks to your program.
5. After programming all desired tracks, press the PLAY/PAUSE BUTTON (▶/—) to start playback of your programmed sequence.
6. To clear the program, press the STOP BUTTON (■) twice.

MAINTENANCE

Cleaning the Unit

- Wipe the exterior of the unit with a soft, slightly damp cloth. Do not use abrasive cleaners or solvents.
- To clean the CD lens, use a specialized CD lens cleaning kit. Do not touch the lens directly.

Battery Care

- Remove batteries if the unit will not be used for an extended period to prevent leakage.
- Dispose of used batteries responsibly according to local regulations.

TROUBLESHOOTING

Problem	Possible Cause	Solution
No power	Batteries are dead or incorrectly inserted; DC adapter not connected or faulty.	Replace batteries, check polarity; ensure DC adapter is securely connected and functional.
No sound	Headphones not connected; volume too low; headphones faulty.	Ensure headphones are fully plugged in; increase volume; test with different headphones.
CD skipping or not playing	CD is dirty, scratched, or inserted incorrectly; unit is subject to vibration.	Clean the CD with a soft cloth; ensure CD is correctly seated; place unit on a stable surface.
Display shows 'no disc'	No CD inserted; CD inserted upside down; CD is unreadable.	Insert a CD; ensure CD is label-side up; try a different CD.

SPECIFICATIONS

- **Brand:** GPX
- **Model:** C3849
- **Supported Disc Formats:** CD, CD-R, CD-RW, MP3 CD
- **Power Source:** 2 x 'AA' size batteries (not included) or DC 4.5V power adapter (not included)
- **Headphone Jack:** 3.5mm stereo auxiliary

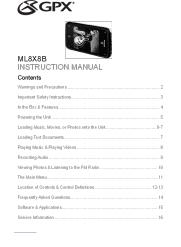
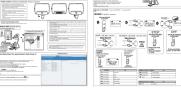
- **Playback Features:** 24-track programmable memory, Random play, Repeat play
- **Dimensions (approx.):** 15.24 x 15.24 x 5.08 cm (6 x 6 x 2 inches)
- **Weight (approx.):** 340 g (0.75 lbs)

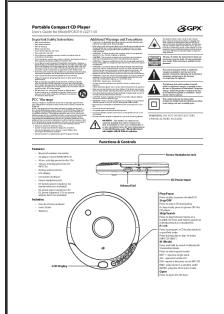
WARRANTY AND SUPPORT

For warranty information or technical support, please refer to the documentation included with your purchase or visit the official GPX website. Keep your proof of purchase for warranty claims.

© GPX, Inc. All rights reserved.

Related Documents - C3849

	<p>GPX PC800 Personal CD/MP3 Player User Guide</p> <p>User guide for the GPX PC800 Personal CD/MP3 Player with Skip Protection, detailing features, operation, safety, and troubleshooting.</p>
	<p>GPX ML8X8B Instruction Manual - Portable Media Player Guide</p> <p>Comprehensive instruction manual for the GPX ML8X8B portable media player. Learn how to power on, load media, play music and videos, record audio, use the FM radio, navigate menus, and troubleshoot common issues.</p>
	<p>GPX MWB308 Bluetooth MP3 Player User's Guide</p> <p>Comprehensive user's guide for the GPX MWB308 Bluetooth MP3 Player, detailing features, operation, controls, charging, music management, Bluetooth connectivity, radio functions, recording capabilities, e-book reader, and settings. Includes FCC warnings and additional safety information.</p>
	<p>GPX MW3836 Portable MP3/WMA Player Instruction Manual</p> <p>User manual for the GPX MW3836 portable digital audio player. Learn how to connect, download music, operate playback features, troubleshoot issues, and understand safety precautions.</p>
	<p>GPX ML658B Portable Media Player Instruction Manual</p> <p>User manual for the GPX ML658B portable digital video and MP3 player, covering features, operation, safety instructions, and troubleshooting.</p>



[GPX PCB319 Portable Compact CD Player User's Guide](#)

Comprehensive user guide for the GPX PCB319 portable compact CD player. Learn about safety precautions, device features, controls, power options, CD playback, programming, and Bluetooth connectivity.