



Manuals.plus /

› Playskool /

› Playskool 2-in-1 Firefly Mobile User Manual

Playskool 13931480

Playskool 2-in-1 Firefly Mobile User Manual

Model: 13931480

IMPORTANT SAFETY INFORMATION

WARNING:

This product is not suitable for children under 3 years of age. Always supervise infants when using this product. Ensure all components are securely fastened before use. Keep small parts away from children to prevent choking hazards. Do not modify the product.

Recommended for ages: From birth to 5 months (as a mobile). Discontinue mobile use when the infant begins to push up on hands and knees or reaches 5 months of age, whichever comes first. The base unit can then be used as a crib-side soother/nightlight.

PRODUCT OVERVIEW

The Playskool 2-in-1 Firefly Mobile is designed to soothe and entertain your baby. It functions as both a crib mobile with twinkling lights and music, and a standalone crib-side soother/nightlight. The mobile features soft, plush characters and gentle melodies to help develop eye tracking and promote relaxation.



Image: The Playskool 2-in-1 Firefly Mobile, showcasing its full assembly with a green arm, white base, and three hanging plush characters designed to engage infants.

PACKAGE CONTENTS

- Mobile Arm and Attachment Clamp
- Base Unit (Music and Light Projector)
- 3 Hanging Plush Characters

- Instruction Manual (this document)



Image: The product packaging for the Playskool 2-in-1 Firefly Mobile, illustrating the mobile attached to a crib and detailing key features such as twinkling lights, three music modes, and recommended age range.

SETUP AND ASSEMBLY

1. Battery Installation

1. Locate the battery compartment on the underside of the base unit.
2. Using a Phillips head screwdriver, open the battery compartment cover.
3. Insert 3 "C" size alkaline batteries, ensuring correct polarity (+/-).
4. Replace the cover and secure with the screw.

2. Mobile Assembly

1. Attach the mobile arm to the base unit by aligning the connectors and pushing firmly until it clicks into place.
2. Hang the three plush characters from the designated hooks on the mobile arm.

3. Attaching to Crib

1. Securely attach the mobile's clamp to the side rail of the crib. Ensure the clamp is tightened firmly and the mobile is stable.
2. Position the mobile so that the characters are at an appropriate distance from the baby, out of reach.

OPERATING INSTRUCTIONS

The base unit features several buttons to control the mobile's functions.



Image: A detailed view of the Playskool 2-in-1 Firefly Mobile's base unit, highlighting the control buttons for music selection, light projection, and volume adjustment.

- **Power Button:** Press to turn the unit on or off.
- **Music Mode Button (Musical Note Icon):** Press to cycle through 3 music modes: Lullaby, Classical, and Nature Sounds.
- **Light Projection Button (Lightbulb Icon):** Activates or deactivates the twinkling light projection feature.
- **Volume Control Button (Speaker Icon):** Adjusts the sound volume (adjustable volume).

2-in-1 Functionality:

When your child outgrows the mobile function (typically around 5 months or when they can push up on hands and knees), the mobile arm can be detached. The base unit can then be placed on a bedside table or crib rail to function as a soothing nightlight and music player.

MAINTENANCE AND CARE

- **Cleaning:** Wipe the mobile and base unit with a damp cloth. Do not immerse in water.
- **Battery Replacement:** Replace batteries when sounds become distorted or lights dim. Always use fresh "C" size alkaline batteries.
- **Storage:** Store in a cool, dry place away from direct sunlight when not in use for extended periods.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Mobile does not turn on.	Dead or incorrectly installed batteries.	Check battery polarity; replace with new "C" batteries.
Lights are dim or music is distorted.	Low battery power.	Replace all batteries with new "C" batteries.
Mobile arm is wobbly.	Not securely attached to crib or base unit.	Ensure clamp is tightened and arm is fully clicked into base.

SPECIFICATIONS

- **Model Number:** 13931480 (also 01393)
- **Brand:** Playskool
- **Material:** Plastic
- **Power Source:** 3 x "C" size alkaline batteries (not included)
- **Dimensions (packaged):** Approximately 46.4 x 33.2 x 10.6 cm (18.3 x 13.1 x 4.2 inches)
- **Weight (packaged):** Approximately 2.22 kg (4.9 lbs)
- **Recommended Age:** From birth to 5 months (mobile function)

WARRANTY AND SUPPORT

This product comes with a **2-year supplier warranty**. Please retain your proof of purchase for warranty claims.

For further assistance or inquiries, please contact Playskool customer support through their official website or the retailer where the product was purchased. You can find more information at

DISPOSAL INFORMATION

Please dispose of batteries and the product responsibly according to local regulations. Do not dispose of batteries in household waste.