

Bosch 0600885B00

Bosch Rotak 32 Electric Lawn Mower User Manual

Model: 0600885B00

1. INTRODUCTION

Thank you for choosing the Bosch Rotak 32 Electric Lawn Mower. This manual provides important information regarding the safe operation, assembly, maintenance, and troubleshooting of your new lawn mower. Please read these instructions carefully before using the appliance and keep them for future reference.

The Bosch Rotak 32 is an electric lawn mower designed for efficient grass cutting in small to medium-sized gardens. It features a powerful 1200W motor and a 31-liter grass collection box, which helps reduce the frequency of emptying during operation. Its lightweight design and integrated carry handle make it easy to maneuver and transport.

2. SAFETY INSTRUCTIONS

Always observe basic safety precautions to reduce the risk of fire, electric shock, and personal injury. Familiarize yourself with the controls and proper use of the appliance.

- **Read the entire manual:** Understand all instructions before operating the lawn mower.
- **Wear appropriate attire:** Always wear sturdy footwear and long trousers. Do not operate the mower barefoot or in open sandals.
- **Keep children and bystanders away:** Ensure that other people, especially children and pets, remain at a safe distance from the operating area.
- **Inspect the area:** Before mowing, remove any objects that could be thrown by the blade, such as stones, sticks, wires, or bones.
- **Check for damage:** Before each use, inspect the power cord for damage. If damaged, have it replaced by a qualified professional.
- **Avoid wet grass:** Do not mow in the rain or when the grass is wet.
- **Maintain a firm footing:** Always be sure of your footing on slopes. Mow across the face of slopes, never up and down.

- **Disconnect power:** Always disconnect the power supply before cleaning, adjusting, or if the cable is cut or damaged.
- **Use only genuine parts:** For repairs and maintenance, use only original replacement parts and accessories.

3. PACKAGE CONTENTS

Upon unpacking, ensure all items are present and undamaged. The package should contain:

- Bosch Rotak 32 Electric Lawn Mower unit
- Grass collection box (components for assembly)
- Handle assembly
- User Manual

If any parts are missing or damaged, contact your retailer or Bosch customer service.

4. SETUP

The Bosch Rotak 32 lawn mower requires minimal assembly before first use. Follow these steps:

4.1. Handle Assembly

Attach the handle to the main mower unit. This typically involves securing it with four screws. Ensure the handle is firmly attached and all locking mechanisms are engaged.

4.2. Grass Box Assembly

Assemble the grass collection box according to the diagrams provided in the separate assembly sheet (if applicable). Once assembled, securely attach the grass box to the rear of the mower unit.



Figure 1: The Bosch Rotak 32 electric lawn mower is lightweight and easy to carry.

5. OPERATING

Before starting, ensure the mower is properly assembled and the area is clear of debris. Connect the mower to a suitable power outlet using an appropriate extension cord if necessary.

5.1. Adjusting Cutting Height

The Bosch Rotak 32 offers adjustable cutting heights. The cutting height can be set to 20 mm, 40 mm, or 60 mm. Refer to the mower's chassis for the height adjustment mechanism, typically a lever or axle adjustment system. Select the desired height before starting the mower.

5.2. Starting and Stopping

- **To Start:** Press and hold the safety button, then pull the switch lever towards the handle.
- **To Stop:** Release the switch lever. The blade will stop rotating within a few seconds.

5.3. Mowing Technique

Push the mower at a steady pace. Overlapping each pass slightly ensures an even cut. For best results, mow when the grass is dry. The 32 cm cutting width allows for efficient coverage.

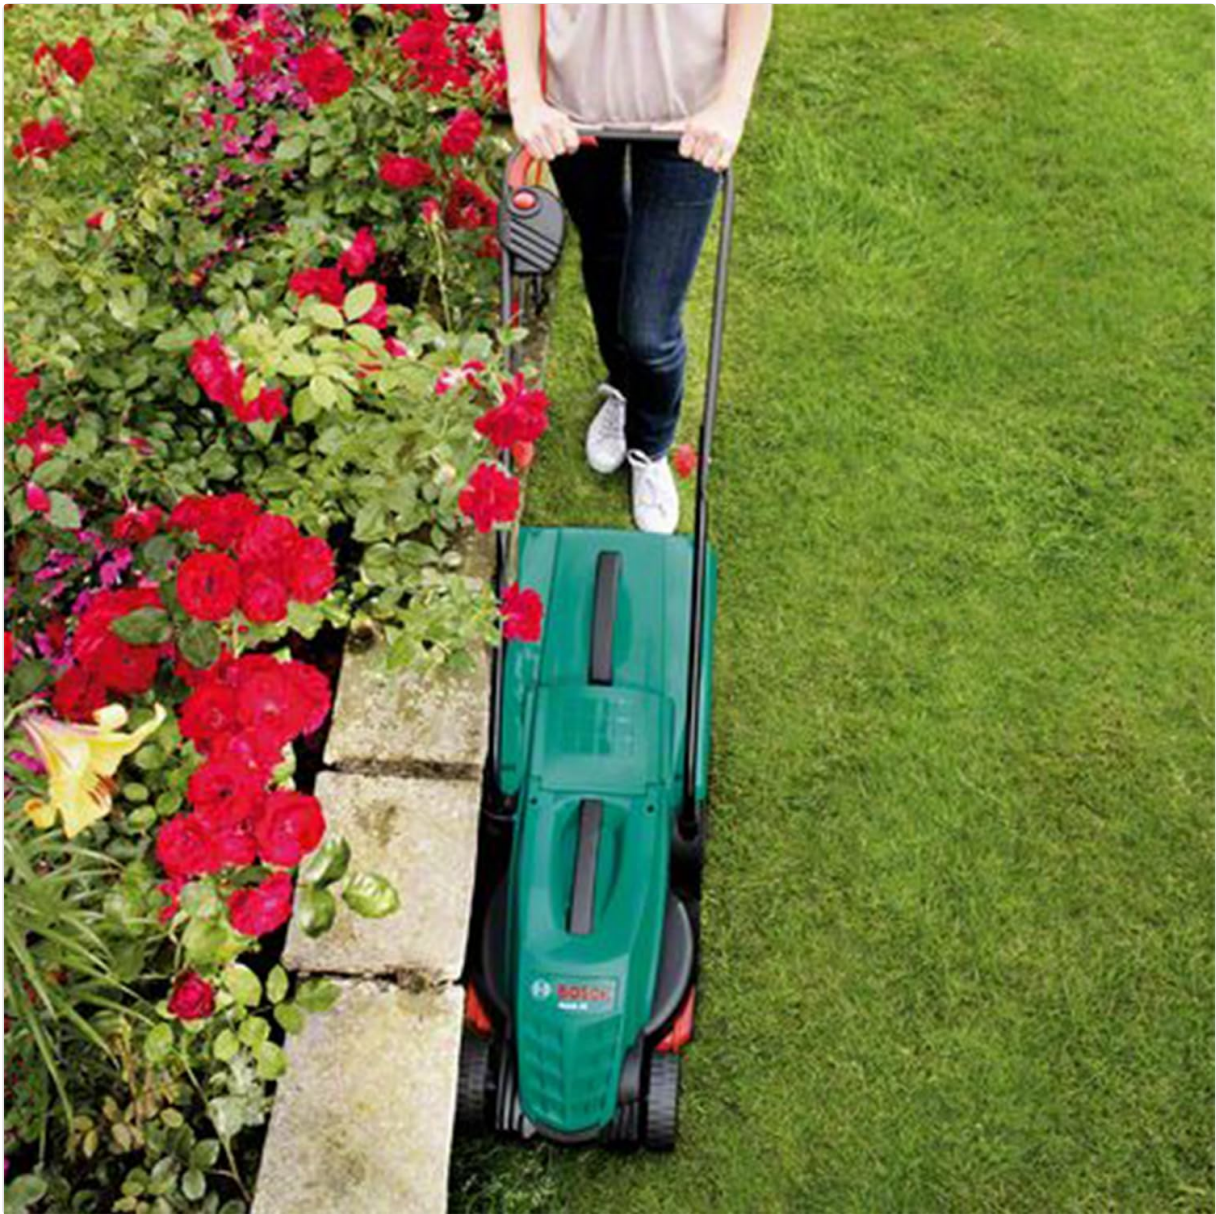


Figure 2: Overhead view of the mower in operation.



Figure 3: User operating the Bosch Rotak 32 lawn mower.

6. MAINTENANCE

Regular maintenance ensures the longevity and optimal performance of your lawn mower.

- **Cleaning:** After each use, disconnect the power and clean the mower. Remove grass clippings from the underside of the deck, the grass box, and the air vents. Use a brush or cloth; do not use water directly on electrical components.
- **Blade Inspection:** Regularly check the blade for sharpness and damage. A dull or damaged blade can affect cutting performance and mower balance. Replace the blade if necessary.
- **Storage:** Store the mower in a dry, secure place, out of reach of children. The handle can often be folded for compact storage.

7. TROUBLESHOOTING

If you encounter issues with your lawn mower, refer to the following common problems and solutions:

Problem	Possible Cause	Solution
---------	----------------	----------

Problem	Possible Cause	Solution
Mower does not start	No power supply; Safety switch not engaged; Overload protection activated	Check power connection; Engage safety switch and lever; Allow motor to cool down
Poor cutting performance	Dull or damaged blade; Cutting height too low for grass type; Grass box full	Sharpen or replace blade; Adjust cutting height; Empty grass box
Excessive vibration	Damaged or unbalanced blade; Loose components	Inspect and replace blade if necessary; Check all fasteners for tightness

If the problem persists after attempting these solutions, contact Bosch customer service.

8. SPECIFICATIONS

Feature	Detail
Brand	Bosch
Model Number	0600885B00
Power Source	Corded Electric
Motor Power	1200 Watts
Cutting Width	32 cm
Cutting Height Adjustment	6 cm to 7 cm (4 positions)
Grass Box Capacity	31 Liters
Product Dimensions (D x W x H)	39.5 cm x 28 cm x 60 cm
Item Weight	6.3 kg (approx. 13.89 lbs)
Material	Plastic
Color	Green
Assembly Required	No (referring to major assembly, minor setup required)
Operation Mode	Manual Push

9. WARRANTY AND SUPPORT

9.1. Warranty Information

This product carries a manufacturer's warranty for 1 year from the date of purchase. For warranty claims or service, please retain your proof of purchase.

9.2. Customer Support

For technical assistance, spare parts, or further information, you can contact the manufacturer's authorized service center or your retailer. You may also visit the official Bosch website for support resources.

