

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [Livex Lighting](#) /

› [Livex Lighting 2161-02 Outdoor Wall Lantern Instruction Manual](#)

Livex Lighting 2161-02

Livex Lighting 2161-02 Outdoor Wall Lantern Instruction Manual

Model: 2161-02

IMPORTANT SAFETY INFORMATION

Please read these instructions carefully before installing or operating your Livex Lighting 2161-02 Outdoor Wall Lantern. Retain this manual for future reference.

WARNING! SHUT POWER OFF AT FUSE OR CIRCUIT BREAKER.

This product must be installed in accordance with the applicable installation code by a person familiar with the construction and operation of the product and the hazards involved. All electrical connections must be in accordance with local and National Electrical Code (NEC) standards. If you are unsure about any part of the installation, consult a qualified electrician.

Proposition 65 Warning: This product may contain chemicals known to the State of California to cause cancer, birth defects, or other reproductive harm.

PRODUCT OVERVIEW

The Livex Lighting 2161-02 is a traditional outdoor wall lantern designed to provide illumination and enhance the aesthetic of your outdoor spaces. It features a polished brass finish and clear beveled glass shades, offering a classic and durable lighting solution.



Image: The Livex Lighting 2161-02 Outdoor Wall Lantern, showcasing its polished brass finish and clear beveled glass panels.

PACKAGE CONTENTS

Verify that all components are present before beginning installation:

- Fixture body with pre-assembled wiring
- Crossbar
- Mounting screws
- Wire nuts
- Glass shades (pre-installed or separate)
- Candle sleeve (if applicable)
- Hex nuts

SETUP AND INSTALLATION

Before starting, ensure the power is turned off at the circuit breaker or fuse box to prevent electrical shock.

Mounting the Fixture

1. Shut off the power at the circuit breaker and remove any old fixture, including the crossbar.
2. Carefully unpack the new fixture and lay out all parts on a clean, clear surface. Take care not to lose any small parts necessary for installation.
3. Attach the mounting screw part way into the side hole of the crossbar. Then, lock it securely with a hex nut until becoming tight. Attach the crossbar to the junction box using two box screws. The side of the crossbar marked "GND" must face out.
4. Follow wiring instructions carefully (see 'Wiring' section below).
5. Attach the back plate of the lamp body (A) onto the junction box, aligning the screws on the crossbar with the mounting holes and locking it securely with the ball nuts (C). Place the candle sleeve (B) over the lamp holder.
6. Install the light bulbs in accordance with the fixture's specifications.**DO NOT EXCEED THE MAXIMUM WATTAGE RATING!**
7. With silicone caulking compound, caulk completely around the back of the cover to prevent water from seeping into the outlet box.

Image: Figure 1 - An exploded diagram illustrating the components and assembly sequence for mounting the outdoor wall lantern, including the junction box, supply wire, hex nut, mounting screw, supply ground wire, crossbar, box screw, fixture ground wire, fixture wire, and the main fixture body (A) with candle sleeve (B).

Wiring

1. Connect the electrical wires as follows: Connect the black wire from the fixture to the black (hot) wire from the house. Connect the white wire from the fixture to the white (neutral) wire from the house. Make sure all wire nuts are secured.
2. You may wrap the connections with electrical tape. If your outlet box has a ground wire (green or bare copper), connect the fixture's ground wire to it. Otherwise, attach the bare copper fixture wire to the green ground screw on the crossbar.
3. Tuck the wire connections neatly into the wall junction box.

Image: Figure 2 - A diagram showing standard wiring connections for a light fixture, illustrating how fixture wires (black, white, and ground) connect to house wires (black, white, and ground/bare copper) using wire nuts.

OPERATING INSTRUCTIONS

Once installed, restore power at the circuit breaker. The Livex Lighting 2161-02 Outdoor Wall Lantern operates with a standard wall switch (not included). If connected to a compatible dimmer switch, the light output can be adjusted. This fixture is designed for incandescent bulbs and is dimmable with appropriate dimming controls.

MAINTENANCE

Cleaning

To maintain the finish and appearance of your fixture, clean it regularly with a soft, dry cloth. Avoid using abrasive cleaners, solvents, or polishes as they may damage the finish. For glass panels, use a mild glass cleaner applied to a cloth, not directly to the fixture.

Bulb Replacement

Always turn off the power at the circuit breaker before replacing bulbs. Allow bulbs to cool completely before touching them. Use only bulbs that meet the specified wattage and type (E26 base, up to 100 watts incandescent). Exceeding the maximum wattage can cause overheating and damage to the fixture.

TROUBLESHOOTING

- **Light does not turn on:**
 - Check if the power is on at the circuit breaker.
 - Ensure the bulb is securely screwed into the socket and is not burnt out.
 - Verify all wire connections are secure and correctly made.
- **Light flickers:**
 - Ensure the bulb is fully tightened.
 - Check for loose wire connections.
 - If using a dimmer, ensure it is compatible with incandescent bulbs and the bulb itself is dimmable.
- **Glass panels are loose:**
 - Carefully inspect the fixture for any retaining clips or screws that may need tightening.

SPECIFICATIONS

Brand	Livex Lighting
Model Number	2161-02
Material	Brass
Finish	Polished Brass
Shade Material	Clear Beveled Glass

Product Dimensions	8.25" L x 8.25" W x 15" H
Item Weight	3.65 pounds
Voltage	120 Volts
Wattage	100 watts (Max)
Bulb Base	E26
Indoor/Outdoor Usage	Outdoor
Special Feature	Dimmable
Water Resistance Level	Water Resistant

WARRANTY INFORMATION

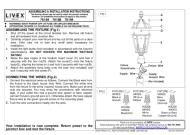
This Livex Lighting fixture comes with a 1-year manufacturer's warranty from the date of purchase. This warranty covers defects in materials and workmanship under normal use. Please retain your proof of purchase for warranty claims. For specific warranty details and limitations, please contact Livex Lighting customer service.

SUPPORT

For further assistance, technical support, or to inquire about replacement parts, please visit the official Livex Lighting store or contact their customer service department.

Livex Lighting Store: [Livex Lighting on Amazon](#)

Related Documents - 2161-02

	<p>Livex Lighting Fixture Installation Instructions: Models 76184, 76188, 76194</p> <p>Step-by-step assembly and wiring instructions for Livex Lighting outdoor post top lanterns, models 76184, 76188, and 76194. Includes safety warnings and diagram descriptions.</p>
	<p>Livex Lighting PFAS Compliance Declaration</p> <p>Official declaration from Livex Lighting, Inc. confirming adherence to state and federal regulations concerning PFAS in all supplied lighting products, with a commitment to transparency regarding product composition.</p>
	<p>Livex Lighting Inc. Declaration of PFAS Compliance</p> <p>Livex Lighting Inc. declares compliance with PFAS regulations, confirming that PFAS are not intentionally added to their AVIANCE lighting products and outlining notification procedures for future changes.</p>

Documents - Livex Lighting – 2161-02

no relevant documents