

EPOCH KTEC-cAGGT-ds-1106337

Epoch Doraemon Darake Balance Game

Instruction Manual

Brand: EPOCH | Model: KTEC-cAGGT-ds-1106337

1. INTRODUCTION

The Epoch Doraemon Darake Balance Game is an engaging and fun balance game featuring multiple Doraemon figures. The objective is to carefully stack the figures using chopsticks onto a wobbly time machine base or in various other configurations without causing them to fall. This game is designed to challenge your dexterity and precision, offering entertainment for both children and adults.

2. WHAT'S IN THE BOX

Before you begin, please ensure all components are present:

- Doraemon Figures (various poses)
- Mini-Dora Figure
- Wobbly Time Machine Base
- Chopsticks (1 pair)



Image: All game components laid out.

3. SETUP

To set up the game for basic play:

1. Place the wobbly Time Machine Base on a flat, stable surface such as a table or floor.
2. Ensure you have enough space around the base for comfortable play and to retrieve any fallen figures.
3. Keep the Doraemon figures and chopsticks within easy reach.



Image: Front of the product box.

4. OPERATING INSTRUCTIONS

4.1. Basic Gameplay (Time Machine Balance Game)

The primary mode of play involves stacking Doraemon figures onto the wobbly time machine base.

1. Players take turns. On your turn, use the provided chopsticks to pick up one Doraemon figure.
2. Carefully place the Doraemon figure onto the Time Machine Base or on top of previously placed figures. The goal is to maintain the balance of the stack.
3. Continue taking turns. The game ends when a player causes any Doraemon figures to fall from the stack or the base.
4. The last player to successfully place a figure without anything falling wins the round. For a final challenge, the Mini-Dora figure can be placed on top of the completed stack for victory.



Image: Using chopsticks to pick up a Doraemon figure.

4.2. Various Play Options

Beyond the basic time machine balance game, you can explore other stacking challenges:

- **Doraemon Stacking:** Stack Doraemon figures directly on a flat surface to create a tall, vertical tower.



Image: Example of a tall Doraemon stack.


- **Doraemon Pyramid:** Arrange the figures in a pyramid shape, starting with a wide base and narrowing towards the

top.



Image: Example of a Doraemon pyramid stack.

- **Mini-Dora Victory:** In any stacking game, the Mini-Dora figure can be designated as the final piece to be placed. Successfully placing it without collapse signifies victory.

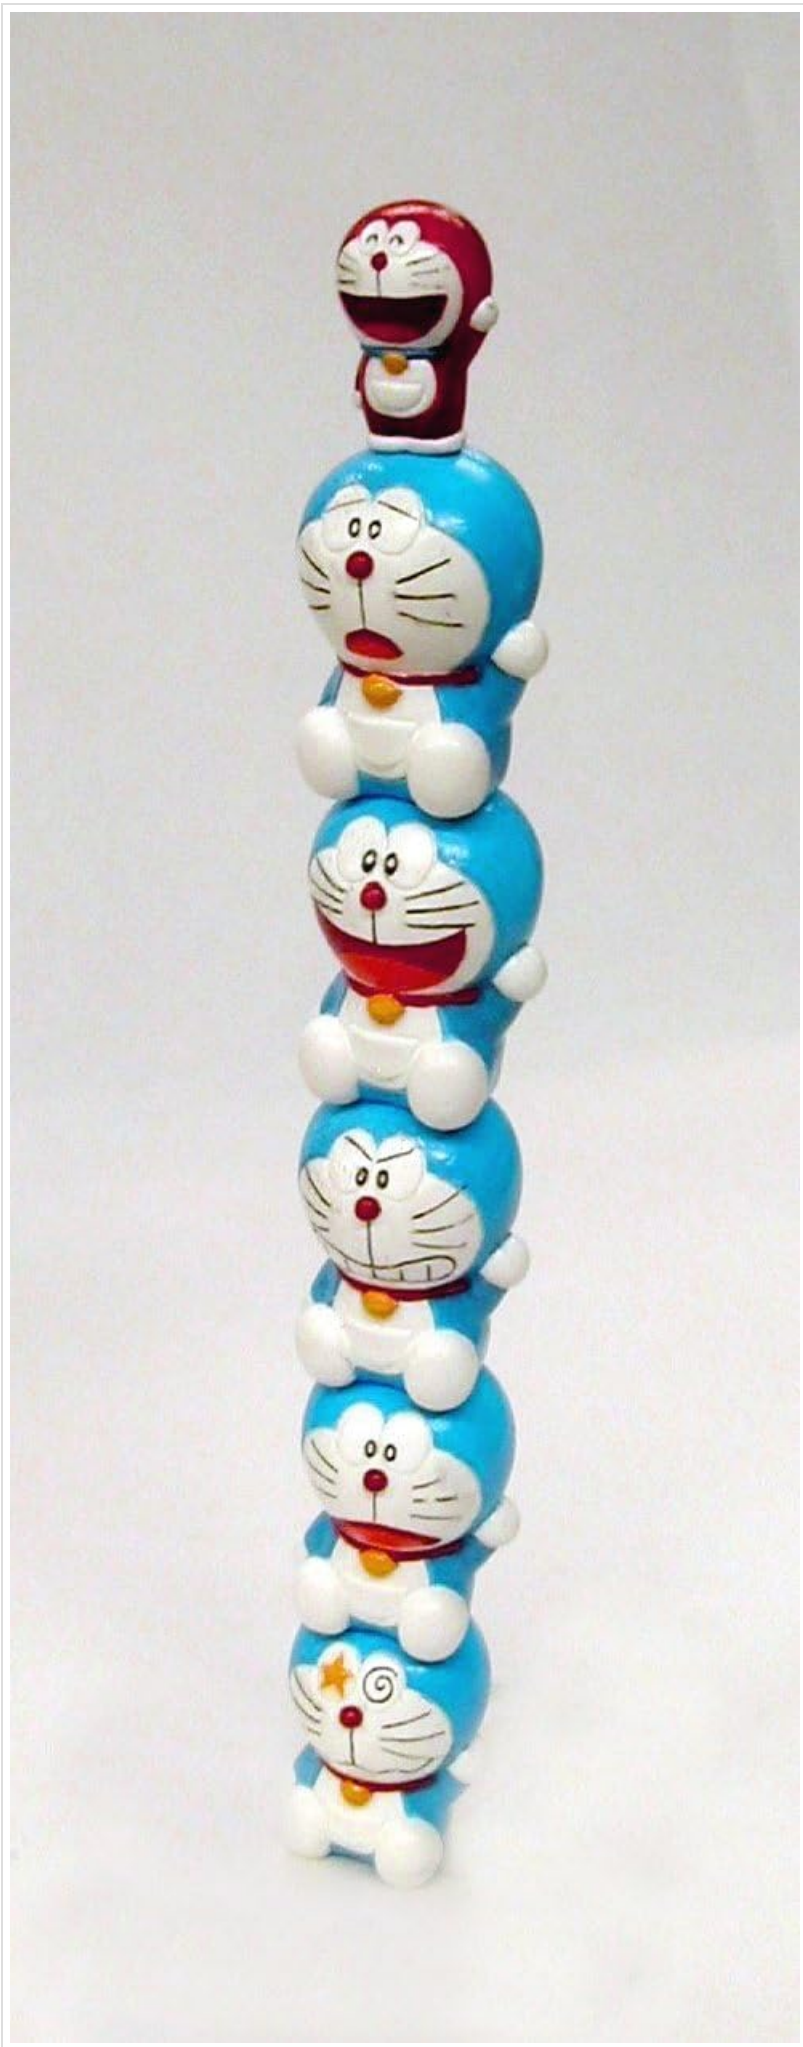

Experiment with different stacking methods and challenges to enhance your gameplay experience.



Image: Back of the product box illustrating various play options.

5. MAINTENANCE

To ensure the longevity of your Doraemon Darake Balance Game:

- **Cleaning:** Wipe figures and the base with a soft, dry cloth. Avoid using harsh chemicals or abrasive cleaners.
- **Storage:** Store all components in their original box or a suitable container in a cool, dry place away from direct sunlight and extreme temperatures.
- **Handling:** Handle the figures and chopsticks with care to prevent damage.

6. TROUBLESHOOTING

This game is mechanical and typically requires minimal troubleshooting. If you encounter issues:

- **Figures not balancing:** Ensure the playing surface is completely flat and stable. Practice your chopstick technique.

- **Missing parts:** Refer to the "What's in the Box" section. If parts are missing upon purchase, contact your retailer or the manufacturer.

7. SPECIFICATIONS

Feature	Detail
Product Dimensions	8.78 x 6.93 x 2.2 inches
Item Weight	8.1 ounces
Item Model Number	KTEC-cAGGT-ds-1106337
Manufacturer Recommended Age	18 years and up
UPC/EAN	4905040013408
Manufacturer	d'o'n'b'g@'b'nDC'k's'cD



Image: Product box dimensions shown in hand.

8. SAFETY INFORMATION

WARNING: CHOKING HAZARD - Small Parts. Not for children under 3 years. This product contains small parts which may pose a choking hazard if swallowed. Adult supervision is recommended during play, especially with younger children who may be present.

Please adhere to the manufacturer's recommended age of 18 years and up for optimal enjoyment and safety.

9. WARRANTY AND SUPPORT

For any questions regarding product defects, missing parts, or general inquiries, please contact the retailer where you purchased the game or the manufacturer directly. Please retain your proof of purchase for any warranty claims.
Manufacturer: d'o'n'b'g@'b'nDC'k's'cD
For more information about EPOCH products, you may visit the[EPOCH Store on Amazon](#).

© 2025 EPOCH. All rights reserved. Doraemon is a registered trademark.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question