

[Manuals.plus](#) /

› [Transcend](#) /

› Transcend 2GB SD Memory Card User Manual

Transcend Powershot SD10-2PKSD2GB

Transcend 2GB SD Memory Card User Manual

Model: Powershot SD10-2PKSD2GB

INTRODUCTION

This manual provides comprehensive instructions for the proper use, installation, and maintenance of your Transcend 2GB SD Memory Card. Designed for reliable data storage, this card is compatible with a wide range of digital devices, primarily cameras. Please read this manual thoroughly before use to ensure optimal performance and longevity of your memory card.

SETUP AND INSTALLATION

The Transcend 2GB SD Memory Card is designed for easy plug-and-play functionality. Follow these steps to install the card into a compatible device:

1. **Locate the SD Card Slot:** Identify the memory card slot on your device (e.g., digital camera, camcorder, card reader). Refer to your device's user manual if you are unsure of the slot location.
2. **Orient the Card:** Hold the SD card with the metal contacts facing towards the device and the beveled corner aligned with the slot. Do not force the card.
3. **Insert the Card:** Gently push the SD card into the slot until it clicks into place. Some devices may have a spring-loaded mechanism.
4. **Format (Optional but Recommended):** For first-time use or if experiencing issues, it is recommended to format the card using your device's internal formatting function. This ensures compatibility and optimizes performance.

Warning: Formatting will erase all data on the card. Back up any important files before proceeding.



Figure 1: Two Transcend 2GB SD memory cards. Each card is blue with a vibrant, rainbow-colored label that transitions from green to red to orange. The label prominently displays "Transcend" at the top, a small "LOCK" switch indicator, the "SD" logo, and "2GB" indicating its storage capacity. These cards are standard Secure Digital (SD) format, commonly used in digital cameras and other portable electronic devices for data storage.

OPERATING INSTRUCTIONS

Once installed, your Transcend SD card functions as a primary storage medium for your compatible device. Here are general operating guidelines:

- **Saving Data:** When using with a digital camera, photos and videos will automatically save to the SD card once it is inserted and recognized. For other devices, follow the device's specific instructions for saving files to external storage.
- **Accessing Data:** To access files, connect your device to a computer, or insert the SD card into a compatible card reader connected to a computer. The card will typically appear as a removable drive.
- **Deleting Data:** Files can be deleted directly from the card using your device's menu options or by connecting the card to a computer and deleting files through the operating system.
- **Write Protection (Lock Switch):** The small switch on the side of the SD card can be moved to the "LOCK" position to prevent accidental deletion or modification of data. To write new data or delete existing data, ensure the switch is in the "UNLOCKED" position.

MAINTENANCE AND CARE

Proper care extends the life and reliability of your Transcend SD card:

- **Handle with Care:** Avoid bending, dropping, or subjecting the card to excessive force.
- **Keep Contacts Clean:** Do not touch the metal contacts. If necessary, gently wipe them with a clean, dry, lint-free cloth.
- **Storage:** Store the card in a protective case when not in use to prevent dust, dirt, and static damage.
- **Temperature and Humidity:** Avoid exposing the card to extreme temperatures, direct sunlight, or high humidity.
- **Safe Removal:** Always safely eject the card from your computer or device before physically removing it to prevent

data corruption.

TROUBLESHOOTING

If you encounter issues with your Transcend SD card, consider the following common solutions:

- **Card Not Recognized:**
 - Ensure the card is fully inserted into the slot.
 - Check the write-protection (lock) switch; it should be in the "UNLOCKED" position.
 - Try the card in another compatible device or card reader to rule out a device issue.
 - Clean the metal contacts gently.
- **Cannot Write/Delete Files:**
 - Verify the write-protection (lock) switch is in the "UNLOCKED" position.
 - Check if the card is full. Delete unnecessary files or transfer them to another storage device.
- **Data Corruption/Errors:**
 - Avoid removing the card during data transfer or when the device is actively writing to it.
 - If possible, back up data and then format the card using your device's formatting function.
 - Run a disk check utility on a computer if the card is accessible.

If problems persist, contact Transcend customer support for further assistance.

SPECIFICATIONS

Feature	Detail
Brand	Transcend
Model Number	Powershot SD10-2PKSD2GB
Flash Memory Type	SD (Secure Digital)
Memory Storage Capacity	2 GB
Hardware Interface	Secure Digital Card
Compatible Devices	Camera (and other devices supporting SD cards)
Special Feature	Lightweight
Item Weight	0.75 Pounds (approx. 0.34 kg)

WARRANTY INFORMATION

This Transcend SD Memory Card comes with a **Lifetime Warranty**. This warranty covers defects in materials and workmanship under normal use. For detailed terms and conditions, and to initiate a warranty claim, please refer to the official Transcend website or contact their customer support.

SUPPORT

For technical assistance, product inquiries, or warranty claims, please visit the official Transcend support website or contact their customer service department. Contact information can typically be found on the Transcend website or product packaging.

Transcend Official Website: www.transcend-info.com

© 2024 Transcend. All rights reserved. Information in this manual is subject to change without notice.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

<https://manuals.plus/asin/B0033ZD542>

More documents and user manuals: **<https://manuals.plus/>**