

[manuals.plus](#) /› [Panasonic](#) /› [Panasonic KX-A36A Cordless Phone Replacement Battery \(Model 22465-UL124\) Instruction Manual](#)

Panasonic 22465-UL124

Panasonic KX-A36A Cordless Phone Replacement Battery (Model 22465-UL124) Instruction Manual

1. INTRODUCTION

This manual provides essential information for the safe and effective use of your new replacement battery for Panasonic KX-A36A series cordless phones. This battery, model 22465-UL124, is designed to restore power and functionality to your compatible cordless telephone. Please read these instructions carefully before installation and use.

2. SETUP AND INSTALLATION

2.1 Safety Precautions

- Use only the specified charger for your cordless phone.
- Do not short-circuit the battery terminals.
- Do not expose the battery to extreme temperatures, direct sunlight, or fire.
- Keep the battery out of reach of children.
- If the battery leaks, avoid contact with skin and eyes. Rinse thoroughly with water and seek medical attention if irritation persists.
- Dispose of old batteries according to local regulations.

2.2 Battery Installation Steps

Follow these steps to correctly install the replacement battery into your Panasonic KX-A36A compatible cordless phone:

1. **Disconnect Power:** Ensure your cordless phone handset is turned off and disconnected from its charging base.
2. **Locate Battery Compartment:** Turn the handset over and locate the battery compartment cover, usually on the back.
3. **Remove Cover:** Slide or unclip the battery compartment cover to open it. You may need a small screwdriver for some models.
4. **Remove Old Battery:** Carefully disconnect the old battery's connector from the handset's socket. Remove the old battery.
5. **Insert New Battery:** Take the new replacement battery (Model 22465-UL124). Align the battery connector

with the socket inside the handset and firmly plug it in. Ensure the polarity is correct (the connector usually prevents incorrect insertion).

6. **Position Battery:** Place the new battery neatly into the compartment. Do not force it if it doesn't fit; ensure no wires are pinched.
7. **Replace Cover:** Securely close the battery compartment cover.
8. **Initial Charge:** Place the handset on its charging base for the initial charge as described in the Operating Instructions section.



Image: The Panasonic KX-A36A compatible replacement battery, model 22465-UL124. This image shows the battery pack with its connector, ready for installation into a cordless phone handset.

3. OPERATING INSTRUCTIONS

3.1 Initial Charge

After installing the new battery, it is crucial to perform an initial charge. Place the handset on its charging base for a continuous period of **12 to 15 hours**, even if the phone indicates a full charge sooner. This ensures the battery reaches its full capacity and optimizes its lifespan.

3.2 Regular Charging

For daily use, return the handset to its charging base when not in use. The battery is designed to be continuously charged without damage. If the phone will not be used for an extended period (e.g., several weeks), it is advisable to fully charge the battery, then remove it from the handset, and store it in a cool, dry place. Recharge it every few months to prevent deep discharge.

4. MAINTENANCE AND CARE

- **Avoid Deep Discharge:** While Ni-CD batteries can tolerate deep discharge, frequent deep discharge can reduce overall battery life. Try to recharge before the battery is completely depleted.
- **Temperature:** Store and operate the battery within recommended temperature ranges (typically 0°C to

45°C or 32°F to 113°F). Extreme heat or cold can degrade battery performance and lifespan.

- **Cleaning:** Keep the battery and phone contacts clean and free of dust or debris. Use a dry, soft cloth for cleaning.
- **Disposal:** When the battery reaches the end of its life, dispose of it responsibly at a designated recycling facility. Do not throw it in household waste.

5. TROUBLESHOOTING

Issue	Possible Cause	Solution
Phone does not power on after battery installation.	Battery not properly connected; battery completely discharged.	Ensure battery connector is firmly seated. Place handset on charger for initial 12-15 hour charge.
Battery does not hold a charge for long.	Insufficient initial charge; battery nearing end of life; phone's charging contacts are dirty.	Perform a full 12-15 hour initial charge. Clean charging contacts on both handset and base. If issue persists, the battery may need replacement.
Phone displays "Low Battery" frequently.	Battery not fully charged; heavy usage; battery degradation.	Ensure handset is consistently placed on the charger when not in use. Reduce talk time if possible. Consider battery replacement if performance does not improve.

6. SPECIFICATIONS

Feature	Detail
Model Number	22465-UL124
Compatibility	Panasonic KX-A36A Cordless Phones and other listed models
Voltage	3.6 Volts
Capacity	400 mAh (Milliampere-hour)
Battery Cell Composition	Ni-CD (Nickel-Cadmium)
Product Dimensions	Approximately 5 x 2.3 x 0.6 inches
Item Weight	Approximately 1 ounce

7. WARRANTY AND SUPPORT

For information regarding warranty coverage, returns, or technical support for your replacement battery, please refer to the documentation provided at the time of purchase or contact the seller/manufacturer directly. Keep your proof of purchase for warranty claims.

This manual is for informational purposes only. Specifications are subject to change without notice.

