

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

- › [Coby](#) /
- › [Coby TFDVD7309 7-Inch Portable DVD/CD/MP3 Player Instruction Manual](#)

Coby TFDVD7309

Coby TFDVD7309 7-Inch Portable DVD/CD/MP3 Player Instruction Manual

MODEL: TFDVD7309

Introduction

Thank you for purchasing the Coby TFDVD7309 Portable DVD Player. This manual provides essential information for the safe and efficient operation of your device. Please read it thoroughly before use and retain it for future reference. This player features a 7-inch widescreen TFT LCD with a 180-degree swivel screen, supporting DVD, CD, and MP3 playback, along with digital media files from USB drives and SD cards.

Safety Information

To ensure safe operation and prevent damage, please observe the following precautions:

- Do not expose the unit to rain, moisture, or extreme temperatures.
- Avoid placing the unit near heat sources such as radiators, stoves, or other heat-producing appliances.
- Ensure proper ventilation; do not block any ventilation openings.
- Use only the power adapters supplied or recommended by the manufacturer.
- Do not attempt to disassemble or modify the unit. Refer all servicing to qualified personnel.
- Keep the unit away from strong magnetic fields.
- Dispose of batteries properly according to local regulations.

Package Contents

Verify that all items are present in your package:

- Coby TFDVD7309 Portable DVD Player
- AC Power Adapter
- Car Power Adapter
- Remote Control
- AV Cable
- Instruction Manual

Product Overview

Familiarize yourself with the components and controls of your portable DVD player.



Image: Coby TFDVD7309 Portable DVD Player with its 7-inch swivel screen open, displaying the disc tray and control buttons. The player is black with silver accents.

Main Unit Features:

- **7-inch TFT LCD Swivel Screen:** Rotates 180 degrees for optimal viewing angles.
- **Disc Compartment:** For inserting DVDs and CDs.
- **Control Buttons:** Power, Play/Pause, Stop, Skip (Forward/Backward), Volume, Menu, Setup.
- **USB Port:** For connecting USB flash drives.
- **SD Card Slot:** For inserting SD memory cards.
- **Headphone Jacks (x2):** For private listening.
- **AV Input (3.5mm):** For connecting external video sources (e.g., game consoles, VCRs).
- **AV Output (3.5mm):** For connecting to an external display or home theater system.

- **DC Input:** For connecting the AC or car power adapter.
- **Integrated Stereo Speakers:** For audio playback without headphones.

Setup

1. Charging the Battery

Before first use, fully charge the internal rechargeable Li-Polymer battery. Connect the AC power adapter to the DC input jack on the player and then to a wall outlet. The charging indicator light will illuminate. Charging typically takes several hours. The battery life is approximately 2 hours for a full movie.

2. Powering On/Off

Press and hold the **POWER** button on the unit or remote control to turn the player on or off.

3. Connecting to External Devices

- **External Display/Home Theater:** Use the supplied AV cable to connect the player's **AV OUT** jack to the AV input jacks on your television or home theater system.
- **External Video Source:** To display video from an external device (e.g., a video game console or VCR) on the player's screen, connect the external device's AV output to the player's **AV IN** jack using the appropriate cable.

Operating Instructions

1. Inserting a Disc

1. Gently open the disc compartment cover.
2. Place a DVD or CD onto the spindle with the label side facing up.
3. Close the disc compartment cover firmly until it clicks.

2. Playing DVDs/CDs

- After inserting a disc, the player will typically begin playback automatically.
- Use the **PLAY/PAUSE** button to start or pause playback.
- Press the **STOP** button to halt playback.
- Use the **SKIP** buttons (**◀◀** / **▶▶**) to navigate between tracks or chapters.
- Adjust the volume using the **VOL +/-** buttons.
- Access disc menus, subtitles, audio languages, and camera angles using the **MENU** and other dedicated buttons on the remote control.

3. Using USB Drives and SD Cards

- Insert a USB flash drive into the **USB** port or an SD card into the **SD CARD** slot.
- The player will automatically detect the media and display a menu for file selection.
- Navigate through folders and files using the directional buttons and **ENTER** button on the unit or remote.
- Supported formats include MP3 for audio, MPEG-1 and MPEG-2 for video, and JPG for photos.

4. Swivel Screen Operation

The screen can be rotated up to 180 degrees. Gently pivot the screen clockwise or counter-clockwise to achieve your desired viewing angle. Avoid excessive force when rotating the screen.

5. Headphone Use

Connect standard 3.5mm headphones to either of the two headphone jacks for private audio listening. The built-in speakers will automatically mute when headphones are connected.

6. Parental Lock Control

The player includes a parental lock feature to restrict access to certain content. Refer to the on-screen setup menu for instructions on how to activate and configure this feature.

Maintenance

Cleaning the Unit

- Wipe the exterior of the player with a soft, dry cloth. Do not use liquid cleaners or abrasive materials.
- For the LCD screen, use a soft, lint-free cloth specifically designed for electronics screens.
- To clean the disc lens, use a specialized DVD/CD lens cleaning disc.

Battery Care

- Avoid fully discharging the battery frequently.
- If storing the unit for an extended period, charge the battery to about 50% and store in a cool, dry place. Recharge every few months to maintain battery health.

Troubleshooting

If you encounter issues, refer to the following common problems and solutions:

Problem	Possible Cause / Solution
No power	Ensure the AC adapter is securely connected and the wall outlet is functional. Check if the battery is charged.
No disc / Disc error	Ensure the disc is inserted correctly with the label side up. Clean the disc for smudges or scratches. Try a different disc.
No picture on screen	Check if the screen is properly swiveled and connected. Adjust screen brightness in the setup menu. If connected to an external display, ensure AV cables are secure and the TV input is correct.
No sound	Increase the volume. Check if headphones are connected (unplug them if you want sound from speakers). If connected to an external system, check its volume and input settings.
USB/SD card not reading	Ensure the USB drive or SD card is inserted correctly. Check if the files are in supported formats (MP3, MPEG-1, MPEG-2, JPG). Try a different USB drive or SD card.
Remote control not working	Replace the AAA batteries. Ensure there is no obstruction between the remote and the player's IR sensor.

Specifications

- **Model:** TFDVD7309
- **Display:** 7-inch Widescreen TFT LCD
- **Display Resolution:** 480 x 234 pixels
- **Media Support:** DVD, DVD±R/RW, CD, CD-R/RW, USB flash drive, SD cards

- **Audio Format Support:** MP3
- **Video Format Support:** MPEG-1, MPEG-2 (DVD)
- **Photo Format Support:** JPG
- **Audio Input:** 3.5mm Stereo Audio
- **Audio Output:** 3.5mm Optical/Stereo, 3.5mm Headphone (x2), Integrated Stereo Speakers
- **Video Input:** 3.5mm Composite Video
- **Video Output:** 3.5mm Composite Video
- **Battery Type:** Rechargeable Li-Polymer Battery
- **Remote Control Batteries:** 2 x 1.5V "AAA" (not included)
- **Dimensions (L x W x H):** 12.7 x 15.24 x 20.32 cm (5 x 6 x 8 inches)
- **Weight:** 1.2 kg (2.65 lbs)

Warranty and Support

For warranty information or technical support, please refer to the warranty card included with your product or contact Coby customer service. Keep your purchase receipt as proof of purchase.