

## Nikon L22 Red

# Nikon Coolpix L22 Digital Camera User Manual

Model: L22 Red

## INTRODUCTION TO THE NIKON COOLPIX L22

---

The Nikon Coolpix L22 is a user-friendly 12.0-megapixel digital camera designed for everyday photography. It features a 3.6x optical zoom NIKKOR glass lens and a bright 3.0-inch LCD monitor, making it suitable for capturing crisp and vibrant photos and 640 x 480 movies with sound at 30 frames per second.

Key features include the 3-way VR Image Stabilization System to minimize blur, an Easy Auto Mode with Scene Auto Selector for simplified shooting, and the EXPEED Image Processing engine for enhanced image quality. The camera also incorporates Nikon's Smart Portrait System, which includes features like Face-priority AF, Smile Mode, Blink Warning, and In-Camera Red-Eye Fix to help achieve optimal portrait results.

## SETUP GUIDE

---

### 1. Inserting Batteries

The Nikon Coolpix L22 operates on two AA-size batteries, offering convenient power options for travel and on-the-go use. To insert the batteries:

1. Locate the battery chamber cover on the side of the camera.
2. Slide the release latch to open the cover.
3. Insert two AA batteries, ensuring correct polarity (+/-) as indicated inside the compartment.
4. Close the battery chamber cover securely until it clicks into place.



*Figure 1: Top view of the Nikon Coolpix L22, highlighting the power and zoom controls.*

## **2. Inserting a Memory Card**

The camera supports SD/SDHC memory cards for storing photos and videos. It also has approximately 19 MB of internal memory. To insert a memory card:

1. Open the battery/memory card compartment cover.
2. Insert the SD/SDHC memory card into the designated slot with the label facing the front of the camera until it clicks into place.
3. Close the compartment cover securely.



Figure 2: Front view of the Nikon Coolpix L22, showcasing its compact design and lens.

## OPERATING THE CAMERA

---

### 1. Powering On/Off

Press the **ON/OFF** button located on the top of the camera to power it on or off.

### 2. Basic Shooting (Easy Auto Mode)

For simple point-and-shoot operation, use the Easy Auto Mode. In this mode, the camera automatically selects the optimal scene mode based on the subject and surrounding conditions.

1. Turn the camera on.
2. Frame your shot using the 3.0-inch LCD monitor.
3. Press the shutter button halfway down to focus. The focus indicator will light up.
4. Press the shutter button all the way down to take the picture.



Figure 3: Rear view of the Nikon Coolpix L22, displaying the LCD and navigation controls.

### 3. Zooming

Use the zoom lever located around the shutter button to adjust the optical zoom. Push the lever towards **T** (Telephoto) to zoom in, and towards **W** (Wide-angle) to zoom out.

### 4. Smart Portrait System

The Smart Portrait System enhances portrait photography:

- **Face-priority AF:** Automatically detects and focuses on up to 12 faces in the frame.
- **Smile Mode:** Automatically releases the shutter when a smile is detected.
- **Blink Warning:** Alerts you if a subject may have blinked.
- **In-Camera Red-Eye Fix:** Corrects red-eye effect automatically after the photo is taken.

### 5. Recording Movies

To record a movie, switch to movie mode (if available via a dedicated button or menu option) and press the shutter button to start/stop recording. The camera captures 640 x 480 movies with sound at 30 frames per second.

## MAINTENANCE AND CARE

---

- **Cleaning the Lens:** Use a soft, lint-free cloth specifically designed for camera lenses. Avoid touching the lens surface with your fingers.
- **Cleaning the LCD Monitor:** Gently wipe the screen with a soft, dry cloth. For stubborn smudges, use a specialized LCD cleaning solution applied to the cloth, not directly to the screen.
- **Camera Body:** Wipe the camera body with a soft, dry cloth. Do not use organic solvents like paint thinner or benzene.

- **Storage:** When not in use for extended periods, remove the batteries to prevent leakage. Store the camera in a cool, dry place away from direct sunlight and extreme temperatures.

## TROUBLESHOOTING

Problem	Possible Cause / Solution
Camera does not power on.	<ul style="list-style-type: none"> <li>• Batteries are depleted. Replace with fresh AA batteries.</li> <li>• Batteries are inserted incorrectly. Check polarity (+/-).</li> <li>• Battery compartment cover is not fully closed. Ensure it is latched securely.</li> </ul>
Images are blurry.	<ul style="list-style-type: none"> <li>• Camera shake. Hold the camera steady or use the 3-way VR Image Stabilization.</li> <li>• Subject movement. Use a faster shutter speed or ensure adequate lighting.</li> <li>• Incorrect focus. Ensure the camera has focused before fully pressing the shutter button.</li> <li>• Lens is dirty. Clean the lens gently with a suitable lens cloth.</li> </ul>
"This card cannot be used" error.	<ul style="list-style-type: none"> <li>• Memory card is not inserted correctly. Reinsert the card.</li> <li>• Memory card is damaged or incompatible. Try a different, compatible SD/SDHC card.</li> <li>• Memory card is locked. Check the write-protect switch on the side of the SD card and slide it to the unlocked position.</li> </ul>
Flash does not fire.	<ul style="list-style-type: none"> <li>• Flash mode is set to OFF or Red-Eye Reduction. Adjust flash settings as needed.</li> <li>• Subject is too far away. Ensure subject is within flash range.</li> </ul>

## TECHNICAL SPECIFICATIONS

Feature	Detail
Effective Still Resolution	12 MP
Optical Zoom	3.6x
Digital Zoom	4x
LCD Screen Size	3.0 Inches
Image Stabilization	Optical (3-way VR)
Photo Sensor Technology	CMOS
Supported File Format	JPEG
Video Resolution	480p (640 x 480 at 30fps)
Internal Memory	Approx. 19 MB
Compatible Memory Cards	SD/SDHC

Feature	Detail
Power Source	2 x AA-size batteries
Connectivity	USB
Dimensions (approx.)	Item Height: 2.4 inches
Weight (approx.)	6.4 ounces
Model Number	L22 Red
UPC	018208261987

## WARRANTY AND SUPPORT

---

For detailed warranty information and customer support, please refer to the documentation included with your Nikon Coolpix L22 camera, such as the warranty card or a dedicated support leaflet. You may also visit the official Nikon support website for the most up-to-date information and contact options.

The product package typically includes:

- LR6/L40 (AA-size) alkaline batteries x2
- UC-E6 USB Cable
- AN-CP19 Strap
- Coolpix Software Suite CD-ROM

© 2024 Nikon Corporation. All rights reserved.

This manual is for informational purposes only. Specifications are subject to change without notice.