

Bulova C3260

Bulova C3260 Whittingham Wall Clock Instruction Manual

INTRODUCTION

Thank you for choosing the Bulova C3260 Whittingham Wall Clock. This manual provides essential information for the proper setup, operation, and maintenance of your new clock. Please read these instructions carefully before use and retain them for future reference.

The Bulova C3260 Whittingham Wall Clock features an antique-style fruit pattern dial, designed to complement various interior decors. It is equipped with a silent movement for quiet operation.



This image shows the Bulova C3260 Whittingham Wall Clock, featuring an 18-inch round antique-style dial with a fruit pattern design. The clock has black hour, minute, and second hands, and clear Arabic numerals.

SETUP

1. Unpacking

- Carefully remove the clock from its packaging.
- Inspect the clock for any signs of damage. If damaged, do not proceed with setup and contact customer support.

- Retain packaging materials for future transport or storage.

2. Battery Installation

1. Locate the battery compartment on the back of the clock.
2. Insert one (1) AA battery (not included) into the compartment, ensuring the positive (+) and negative (-) terminals align correctly with the indicators.
3. Close the battery compartment cover securely.

3. Setting the Time

- Turn the time-setting knob, usually located on the back of the clock's movement mechanism, in either direction until the hands display the correct time.
- Avoid moving the clock hands directly, as this may damage the movement.

4. Mounting the Clock

- Select a suitable wall location that can support the clock's weight (approximately 3 pounds).
- Use an appropriate wall anchor and screw for secure mounting.
- Hang the clock using the keyhole slot provided on the back.
- Ensure the clock is level for optimal appearance.

OPERATING INSTRUCTIONS

Once the battery is installed and the time is set, the Bulova C3260 Whittingham Wall Clock will begin to operate automatically. The clock features a silent movement, ensuring no audible ticking sound.

- The clock is designed for indoor use only.
- It operates continuously as long as the battery provides power.

MAINTENANCE

Cleaning

- To clean the clock, gently wipe the surface with a soft, dry cloth.
- Do not use abrasive cleaners, solvents, or chemical sprays, as these may damage the finish or the dial.

Battery Replacement

- When the clock begins to lose time or stops running, it is an indication that the battery needs to be replaced.
- Replace the old AA battery with a new one, following the battery installation steps outlined in the Setup section.
- Dispose of used batteries responsibly according to local regulations.

Storage

- If the clock will not be used for an extended period, remove the battery to prevent leakage and potential damage to the movement.
- Store the clock in a dry, cool place, preferably in its original packaging.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Clock not running	Battery is dead or incorrectly installed.	Replace the battery with a new AA battery, ensuring correct polarity (+/-).
Clock runs slow or stops intermittently	Battery power is low.	Replace the battery with a new AA battery.
Time is incorrect	Time was not set correctly or was accidentally adjusted.	Reset the time using the time-setting knob on the back of the clock.

If these troubleshooting steps do not resolve the issue, please refer to the Support section for further assistance.

SPECIFICATIONS

Brand	Bulova
Model Number	C3260
Product Dimensions	18 inches (W) x 18 inches (H) x 1.5 inches (D)
Item Weight	Approximately 3 Pounds
Power Source	1 AA Battery (not included)
Movement Type	Quartz (Silent Operation)
Display Type	Analog
Material	Wood (Masonite frame)
Style	Antique
Special Feature	Silent Clock
Mounting Type	Wall Mount
Indoor/Outdoor Usage	Indoor Only



This image illustrates the dimensions of the Bulova C3260 Whittingham Wall Clock, showing its 18-inch diameter.

WARRANTY INFORMATION

The Bulova C3260 Whittingham Wall Clock comes with a limited warranty. For detailed information regarding warranty coverage, terms, and conditions, please refer to the warranty card included with your product or visit the official Bulova website. Please retain your proof of purchase for warranty claims.

CUSTOMER SUPPORT

If you have any questions, require assistance, or encounter issues not covered in this manual, please contact Bulova customer support.

- Visit the official Bulova website for FAQs and support resources: www.bulova.com
- Refer to the contact information provided on your product packaging or the Bulova website for direct customer service.

