

## Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [TIMEX](#) /

› [Timex Analog Beige Dial Men's Watch T49792 User Manual](#)

## TIMEX T49792

# Timex Analog Beige Dial Men's Watch T49792 User Manual

Model: T49792

## INTRODUCTION

This manual provides essential information for the proper use and care of your Timex Analog Beige Dial Men's Watch, model T49792. Please read these instructions carefully to ensure optimal performance and longevity of your timepiece.

## SETUP

### 1. Battery Installation/Replacement

Your Timex T49792 watch is powered by a quartz movement and requires one CR2 battery. The battery is typically pre-installed. If the watch is not running, the battery may need to be installed or replaced.

1. Carefully remove the watch back using a specialized watch case opener tool.
2. Locate the battery compartment.
3. Remove the old battery (if present) and insert a new CR2 battery, ensuring the correct polarity (+/-).
4. Securely replace the watch back, ensuring the gasket is properly seated to maintain water resistance.

### 2. Setting the Time

To set the time on your analog watch:

1. Pull the crown (the small knob on the side of the watch case) out to the time-setting position.
2. Turn the crown clockwise or counter-clockwise to move the hands until the correct time is displayed.
3. Once the time is set, push the crown back into its original position to engage the movement and start the watch.

## OPERATING YOUR WATCH

### Time Reading

The watch features a classic analog display with hour, minute, and second hands. The beige dial with clear markers allows for easy time reading.

### Water Resistance

Your Timex T49792 watch has a water resistance depth of 100 meters (330 feet). This means it is suitable for showering, swimming, and snorkeling. **It is not suitable for scuba diving.** Always ensure the crown is fully pushed in before exposing the

watch to water.

## MAINTENANCE

---

### Cleaning

To maintain the appearance of your watch:

- Wipe the watch case and crystal with a soft, dry cloth.
- For the leather band, avoid prolonged exposure to water and direct sunlight. Clean with a damp cloth and mild soap if necessary, then dry thoroughly.
- Do not use harsh chemicals or abrasive materials for cleaning.

### Water Resistance Care

To preserve the water resistance of your watch:

- Do not operate the crown or pushers while the watch is wet or submerged.
- Avoid exposing the watch to extreme temperature changes, which can affect the seals.
- Have the water resistance seals checked periodically by a qualified watch technician, especially after battery replacement.

### Storage

When not wearing your watch, store it in a cool, dry place away from direct sunlight and strong magnetic fields.

## TROUBLESHOOTING

---

- **Watch Not Running:** Check if the crown is fully pushed in. If it is, the battery may need replacement.
- **Time Inaccuracy:** If the watch is consistently fast or slow, the battery may be low, or the movement may require servicing.
- **Condensation Under Crystal:** This indicates a breach in water resistance. Avoid further water exposure and seek professional servicing immediately.

## SPECIFICATIONS

---

Model Number	T49792
Dial Color	Beige
Band Color	Brown
Band Material	Leather
Movement Type	Quartz
Display Type	Analog
Water Resistance Depth	100 meters (330 feet)
Case Diameter	50 Millimetres
Item Weight	299 g
Battery Type	1 CR2 battery (included)

### Watch Dimensions Reference

The image below provides a visual reference for various watch case diameters, including the 50mm size of your Timex T49792.



This image illustrates different watch case sizes, ranging from 14-16mm up to 50-54mm, to help visualize the dimensions. The Timex T49792 has a case diameter of 50mm.

## WARRANTY

Your Timex T49792 watch comes with a **1 Year Manufacturer Warranty**. This warranty covers manufacturing defects under normal use. Please retain your proof of purchase for warranty claims. The warranty does not cover normal wear and tear, accidental damage, or damage resulting from improper use or unauthorized repairs.

## SUPPORT

---

For further assistance, technical support, or warranty service, please contact Timex customer service. Refer to the official Timex website or your product packaging for the most current contact information.

