

BOSCH MFQ4080

Bosch Hand Mixer Styline MFQ4080 Instruction Manual

Model: MFQ4080

1. INTRODUCTION

Thank you for choosing the Bosch Hand Mixer Styline MFQ4080. This appliance is designed for efficient mixing, kneading, chopping, and blending tasks in your kitchen. Please read this instruction manual carefully before first use to ensure safe operation and optimal performance. Keep this manual for future reference.

2. SAFETY INSTRUCTIONS

Always observe the following safety precautions to prevent injury or damage:

- Read all instructions before operating the appliance.
- Ensure the voltage indicated on the appliance corresponds to your local mains voltage before connecting.
- Do not immerse the motor unit in water or other liquids. Clean with a damp cloth only.
- Keep hands, hair, clothing, and utensils away from moving parts during operation to prevent injury.
- Always unplug the appliance from the power supply before assembling, disassembling, cleaning, or when not in use.
- Do not allow children to use the appliance unsupervised.
- Avoid contact with sharp blades of the universal shredder. Handle with care.
- Do not operate the appliance with a damaged cord or plug, or after the appliance malfunctions or has been dropped or damaged in any manner.
- Use only original Bosch accessories and attachments.

3. PRODUCT COMPONENTS

The Bosch Hand Mixer Styline MFQ4080 comes with several components to assist with various kitchen tasks:

- Hand Mixer Motor Unit
- 2 x Turbo Beaters (Stainless Steel)
- 2 x Kneading Hooks (Stainless Steel)
- 1 x Mixing Beaker
- 1 x Stainless Steel Mixing Wand (Hand Blender Attachment)
- 1 x Universal Shredder with Lid and Blade



Image 3.1: Overview of the Bosch Hand Mixer Styline MFQ4080 and its complete set of accessories, including the motor unit, turbo beaters, kneading hooks, mixing beaker, mixing wand, and universal shredder.

4. SETUP

Before first use, ensure all packaging materials are removed and components are clean.

4.1 Attaching Beaters or Kneading Hooks

1. Ensure the appliance is unplugged.
2. Insert the beaters or kneading hooks into the openings on the underside of the motor unit. Push firmly until they click into place. Note that kneading hooks are designed to fit in specific openings.
3. To remove, press the eject button located on the top of the motor unit.

4.2 Attaching the Mixing Wand

1. Ensure the appliance is unplugged.
2. Align the mixing wand with the designated opening on the front of the motor unit.
3. Twist clockwise until it locks securely.
4. To remove, twist counter-clockwise and pull.

4.3 Assembling the Universal Shredder

1. Place the blade onto the central pin inside the shredder bowl.
2. Add ingredients to the bowl. Do not overfill (maximum half full for optimal performance).
3. Place the lid onto the shredder bowl, ensuring it is properly aligned.
4. Attach the motor unit to the top of the shredder lid, twisting until it locks.



Image 4.1: The Bosch Hand Mixer motor unit attached to the universal shredder, demonstrating its use for processing ingredients.

5. OPERATING INSTRUCTIONS

The Bosch Hand Mixer Styline MFQ4080 features 5 speed settings and an additional pulse/turbo function for versatile use.

5.1 Using Beaters and Kneading Hooks

1. Insert the desired attachments (beaters for whipping/mixing, kneading hooks for dough).
2. Plug the appliance into a power outlet.
3. Select the desired speed using the speed selector switch. Start with a lower speed and gradually increase as needed.
4. For short bursts of maximum power, press and hold the 'Turbo' button.
5. After use, switch off the appliance, unplug it, and press the eject button to release the attachments.

5.2 Using the Universal Shredder

1. Assemble the shredder as described in Section 4.3.
2. Plug the appliance into a power outlet.
3. Select a suitable speed (usually higher speeds are effective for chopping).
4. Process ingredients until desired consistency is achieved. Use short pulses for coarse chopping.
5. After use, switch off, unplug, and carefully disassemble the shredder.



Image 5.1: The universal shredder bowl surrounded by various ingredients such as cheese, nuts, chocolate, and herbs, illustrating its versatility for different food preparation tasks.

5.3 Using the Mixing Wand (Hand Blender)

1. Attach the mixing wand to the motor unit.
2. Plug the appliance into a power outlet.

3. Immerse the mixing wand into the ingredients in the mixing beaker or another suitable container.
4. Select the desired speed.
5. Move the mixing wand up and down gently to ensure even blending.
6. After use, switch off, unplug, and detach the mixing wand.

6. MAINTENANCE AND CLEANING

Proper cleaning and maintenance will extend the life of your appliance.

6.1 Cleaning the Motor Unit

- Always unplug the appliance before cleaning.
- Wipe the motor unit with a damp cloth. Do not immerse it in water or wash it under running water.
- Do not use abrasive cleaners or harsh chemicals.

6.2 Cleaning Attachments

- Beaters, kneading hooks, mixing beaker, and the mixing wand shaft are dishwasher-safe.
- The universal shredder bowl and blade can be washed by hand with warm soapy water or in a dishwasher.
- The gearbox part of the universal shredder lid should not be immersed in water. Wipe it clean with a damp cloth. Ensure it is completely dry before storage.

7. TROUBLESHOOTING

If you encounter any issues with your Bosch Hand Mixer, refer to the following table:

Problem	Possible Cause	Solution
Appliance does not turn on.	Not plugged in; power outage; faulty outlet.	Check power connection; test outlet with another appliance.
Attachments are difficult to insert/eject.	Incorrect alignment; debris in openings.	Ensure correct alignment; clean openings; press eject button firmly.
Motor sounds strained or overheats.	Overloading; continuous operation for too long.	Reduce load; allow appliance to cool down; use appropriate speed.
Universal shredder not chopping effectively.	Overfilled; blade not properly installed.	Do not overfill (max half full); ensure blade is correctly seated.

8. TECHNICAL SPECIFICATIONS

Feature	Specification
Brand	BOSCH

Feature	Specification
Model Number	MFQ4080
Power / Wattage	500 watts
Voltage	230 Volts
Number of Speeds	5
Special Features	Pulse / Turbo Setting, Separate Eject Button
Material	Mixed (Stainless Steel attachments)
Product Dimensions	7.5 x 20 x 14.2 cm
Item Weight	1.5 Kilograms
Noise Level	70 Decibels

9. WARRANTY AND SUPPORT

This Bosch appliance comes with a manufacturer's warranty. Please refer to the warranty card included with your product for specific terms and conditions, including the warranty period and coverage details.

For technical support, service, or spare parts, please contact Bosch customer service. In Egypt, you can reach Bosch's Hotline for Support at: **15196**.

Please have your model number (MFQ4080) and purchase details ready when contacting support.