

Manuals.plus /

- › Emerson /
- › Emerson EWR10D5 DVD Recorder Instruction Manual

Emerson EWR10D5

Emerson EWR10D5 DVD Recorder Instruction Manual

Model: EWR10D5

1. INTRODUCTION

This manual provides detailed instructions for the setup, operation, and maintenance of your Emerson EWR10D5 DVD Recorder. Please read this manual thoroughly before using the device to ensure proper and safe operation. Keep this manual for future reference.



Figure 1: Front view of the Emerson EWR10D5 DVD Recorder. This image displays the compact design of the unit, including the disc tray and front panel controls.

2. SAFETY INFORMATION

- Do not expose this appliance to rain or moisture.
- Do not open the cabinet. Refer servicing to qualified personnel only.
- Ensure proper ventilation to prevent overheating.
- Use only the specified power supply.
- Keep the unit away from direct sunlight, heat sources, and strong magnetic fields.
- Handle discs carefully to avoid scratches or damage.

3. PACKAGE CONTENTS

Verify that all items are present in the package:

- Emerson EWR10D5 DVD Recorder Unit
- Remote Control (with batteries)
- Audio/Video (A/V) Cables

- Power Cord
- Instruction Manual (this document)

4. PRODUCT FEATURES

The Emerson EWR10D5 DVD Recorder offers a range of functionalities for recording and playback:

4.1 Recording Capabilities

- Records onto DVD-R and DVD-RW discs.
- Features 6 recording modes for varying quality and duration.
- Supports 1 month, 8 program timer recording.
- Automatic disc finalizing.

4.2 Playback Capabilities

- Plays DVD-R/RW discs.
- Supports DVD video playback.
- Compatible with CD-DA (audio CD) and MP3 playback.

4.3 Special Features

- **Search:** 3-step search function.
- **Zoom:** 1.2x, 1.5x, 2x zoom levels.
- **Slow Motion:** Playback in slow motion.
- **Dolby Digital Sound:** Enhanced audio experience.
- **MTS/SAP:** Multi-channel Television Sound/Secondary Audio Program support.
- **Trilingual OSD:** On-Screen Display in three languages.
- **Parental Lock:** Content restriction feature.

4.4 Inputs and Outputs

- **Front A/V Inputs:** For connecting external devices like camcorders.
- **Front S-Video Input:** For higher quality video input from compatible devices.
- **Component Video Output:** For high-quality video connection to a TV.
- **Digital Audio Out (Coaxial):** For connecting to a home theater receiver for digital audio.

5. SETUP

5.1 Connecting to a Television

To connect your DVD recorder to a television, choose one of the following connection methods:

1. **Component Video Connection (Recommended for best quality):**

Connect the Component Video Output (Y, Pb, Pr) jacks on the DVD recorder to the corresponding Component Video Input jacks on your TV using component video cables. Connect the Audio L/R Output jacks on the DVD recorder to the Audio L/R Input jacks on your TV using audio cables.

2. **A/V (Composite Video) Connection:**

Connect the Video Output jack on the DVD recorder to the Video Input jack on your TV using a composite

video cable (yellow). Connect the Audio L/R Output jacks on the DVD recorder to the Audio L/R Input jacks on your TV using audio cables (red and white).

5.2 Power Connection

Plug the supplied power cord into the AC IN socket on the rear of the DVD recorder, then plug the other end into a standard AC wall outlet.

6. OPERATING INSTRUCTIONS

6.1 Basic Playback

1. Turn on your TV and select the correct input source for the DVD recorder.
2. Press the **POWER** button on the unit or remote control to turn on the DVD recorder.
3. Press the **OPEN/CLOSE** button to open the disc tray.
4. Place a DVD or CD disc onto the tray with the label side facing up.
5. Press the **OPEN/CLOSE** button again to close the tray. Playback will usually start automatically. If not, press the **PLAY** button.

6.2 Recording to DVD-R/RW

1. Insert a blank DVD-R or DVD-RW disc into the disc tray.
2. Select the input source you wish to record from (e.g., TV tuner, Front A/V input). Use the **INPUT SELECT** button on the remote or front panel.
3. Press the **RECORD** button to begin recording. The recording indicator will illuminate.
4. To stop recording, press the **STOP** button.
5. **Recording Modes:** Access the menu to select from 6 available recording modes, which determine the recording quality and duration on the disc.

6.3 Finalizing Discs

For recorded DVD-R/RW discs to be playable on other DVD players, they must be finalized. The Emerson EWR10D5 features auto finalizing. Refer to the on-screen menu for manual finalizing options if needed.

6.4 Parental Lock

The parental lock feature allows you to restrict playback of certain content based on rating levels. Access this feature through the system settings menu and follow the on-screen prompts to set a password and desired restriction level.

7. MAINTENANCE

7.1 Cleaning the Unit

- Wipe the exterior of the unit with a soft, dry cloth.
- Do not use liquid cleaners or aerosol sprays, as they may damage the finish or internal components.

7.2 Disc Handling

- Hold discs by their edges to avoid fingerprints on the playing surface.
- Clean discs with a soft, lint-free cloth, wiping from the center outwards.
- Store discs in their cases to protect them from dust and scratches.

8. TROUBLESHOOTING

Problem	Possible Cause	Solution
No power	Power cord not securely connected.	Check power cord connection to the unit and wall outlet.
No picture on TV	Incorrect TV input selected; video cables not connected properly.	Select the correct input on your TV. Verify video cable connections.
No sound	Audio cables not connected properly; TV/receiver volume too low.	Verify audio cable connections. Increase TV/receiver volume.
Disc does not play	Disc inserted incorrectly; disc is dirty or damaged; incompatible disc format.	Insert disc with label side up. Clean or replace disc. Ensure disc is DVD-R/RW, DVD video, CD-DA, or MP3 format.
Cannot record	Disc is not recordable (e.g., DVD-ROM); disc is full; disc is finalized.	Use a blank DVD-R or DVD-RW disc. Check disc capacity. Do not use finalized discs for recording.

9. SPECIFICATIONS

Brand	Emerson
Model	EWR10D5
Media Type Supported	CD, DVD (DVD-R, DVD-RW)
Special Feature	Compact Design
Input Video Compatibility	NTSC
Manufacturer	EMERSON
File Formats Supported	DA (CD-DA), MP3
Analog Video Format	NTSC

10. WARRANTY AND SUPPORT

For warranty information and technical support, please refer to the warranty card included with your product or contact Emerson customer service. Details for customer service can typically be found on the manufacturer's official website or in the product packaging.