

Casio 10152407

Casio Watch Band 10152407 Instruction Manual

For Models WVA-430, WVA-470, WVA-620, WV-M120, and other compatible Casio watches

1. PRODUCT OVERVIEW

This manual provides detailed instructions for the installation, maintenance, and care of your new Casio Watch Band model 10152407. This genuine Casio replacement band is designed to restore the functionality and appearance of your compatible Casio timepiece.



Figure 1: Top view of the Casio Watch Band 10152407, showing the black resin strap and stainless steel buckle.

The watch band features a durable black resin material and a robust stainless steel buckle, ensuring comfort and longevity. It is specifically designed to fit various Casio Wave Ceptor models.

2. COMPATIBILITY

The Casio Watch Band 10152407 is compatible with the following Casio watch models:

- WVA-430 series (e.g., WVA-430J, WVA-430A-1AV, WVA-430E-1AV, WVA-430J-1A, WVA-430J-1A2, WVA-430U-1AV)
- WVA-470 series (e.g., WVA-470J, WVA-470BE-1AV, WVA-470E-1AV, WVA-470J-1A)
- WVA-620 series (e.g., WVA-620E-1A2V)

- WV-M120 series (e.g., WV-M120E-1V)
- WVQ-M410

While primarily designed for these models, it may fit other watches with similar lug widths and pin configurations. Always verify compatibility before installation.

3. SETUP AND INSTALLATION

Replacing your watch band requires careful handling of small parts. It is recommended to perform this task on a clean, well-lit surface to prevent loss of components.

Required Tools:

- Small flat-head screwdriver or spring bar tool
- Needle-nose pliers or tweezers (optional, for handling pins)
- Original spring bars (*critical: new bands typically do not include these*)

Installation Steps:

1. Remove the Old Band:

Locate the spring bars connecting the old watch band to the watch case. Using a small flat-head screwdriver or spring bar tool, gently push in the spring bar from one end until it disengages from the lug hole. Carefully remove the old band. **Retain the original spring bars** as they are essential for installing the new band.



Figure 2: Underside view of the watch band, showing the pin holes where spring bars are inserted.

2. Insert Spring Bars into New Band:

Carefully insert one end of an original spring bar into the corresponding hole on one end of the new watch band. Repeat for the other spring bar and the other half of the band.

3. Attach New Band to Watch Case:

Align one end of the spring bar with the lug hole on the watch case. Using your tool, compress the other end of the spring bar and guide it into the opposite lug hole. Ensure both ends of the spring bar are securely seated in the lug holes. Gently tug on the band to confirm it is firmly attached.



Figure 3: Side view of the watch band, illustrating the buckle and strap length.

4. Repeat for Second Half:

Repeat steps 2 and 3 for the second half of the watch band.

5. Check Security:

Once both halves are installed, gently pull on each side of the band to ensure they are securely fastened to the watch case. A loose band can lead to the watch falling off.

4. OPERATING AND ADJUSTMENT

To wear your watch, simply insert the end of the strap through the buckle and adjust to your desired wrist size. Secure the strap by inserting the buckle pin into one of the adjustment holes. The stainless steel buckle ensures a secure fit.



Figure 4: Close-up view of the stainless steel buckle, showing the Casio branding.

5. MAINTENANCE AND CARE

To ensure the longevity and appearance of your Casio resin watch band, follow these simple care guidelines:

- **Cleaning:** Wipe the band regularly with a soft, damp cloth to remove dirt, sweat, and oils. For stubborn grime, a mild soap solution can be used, followed by rinsing with clean water and thorough drying.
- **Avoid Harsh Chemicals:** Do not expose the resin band to strong chemicals, solvents, or abrasive cleaners, as these can degrade the material and affect its color.

- **Storage:** When not in use, store the watch in a cool, dry place away from direct sunlight and extreme temperatures, which can cause the resin to become brittle over time.
- **Inspect Regularly:** Periodically check the band for any signs of wear, cracks, or damage, especially around the spring bar attachment points.

6. TROUBLESHOOTING

Band Does Not Fit:

- **Incorrect Model:** Verify that your watch model is listed under the "Compatibility" section. This band is designed for specific Casio models.
- **Spring Bar Issues:** Ensure you are using the correct size spring bars (typically 19mm or 20mm for compatible models). Bent or damaged spring bars can prevent proper installation.
- **Installation Technique:** Re-read the "Setup and Installation" steps carefully. Ensure the spring bars are fully compressed and seated into the lug holes.

Band Feels Loose After Installation:

- **Spring Bars Not Seated:** This is the most common cause. The spring bars may not be fully engaged in both lug holes. Gently pull on the band to confirm it is secure. If it detaches easily, re-install.
- **Damaged Spring Bars:** If the spring bars are old or bent, they may not provide sufficient tension. Consider replacing them with new, correctly sized spring bars.

7. SPECIFICATIONS

Feature	Detail
Product Model Number	10152407
Material	Resin
Buckle Material	Stainless Steel
Color	Black
Clasp Type	Buckle
Approximate Dimensions (L x W x H)	7.87 x 2.36 x 0.39 inches
Approximate Weight	0.8 ounces

8. WARRANTY AND SUPPORT

This Casio Watch Band 10152407 is a genuine replacement part manufactured by Casio. For specific warranty information regarding replacement parts, please refer to the original warranty documentation provided with your Casio watch or contact Casio customer support directly.

For further assistance or inquiries, please visit the official Casio support website or contact their customer service department. Always ensure you are purchasing genuine Casio parts to maintain the quality and integrity of your timepiece.

© 2024 Casio. All rights reserved.