

[manuals.plus](#) /› [Coby](#) /› [Coby MP620-4GBLK Video MP3 Player User Manual](#)

Coby MP620-4GBLK

Coby MP620-4GBLK Video MP3 Player

Model: MP620-4GBLK

PRODUCT OVERVIEW

The Coby MP620 is a versatile video and MP3 player designed for portable entertainment. It features a 1.8-inch TFT LCD full-color screen, allowing you to enjoy digital video and audio on the go. With 4 GB of internal memory, it provides ample storage for your music, videos, photos, and text files. The device is equipped with intuitive controls for easy navigation and comes with Coby Media Manager software for convenient media syncing.



Image: Coby MP620-4GBLK MP3 Player with its main menu displayed.

SETUP GUIDE

What's in the Box

- Coby MP620-4GBLK MP3 Player (Black)
- Stereo Earphones
- USB Cable
- User's Manual (this document)
- Warranty Card

Charging the Device

Before first use, fully charge your Coby MP620. Connect the included USB cable to the player's USB port and the other end to a powered USB port on your computer or a compatible USB wall adapter (not included). The integrated rechargeable Li-Poly battery provides up to eight hours of music playback on a single charge. Charging typically takes approximately 1 hour via a wall outlet (if using a compatible adapter).

Connecting to a Computer and Media Syncing

The Coby MP620 uses USB 2.0 for fast file transfers. To transfer media, connect the player to your computer using the supplied USB cable. You have two primary methods for syncing media:

1. **Using Coby Media Manager Software:** The included Coby Media Manager software allows you to convert existing audio and video clips to the correct formats for optimal playback on your device. Install the software from the provided disc or download it from the official Coby website. Follow the on-screen instructions within the software to manage and transfer your files.
2. **Drag-and-Drop:** Alternatively, you can treat the device as a standard storage drive. Once connected, the player will appear as a removable disk drive on your computer. You can then drag and drop compatible audio, video, photo, and text files directly into the appropriate folders on the device. Ensure files are in supported formats (MP3/WMA for audio, MTV for video, JPEG/BMP for images, TXT for text).

OPERATING INSTRUCTIONS

Device Controls

The MP620 features intuitive controls for easy navigation. The primary control is a circular four-way button with a central "enter" button. Use the directional arrows (Up, Down, Left, Right) to navigate through menus and options, and the center button to select. Other buttons include a dedicated 'M' (Menu/Mode) button and a '||' (Play/Pause) button, typically located on the side or front panel.

Music Playback

- **Supported Formats:** MP3 and WMA audio files.
- **Navigation:** Browse your music by Artist, Album, or Genre if your music files contain ID3 tags.
- **Playback Options:** Create quick playlists, enjoy random playback, or use repeat mode.
- **Lyrics Support:** LRC files are supported, allowing you to view synchronized lyrics during playback.
- **Equalizer Presets:** Adjust the audio output by selecting from various equalizer presets: *Normal, Pop, Rock, Classic, Jazz, or Bass*.

Video Playback

- **Supported Format:** MTV format.
- **Resolution:** Videos are displayed at 128x128 pixel resolution with 25 frames per second (fps).
- **Controls:** Basic controls such as fast-forward, rewind, and scan are available.

Photo Viewing

- **Supported Formats:** JPEG and BMP images.
- **Features:** Use the photo browser to explore your images. A slideshow function is available for sharing photos.

FM Radio

The MP620 includes an integrated FM radio. To use the FM radio, ensure your earphones are connected as they act as the antenna. You can preset your favorite stations for quick access or perform a quick scan to find local stations.

Text File Reading (eBooks)

- **Supported Format:** TXT format.
- **Features:** Read text files directly on the screen. You can set font color, enable auto-scroll, and save your current location using "bookmarks."

MAINTENANCE

To ensure the longevity and optimal performance of your Coby MP620, follow these maintenance guidelines:

- **Cleaning:** Use a soft, dry cloth to clean the device. For stubborn smudges on the screen, a slightly damp, lint-free cloth can be used. Avoid using harsh chemicals or abrasive cleaners.
- **Storage:** Store the player in a cool, dry place away from direct sunlight and extreme temperatures.
- **Handling:** Handle the device with care to prevent drops or impacts, which can damage internal components or the screen.
- **Battery Care:** To maintain battery health, avoid completely draining the battery frequently. Charge the device regularly, especially if it will be stored for an extended period.

TROUBLESHOOTING

If you encounter issues with your Coby MP620, refer to the following common troubleshooting steps:

- **Device Not Turning On:** Ensure the battery is sufficiently charged. Connect the player to a power source and allow it to charge for at least 15 minutes before attempting to power it on again.
- **No Sound:** Check that the volume is not set to minimum or muted. Ensure the earphones are securely plugged into the headphone jack. Test with a different pair of earphones to rule out faulty earphones.
- **Cannot Transfer Files:** Verify that the USB cable is properly connected to both the player and the computer. Ensure the computer recognizes the device as a removable disk. Try a different USB port on your computer. If using Coby Media Manager, ensure the software is installed correctly and up to date.
- **Screen is Blank or Frozen:** Try performing a soft reset by holding down the power button for several seconds until the device powers off, then power it back on. If the issue persists, allow the battery to fully drain and then recharge it.
- **FM Radio Static:** Ensure your earphones are fully plugged in, as they function as the antenna. Try repositioning the device or moving to an area with better signal reception.

If these steps do not resolve your issue, please refer to the Warranty and Support section for further assistance.

SPECIFICATIONS

Model Number	MP620-4GBLK
Storage Capacity	4 GB (approx. 1000 songs, 3500 photos, or 4 hours of video)
Display	1.8-inch TFT LCD, 128 x 160 pixel resolution
Audio Formats	MP3, WMA
Video Formats	MTV (128x128 pixels, 25 fps)
Image Formats	JPEG, BMP
Text Formats	TXT
Battery Life	Up to 8 hours music playback (on a single charge)
Connectivity	USB 2.0
Dimensions (L x W x H)	3.1 x 1.6 x 0.4 inches
Item Weight	5.8 ounces
Special Features	FM Radio, Equalizer Presets, Text Reader with Bookmarks

WARRANTY AND SUPPORT

Limited Warranty

The Coby MP620-4GBLK is covered by a one-year limited warranty from the date of original purchase. This warranty covers manufacturing defects in materials and workmanship under normal use. Please retain your proof of purchase for warranty claims. For full details regarding warranty terms and conditions, refer to the included Warranty Card.

Customer Support

For technical assistance, troubleshooting beyond this manual, or warranty service, please contact Coby customer support. Visit the official Coby website for contact information, frequently asked questions, and additional resources.