



- [Manuals.plus](#) /
- › [Fujifilm](#) /
 - › Fujifilm FinePix JV100 Digital Camera User Manual

Fujifilm JV100 Black

Fujifilm FinePix JV100 Digital Camera User Manual

Model: JV100 Black | Brand: Fujifilm

INTRODUCTION

This manual provides comprehensive instructions for the safe and effective use of your Fujifilm FinePix JV100 Digital Camera. The FinePix JV100 is a compact digital camera featuring a 12-megapixel CCD sensor, a Fujinon 3x optical zoom lens, and a 2.7-inch LCD display. It is designed for ease of use, incorporating features such as Face Detection, Tracking Auto Focus, and Scene Recognition Auto (SR AUTO) to help you capture high-quality photos and 720p HD videos.



Figure 1: Fujifilm FinePix JV100 Digital Camera. This image shows the black camera from a front-right perspective, highlighting the Fujinon lens, built-in flash, and the "12 MEGA PIXELS" indicator.

SETUP

1. Unboxing and Package Contents

Upon opening the package, verify that all components are present:

- Fujifilm FinePix JV100 Digital Camera
- Camera Strap
- Li-Ion Rechargeable Battery

Note: An SD Memory Card is not included with the camera and must be purchased separately.

2. Battery Installation and Charging

1. Locate the battery compartment cover on the bottom of the camera.
2. Slide the cover to open it.
3. Insert the supplied Li-Ion battery, ensuring the correct orientation as indicated inside the compartment.
4. Close the battery compartment cover securely.
5. Connect the camera to the supplied charger or a compatible USB power source to charge the battery fully before first use. The charging indicator light will typically turn off or change color when charging is complete.

3. Memory Card Insertion

The FinePix JV100 uses SD/SDHC memory cards (not included). To insert a memory card:

1. Open the battery/memory card compartment cover.
2. Insert the SD card into the designated slot with the label facing the correct direction (usually towards the front of the camera) until it clicks into place.
3. Close the compartment cover securely.

4. Initial Power On

Press the power button located on the top of the camera. The LCD screen will illuminate, and the lens will extend. Follow any on-screen prompts for initial setup, such as setting the date and time.

OPERATING THE CAMERA

1. Basic Controls

- **Power Button:** Turns the camera on/off.
- **Shutter Button:** Press halfway to focus, fully to take a picture.
- **Zoom Lever:** Controls the 3x optical zoom (W for wide-angle, T for telephoto).
- **Mode Dial:** Selects shooting modes (e.g., SR AUTO, Program, Scene Modes).
- **Playback Button:** Switches to playback mode to view captured images and videos.
- **Menu/OK Button:** Accesses camera settings and confirms selections.
- **Directional Pad:** Navigates menus and selects options.

2. Shooting Modes and Features

- **Scene Recognition Auto (SR AUTO):** This intelligent mode automatically detects the scene type (e.g., portrait, landscape, macro) and optimizes camera settings for focus, exposure, and white balance, ensuring optimal results with minimal effort.
- **HD Movie (720p):** The camera can record high-definition videos at 720p resolution with sound. Select the movie mode on the mode dial to begin recording.
- **Face Detection:** Automatically detects up to 10 faces in a frame, optimizing focus and exposure for portraits.
- **Tracking Auto Focus:** Maintains focus on a moving subject, ensuring sharp images even when the subject is in motion.
- **Smile & Blink Detection:**
 - *Smile Detection:* The camera will automatically take a picture when it detects a smile, ensuring happy expressions are captured.
 - *Blink Detection:* Alerts you if a subject has blinked, allowing you to retake the photo if necessary.
- **Picture Stabilization:** Combines high sensitivities with faster shutter speeds to reduce blur caused by camera shake or subject movement.
- **Automatic Red-eye Removal:** Corrects red-eye in captured images automatically.

3. Taking Photos and Videos

1. Turn on the camera.
2. Select your desired shooting mode using the mode dial. For general use, SR AUTO is recommended.
3. Frame your shot using the LCD screen.
4. Use the zoom lever to adjust the focal length.
5. Press the shutter button halfway down to allow the camera to focus. Once focus is achieved, the focus indicator will typically turn green.

6. Press the shutter button fully down to capture the image or start/stop video recording.

4. Viewing and Transferring Media

- **Viewing:** Press the playback button to review your photos and videos on the camera's LCD. Use the directional pad to navigate through images.
- **Transferring:** Connect the camera to a computer using a compatible USB cable (not included). The camera will typically appear as a removable drive, allowing you to copy files directly. Alternatively, remove the SD card and insert it into a computer's card reader.

MAINTENANCE

Proper maintenance ensures the longevity and optimal performance of your camera.

- **Cleaning the Lens:** Use a soft, lint-free cloth specifically designed for camera lenses. Gently wipe the lens surface to remove dust or smudges. Avoid using harsh chemicals or abrasive materials.
- **Cleaning the Camera Body:** Wipe the camera body with a soft, dry cloth. For stubborn dirt, slightly dampen the cloth with water. Do not use organic solvents.
- **Battery Care:**
 - Store the battery in a cool, dry place when not in use.
 - Avoid fully discharging the battery frequently.
 - If storing for an extended period, charge the battery to about 50% capacity.
- **Storage:** When not in use, store the camera in a dry, dust-free environment, away from extreme temperatures and direct sunlight. Consider using a camera case for added protection.

TROUBLESHOOTING

If you encounter issues with your Fujifilm FinePix JV100, refer to the following common problems and solutions:

Problem	Possible Cause / Solution
Camera does not power on.	Battery may be depleted or incorrectly inserted. Ensure the battery is fully charged and properly seated in the compartment.
Pictures are blurred.	Camera shake, subject movement, or incorrect focus. Ensure sufficient lighting, hold the camera steady, or use Picture Stabilization. Verify the camera has focused before fully pressing the shutter.
Flash does not fire.	Flash setting may be off, or battery is low. Check flash mode settings.
Battery stops charging.	Ensure the charger is properly connected and the power source is active. The battery may be faulty or at the end of its lifespan.
Cannot save images/videos.	Memory card is full, locked, or faulty. Check card capacity, ensure the write-protect switch is off, or try a different memory card.

If problems persist after attempting these solutions, please refer to the Warranty and Support section.

SPECIFICATIONS

Feature	Detail
Product Dimensions	3.66 x 0.83 x 2.17 inches
Item Weight	4.5 ounces
Batteries	1 Lithium Ion battery required (included)
Compatible Mountings	Fujifilm FinePix JV100
Aspect Ratio	4:3
Photo Sensor Technology	CCD
Supported File Format	JPEG, RAW
Image Stabilization	None
Maximum Focal Length	111 Millimeters
Optical Zoom	3x
Maximum Aperture	2.8 Millimeters
Expanded ISO Minimum	100
Metering Description	Evaluative

WARRANTY AND SUPPORT

Please be advised that this product is sold on an **AS-IS** basis. As per the product's legal disclaimer, there are **No Returns** and **No Warranty** provided for this specific item.

For general product information or inquiries about Fujifilm products, you may visit the official Fujifilm website or contact their customer service. However, specific support, returns, or warranty claims for this particular purchase are not available.

Manufacturer: FUJIFILM

For more information about Fujifilm products, you can visit the [Fujifilm Store on Amazon](#).

© 2024 Fujifilm. All rights reserved. Information subject to change without notice.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Answered questions about this manual

How do I change the ISO sensitivity on the Fujifilm FinePix JV100 digital camera?

To change the ISO sensitivity on your Fujifilm FinePix JV100, you must first ensure the camera is in a shooting mode that allows manual adjustments, such as Program (P) mode. In fully automatic modes...

[Read full answer](#)

Open the live page

<https://manuals.plus/asin/B0035WTVNC>

More documents and user manuals: <https://manuals.plus/>