

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [PanDigital](#) /

› [Pandigital Panimage PI7002AWB 7-Inch LED Digital Picture Frame Instruction Manual](#)

PanDigital PI7002AWB

Pandigital Panimage PI7002AWB 7-Inch LED Digital Picture Frame Instruction Manual

Model: PI7002AWB

INTRODUCTION

This manual provides detailed instructions for the setup, operation, and maintenance of your Pandigital Panimage PI7002AWB 7-Inch LED Digital Picture Frame. Please read this manual thoroughly before using the device to ensure proper functionality and to maximize your enjoyment of its features.

PRODUCT OVERVIEW

The Pandigital Panimage PI7002AWB is a 7-inch LED digital picture frame designed to display your digital photos and videos. It features a 480x234 resolution screen, 256MB of internal memory capable of storing up to 2000 compressed images, and a versatile 5-in-1 card reader.

Key Features:

- 7-inch LED display with 480x234 resolution.
- 256MB internal memory, storing up to 2000 compressed images.
- Integrated 5-in-1 card reader supporting xD, MMC, SD, MSPro, and MS formats.
- Clock and calendar functions.
- Plug-and-play functionality for easy photo transfer.

Package Contents:

- Pandigital Panimage PI7002AWB Digital Picture Frame
- Power Adapter
- User Manual (this document)
- (USB cable not included)



Figure 1: Front view of the Pandigital Panimage PI7002AWB digital picture frame. The frame is black with a white mat, displaying a vibrant image of children blowing out birthday candles on a cake.

SETUP

1. **Unpacking:** Carefully remove all components from the packaging. Retain the packaging for future storage or transport.
2. **Power Connection:** Connect the provided power adapter to the DC IN port on the back of the picture frame. Plug the other end into a standard electrical outlet. The frame will power on automatically.
3. **Initial Setup:** Follow the on-screen prompts to select your preferred language, set the date, and time.
4. **Positioning:** Place the frame on a stable, flat surface or mount it on a wall using appropriate hardware (not included). Ensure adequate ventilation around the device.



Figure 2: Side view illustrating the power switch, DC power input, and various memory card slots on the Pandigital Panimage PI7002AWB frame.

OPERATING INSTRUCTIONS

Loading Photos:

There are two primary methods for loading photos onto your digital picture frame:

1. Using a Memory Card:

- Insert a compatible memory card (xD, MMC, SD, MSPro, or MS) into the appropriate slot on the side of the frame.
- The frame will automatically detect the card and may prompt you to start a slideshow or transfer images.
- Navigate through the on-screen menu to select photos for display or transfer them to the internal

memory.

2. Connecting to a Computer (USB):

- Connect the picture frame to your computer using a USB cable (not included).
- The frame will appear as a removable storage device on your computer.
- Drag and drop your desired photos and videos directly into the frame's internal memory. The frame can store up to 2000 compressed images.
- Safely eject the device from your computer before disconnecting the USB cable.

Starting a Slideshow:

Once photos are loaded onto the internal memory or a memory card is inserted, the frame will typically begin a slideshow automatically. You can customize slideshow settings (e.g., transition effects, display duration) through the on-screen menu, usually accessed via buttons on the frame or a remote control (if included).

Clock and Calendar Function:

The frame includes a built-in clock and calendar. These features can be accessed and configured through the main menu. You can set the time, date, and choose to display them alongside your photos or as a standalone screen.

MAINTENANCE

- **Cleaning the Screen:** Use a soft, lint-free cloth to gently wipe the screen. For stubborn smudges, slightly dampen the cloth with water or a screen-safe cleaning solution. Avoid harsh chemicals.
- **Cleaning the Frame:** Wipe the frame's exterior with a dry, soft cloth.
- **Storage:** If storing the frame for an extended period, disconnect it from power and store it in a cool, dry place, preferably in its original packaging.

TROUBLESHOOTING

Problem	Possible Solution
Frame does not power on.	Ensure the power adapter is securely connected to both the frame and a working electrical outlet. Try a different outlet.
Photos are not displaying.	Check if the memory card is inserted correctly. Verify that photos are in a compatible format (e.g., JPEG) and stored in the root directory or a recognized folder. Ensure photos are transferred to internal memory if using USB.
Images appear distorted or low resolution.	Ensure the images are of sufficient resolution for the frame's 480x234 display. Very low-resolution images may appear pixelated.
Cannot transfer files from computer.	Verify the USB cable is functioning and properly connected. Ensure the frame is recognized as a removable drive by your computer. Try restarting both the computer and the frame.

SPECIFICATIONS

- **Model:** PI7002AWB
- **Screen Size:** 7 Inches
- **Display Type:** LED

- **Resolution:** 480x234
- **Internal Memory:** 256MB (stores up to 2000 compressed images)
- **Card Reader:** 5-in-1 (xD, MMC, SD, MSPro, MS)
- **Connectivity:** USB (for PC connection)
- **Product Dimensions:** 12 x 4 x 11.5 inches
- **Item Weight:** 3.15 pounds
- **Color:** Black
- **Additional Functions:** Clock, Calendar

SAFETY INFORMATION

- Do not expose the device to water or excessive moisture.
- Avoid placing the device near heat sources or in direct sunlight for prolonged periods.
- Use only the provided power adapter.
- Do not attempt to disassemble or repair the device yourself. Refer to qualified service personnel.
- Keep out of reach of small children to prevent accidental damage or injury.