

GUESS W95088L1

GUESS W95088L1 Analog Silver Dial Women's Watch User Manual

Model: W95088L1

INTRODUCTION

This manual provides comprehensive instructions for the proper setup, operation, maintenance, and troubleshooting of your GUESS W95088L1 Analog Silver Dial Women's Watch. Please read this manual carefully before using your watch to ensure optimal performance and longevity.

PRODUCT OVERVIEW

The GUESS W95088L1 is an analog quartz watch designed for women, featuring a silver dial and a brass band. Its elegant design combines functionality with a stylish aesthetic.

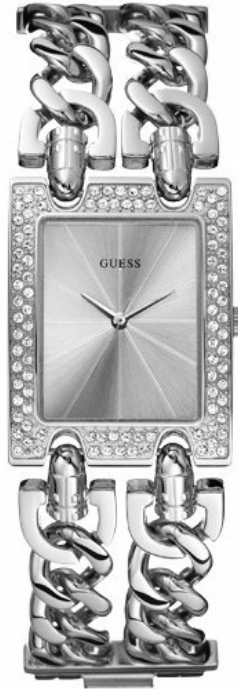


Figure 1: Front view of the GUESS W95088L1 Analog Silver Dial Women's Watch. This image displays the rectangular silver dial, the brass band, and the overall design of the watch.

SETUP

Setting the Time

1. **Pull out the crown:** Gently pull the crown (the small knob on the side of the watch case) out to the first position.
2. **Adjust the time:** Rotate the crown clockwise or counter-clockwise to move the hour and minute hands to the correct time.
3. **Push in the crown:** Once the time is set, push the crown back into its normal position. The watch will begin to run.

Initial Battery Check

Your watch comes with a pre-installed battery. If the watch is not running upon arrival, gently pull out and push in the crown to ensure it is fully engaged. If it still does not run, the battery may need replacement. Refer to the "Maintenance" section for battery information.

OPERATING INSTRUCTIONS

Time-Telling

The GUESS W95088L1 is an analog watch, displaying time with hour, minute, and second hands on a silver dial. Read the time by observing the position of these hands relative to the hour markers.

Water Resistance

This watch has a water resistance depth of 10 meters. This means it is suitable for splashes or brief immersion in water, but it is *not* recommended for swimming, showering, or diving. Avoid operating the crown while the watch is wet.

MAINTENANCE

Cleaning Your Watch

- **Case and Dial:** Wipe the watch case and dial glass with a soft, dry, lint-free cloth. For stubborn dirt, a slightly damp cloth can be used, followed by immediate drying.
- **Band:** For the brass band, use a soft cloth. Avoid harsh chemicals or abrasive materials that could damage the finish.

Battery Replacement

The watch is powered by a Lithium Metal battery. When the watch stops running, it indicates the battery needs replacement. Battery replacement should ideally be performed by a qualified watch technician to ensure proper sealing and maintain water resistance.

Storage

When not in use, store your watch in a cool, dry place away from direct sunlight, extreme temperatures, and strong magnetic fields.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Watch not running	Battery depleted; Crown not pushed in	Push the crown fully in. If still not running, replace the battery (professional service recommended).
Time is incorrect	Time not set correctly; Crown accidentally pulled out	Reset the time as described in the "Setting the Time" section. Ensure the crown is fully pushed in.
Condensation inside watch	Exposure to extreme temperature changes or water ingress	Seek professional service immediately to prevent damage. Avoid further exposure to moisture.

If you encounter issues not listed here or if the suggested solutions do not resolve the problem, please contact GUESS customer support or an authorized service center.

SPECIFICATIONS

- **Model Number:** W95088L1

- **Dial Color:** Silver
- **Case Shape:** Rectangular
- **Dial Glass Material:** Mineral
- **Band Color:** Silver
- **Band Material:** Brass
- **Watch Movement Type:** Quartz
- **Watch Display Type:** Analog
- **Case Material:** Brass
- **Case Diameter:** 38 millimeters (Note: Product specifications also list 28 Millimetres, please verify with product packaging if discrepancy exists.)
- **Water Resistance Depth:** 10 meters
- **Battery Type:** 1 Lithium Metal battery (included)
- **Product Dimensions:** 13 x 13 x 13 cm
- **Item Weight:** 68 g
- **Manufacturer:** Timex (as per product specifications, though brand is GUESS)

WARRANTY INFORMATION

This GUESS watch comes with a **2-year manufacturer warranty** on manufacturing defects. The warranty type is Manufacturer. Please retain your proof of purchase for any warranty claims. The warranty does not cover normal wear and tear, accidental damage, or damage resulting from improper use or unauthorized repairs.

For detailed warranty terms and conditions, please refer to the warranty card included with your product or visit the official GUESS website.

CUSTOMER SUPPORT

For technical assistance, service, or warranty inquiries, please contact GUESS customer support. Contact information can typically be found on the official GUESS website or on the product packaging.

Online Resources: You may find additional support and FAQs on the official GUESS website: www.guess.com

