

## CHUNGHOP K-108ES

# CHUNGHOP K-108ES Universal Air Conditioner Remote Control User Manual

Model: K-108ES

## INTRODUCTION

The CHUNGHOP K-108ES is a universal remote control designed for a wide range of air conditioners. It offers convenient control over various functions, making it an ideal replacement for damaged or lost original remote controls. This remote features an LCD display for clear operation and a power-off memory function to retain settings.

### Key Features:

- Compatible with most air conditioner brands and models worldwide.
- Supports both manual and automatic code searching for easy setup.
- Includes a timer function for scheduled operation.
- Power cut-off memory retains settings after battery changes.
- Brand button pairing for quick configuration.

## CODE

ACSOM	980	KTY004	288
ADC	861	KTY005	289
AIDELONG	293-295	LG	600-609
AITE	296-299	LIANGYU	780
AKIRA	796-797	LIKEAIR	386-387
ALPIN	989-991,998	LITTLESWAN	453
AMCOR	501,508,509,532, 973,978,979	LONGHE	861
AMICO	982	LOREN-SEBO	801-803
AOKE	301-302	MCQUAY	790-795
AOLI	300	MEILING	388-391
APTON	862	MIDEA	040-058
AUCMA	210-229,933	MINGXING.BOYIN	290
AUX	180-199	mitsubishi	551-599
BAIXUE	299	MITSUKA	904
BEIJINGJINGDIAN	304	NATIONAL/Panasonic	660-689
BIG-THUMB	331	NIKKO	810-811
BLUE STAR	057,550,887	NISO	398-399,497

BOERKA	630,305-306	NUOCA	994
BORLER	307	OGENERAL	659,717,718,719
BOSHI	310	OLYMPUS	995-996
BOSHIGAO	308-309	OPAL	997
CAIXING	311	PANDA	464-466
CARRIER	599,690-699,890-899	PEREG	998
CHANGFENG	190	PILOT	902
CHANGFU	835-838	PINSHANG,XINHUABAO	290
CHANGHONG	059-079,934,947	PUYI	862
CHANGLING	312-323	QIXING	393
CHENGYUAN	324	RAYBO	371-383
CHIGO	080-099	RHOSS	903
CHUANGHUA	325-328	RICAI	394
CHUANYAN	861	RIJIANG	395-397
CHUNLAN	170-179	ROWA	383-385
COLROLLA	861	SACON	414
CONROWA	337-341	SAMSUNG	610-629
CONSUL	993	SANYONEC	500-550,860,943,946
CORONA	760-769	SANZUAN	190
CROWN	861	SAPORO	861
DAEWOO	332-333	SAST	450-452
DAIKIN	740-759	SENSOR	860
DAJINXING	329-330	SERENE	499
DAKE	861	SHAMEI	400
DAOTIAN	821-824	SHANGLING	403-409
DELONGHI	900	SHANXING	401-402
DIY	044,090,092,095	SHANYE	862
DONGXIA	334-335	SHARP	720-739
DONGXINBAO	260-268	SHENBAO	410-411
DUNAN	336	SHENGFENG	412
ELCO	982	SHENGFENG\FEILU	413
ELECTER	981-986	SHINCO	200-209
ELECTROLUX	471-474,807-808,250,906	SHINING	415
FEDDERS	878	SHUANGLU	416-418,946
FEIEDRICH	879	SIGMA	447
FEIGE	829-830	SOGO	291
FEILU	240-249	SONGLINXIA	862
FERROLI	901	SONGXING	419
FIRST	864	SOVA	292,420
FRESTECH	270-279,944-945	SOWA	862-863
FUJITSU	700-719	SOYEA	421-422
FUNIKI	992	SPEED	987
GALANZ	124-129,134-139,936-940	SRTC	423
GEER	342-343	STARIGHT-AIRCON	880
GLEE	280	SUNBURG	817-820
GOLDSTAR	303	TADIAIR	501,508,509,532
GREE	000,020-039	TADIRAN	501,508,509,532,630,969,978,979,991
GUANGDA	345-346	TAIYA	862
GUQIAO	344	TCL	120-133
HAIER	001-019	TEAC	850-859
HELTON	863	TECO	831-834
HEMILTON	095	TIANJINKONGTIAO	424
HICON	391-392	TIANYUAN	425-428
HISENSE	230-239	TOBO	250-269
HITACHI	640-659	TONGLI	429-430
HONGYI	347	TOSHIBA	630-639
HUABAO	100-109	TOTALINE	548
HUAGAO	348	TOYO	825-828
HUAKE	349-350	TRANE	812-816
HUALING	150-169,045	UNI-AIR	368-369
HUAMEI	351-352	UTTLEDUCK	454-456
HUANGHE	353	VIDEOCON	597,627,628,629,884
HUAWEI	281	VOLTAS	056,057,549,598,609,627,628,629
HUIFENG	354-356,357,360	WANBAO	431-433
HYUNDAI	780-789	WANGZI	861
INYCIN	475-483	WEILI	434-443,553-576
JIALE	358	WEITELI	444
JIANGNAN	359	WHIRLPOOL	119,550,770-774,739
JINBEIJING	361-362	WUFENG	445-446
JINDA	491-492	XILENG	448-449
JINSONG	363-365	XINGHE	462-463
JMSTAR	360	XINLE	457-460
JOHNSO	282	XINLING	461
KANGLI	368-370	XIONGDI	862
KELONG	110-119	YAIR	467-471,044,013-015
KLIMATAIR	797-800	YAOMA	470
KONKA	366-367	YIDONG	499
KRIS	804-805	YORK	775-779
KT02_D001	283	YUETU	949
KT02_D002	284	YUTU	484-490
KTY001	285	ZHONGYI	493-494
KTY002	286	ZUODAN	495
KTY003	287	OTHER	496,498,821-828,839-849,865-877,905-976,999

Image: Front view of the CHUNGHOP K-108ES Universal Air Conditioner Remote Control, showing its LCD screen and button layout.

## INSTALLATION AND SETUP

## 1. Battery Installation

The remote control requires two AAA batteries (not included).

1. Open the battery compartment cover on the back of the remote control.
2. Insert two AAA alkaline batteries, ensuring correct polarity (+ and -).
3. Close the battery compartment cover securely.

## 2. Programming the Remote Control

There are two methods to program the remote control to your air conditioner: Automatic Search and Manual Code Entry.

### Method A: Automatic Search

1. Ensure your air conditioner is powered on.
2. Point the remote control towards the air conditioner.
3. Press and hold the 'SET' button for approximately 3-5 seconds until the code on the LCD screen starts flashing.
4. Release the 'SET' button. The remote will now automatically search for the correct code, sending power signals to the air conditioner.
5. When the air conditioner responds (e.g., turns on, off, or changes mode), immediately press any button (e.g., 'OK' or 'POWER') to confirm the code.
6. Test all functions to ensure proper operation. If not all functions work, repeat the process to find a more compatible code.

### Method B: Manual Code Entry

This method requires you to find the specific code for your air conditioner brand from the provided code list.

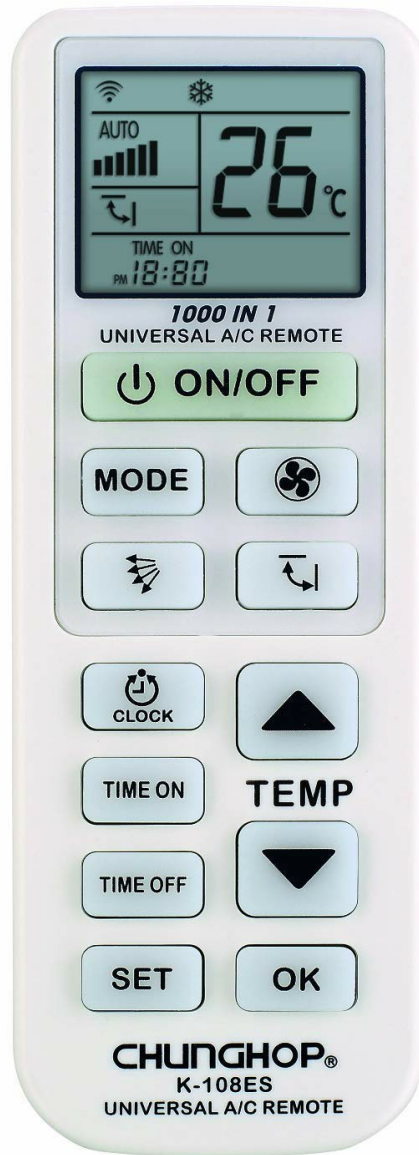


Image: A comprehensive list of air conditioner brands and their corresponding programming codes for the universal remote control.

1. Locate your air conditioner brand in the code list provided in this manual or with your remote control. Note down all corresponding codes.
2. Ensure your air conditioner is powered on.
3. Point the remote control towards the air conditioner.
4. Press and hold the 'SET' button for approximately 3-5 seconds until the code on the LCD screen starts flashing.
5. Use the 'Temperature Up' or 'Temperature Down' buttons to cycle through the codes you noted down.
6. When the air conditioner responds (e.g., turns on, off, or changes mode), immediately press any button (e.g., 'OK' or 'POWER') to confirm the code.
7. Test all functions to ensure proper operation. If not all functions work, try the next code for your brand until full functionality is achieved.

## OPERATING INSTRUCTIONS

### Basic Functions

- **POWER:** Press to turn the air conditioner on or off.
- **MODE:** Press to cycle through operating modes: Auto, Cool, Dry, Fan, Heat.
- **TEMP ▲/▼:** Press to adjust the temperature setting up or down.
- **FAN:** Press to adjust the fan speed: Auto, Low, Medium, High.
- **SWING:** (If available on your AC unit) Press to activate or adjust the air swing function.

## Timer Function

The timer function allows you to set a specific time for the air conditioner to turn on or off automatically.

1. **Timer On:** With the AC off, press the 'TIMER ON' button. The timer indicator will flash. Use the temperature buttons to set the desired time for the AC to turn on. Press 'TIMER ON' again to confirm.
2. **Timer Off:** With the AC on, press the 'TIMER OFF' button. The timer indicator will flash. Use the temperature buttons to set the desired time for the AC to turn off. Press 'TIMER OFF' again to confirm.
3. To cancel a set timer, press the corresponding 'TIMER' button again before the set time.

## MAINTENANCE

---

### Battery Replacement

Replace the batteries when the remote control's display becomes dim or the remote stops responding consistently. Always replace both batteries at the same time with new AAA alkaline batteries.

### Cleaning

To clean the remote control, wipe it gently with a soft, dry cloth. Do not use liquid cleaners, abrasive materials, or chemical solvents, as these can damage the remote's surface or internal components.

## TROUBLESHOOTING

---

- **Remote not responding:**  
Check if the batteries are inserted correctly and have sufficient charge. Replace batteries if necessary. Ensure there are no obstructions between the remote and the air conditioner's receiver.
- **Air conditioner not responding to commands:**  
The remote may not be programmed correctly for your specific air conditioner model. Re-attempt the programming process using either the automatic search or manual code entry method. Try different codes for your brand if using manual entry.
- **Some functions not working:**  
Even if the AC responds, some functions might not work if the code is not a perfect match. Try re-programming the remote with a different code for your brand. Universal remotes may not support all advanced features of every AC unit.
- **LCD display is dim or blank:**  
This indicates low battery power. Replace the batteries.

## PRODUCT SPECIFICATIONS

---

Feature	Detail
---------	--------

Brand	CHUNGHOP
Model Number	K-108ES
Compatible Devices	Air Conditioner
Maximum Number of Supported Devices	500
Maximum Range	8 Meters
Battery Type	2 AAA Alkaline batteries required
Button Quantity	12

## WARRANTY AND SUPPORT

---

### Warranty Information

This CHUNGHOP K-108ES Universal Air Conditioner Remote Control comes with a Limited Warranty. Please refer to the warranty card included with your purchase or contact the retailer for specific terms and conditions regarding coverage and duration.

### Customer Support

For further assistance, troubleshooting not covered in this manual, or warranty claims, please contact the retailer where you purchased the product. Ensure you have your product model number (K-108ES) and proof of purchase available when seeking support.