

Karlsson KW0018GY

Karlsson KW0018GY Wall Clock User Manual

Model: KW0018GY

INTRODUCTION

Thank you for purchasing the Karlsson KW0018GY Wall Clock. This manual provides essential information for the proper setup, operation, and maintenance of your new clock. Please read this manual thoroughly before use and retain it for future reference.

The Karlsson KW0018GY is a stylish, radio-controlled wall clock featuring an aluminum casing and a grey finish. Its design, by Swirl Studio, ensures accurate timekeeping and a modern aesthetic for any interior.

SAFETY INFORMATION

- Keep the clock away from direct sunlight, extreme temperatures, and high humidity.
- Do not expose the clock to water or other liquids.
- Use only the specified battery type (AA).
- Dispose of used batteries responsibly according to local regulations.
- Do not attempt to disassemble or repair the clock yourself. Refer all servicing to qualified personnel.
- Keep batteries out of reach of children.

PACKAGE CONTENTS

Please check the package contents to ensure all items are present:

- 1 x Karlsson KW0018GY Wall Clock
- 1 x User Manual (this document)

Note: An AA battery is required for operation and is not included in the package.

SETUP

1. Battery Installation

1. Locate the battery compartment on the back of the clock.
2. Insert one (1) AA battery, ensuring the correct polarity (+ and -) as indicated inside the compartment.
3. Close the battery compartment cover securely.

2. Initial Time Setting (Radio-Controlled Function)

The Karlsson KW0018GY is a radio-controlled clock. Upon battery insertion, the clock will automatically search for the time signal. This process may take several minutes to a few hours, depending on your location and signal strength.

- Place the clock near a window or in an area with good reception, away from electronic devices that may cause interference.
- The hands will typically move to the 12 o'clock position and then begin to set themselves to the correct time once the signal is received.
- Avoid manually adjusting the hands, as this can interfere with the radio-controlled mechanism.

3. Mounting the Clock

The clock is designed for wall mounting. Use a suitable screw or hook (not included) in a sturdy wall location.

- Ensure the mounting point is strong enough to support the clock's weight (approximately 1.58 kg).
- Hang the clock securely using the integrated hanging slot on the back.



Image: Front view of the Karlsson KW0018GY Wall Clock. The clock features a brushed aluminum face with black hour and minute hands, and a thin silver second hand. The hour markers are a combination of rectangular cutouts and small dots. The brand name "KARLSSON" is subtly printed near the top center.

OPERATING THE CLOCK

Once the battery is installed and the radio signal is acquired, the clock will automatically display the correct time and adjust for Daylight Saving Time (DST) changes.

- The clock operates continuously as long as the battery has sufficient power.
- No manual adjustments are typically required after the initial setup, thanks to the radio-controlled feature.

MAINTENANCE

Cleaning

To clean the clock, gently wipe the surface with a soft, dry cloth. Do not use abrasive cleaners, solvents, or chemical sprays, as these can damage the finish.

Battery Replacement

When the clock hands stop moving or the time becomes inaccurate, it is likely time to replace the battery. Follow the battery installation steps outlined in the "Setup" section.

- Always replace with a fresh AA battery.
- After replacing the battery, the clock will re-initiate the radio-controlled time setting process.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Clock not working after battery insertion.	Battery inserted incorrectly or battery is dead.	Check battery polarity. Replace with a new AA battery.
Clock hands are stuck or not moving.	Low battery power. Obstruction.	Replace battery. Ensure hands are not obstructed by the clock face or each other.
Clock is not setting to the correct time.	Poor radio signal reception. Interference.	Move the clock to a different location, preferably near a window and away from other electronics. Allow several hours for signal acquisition.
Time is incorrect after a power outage or battery change.	Clock needs to re-sync with the radio signal.	Allow the clock to automatically re-sync. This may take some time.

SPECIFICATIONS

Feature	Detail
Brand	Karlsson
Model	KW0018GY
Type	Wall Clock
Display Type	Analog
Shape	Round
Material	Aluminum
Color	Grey
Power Source	1 x AA Battery (not included)
Dimensions (Packaging)	37.4 x 37.4 x 8.8 cm
Item Weight	1.58 Kilograms
Special Feature	Radio-controlled

WARRANTY AND SUPPORT

Specific warranty details for the Karlsson KW0018GY Wall Clock are not provided within this manual. For information regarding warranty coverage, technical support, or replacement parts, please refer to the official Karlsson website or contact their customer service directly.

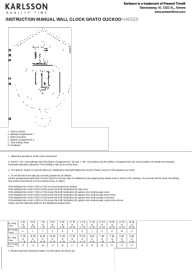



You may find additional support resources by visiting the official Karlsson website:
www.karlssonclocks.com


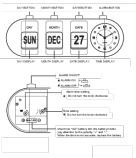
OFFICIAL PRODUCT VIDEOS

No official product videos from the seller are available for this model at this time.

© 2023 Karlsson. All rights reserved.

Related Documents - KW0018GY

	<p>Karlsson Grato Cuckoo Wall Clock KA6026 Instruction Manual</p> <p>Detailed instructions for setting up and operating the Karlsson Grato Cuckoo Wall Clock model KA6026, including battery installation, time setting, volume control, and bird voice activation. Includes warranty and maintenance information.</p>
	<p>Karlsson KA5652BK/KA5652DW Block Alarm Clock: Instruction Manual & Features</p> <p>Official instruction manual for the Karlsson KA5652BK and KA5652DW Block alarm clock. Learn how to set time, date, alarms, use temperature display, and power saving features.</p>
	<p>Karlsson KA6039 Alarm Clock: User Manual and Features</p> <p>Comprehensive guide to the Karlsson KA6039 alarm clock, covering product specifications, features like display modes, alarms, brightness settings, sound control, and usage instructions. Includes setup, maintenance, and troubleshooting tips.</p>
	<p>Karlsson KA6070 LED Cuckoo Alarm Clock Instruction Manual</p> <p>Detailed instructions and warnings for the Karlsson KA6070 LED Cuckoo Alarm Clock, covering setup, functions, alarm settings, temperature, and maintenance.</p>

<p>BROGRUND</p> <p><small>Original design and development</small></p> 	<p>BROGRUND Battery Safety and Warnings</p> <p>Safety advice and warnings for using batteries with the IKEA BROGRUND product, covering handling, charging, and disposal.</p>
<p>KARLSSON</p> <p><small>Handcrafted in Sweden</small></p> <p><small>INSTRUCTION MANUAL / FÖR KLICK-RETRO TUBE KLOCKAN (KA6045)</small></p> 	<p>Karlsson KA6045 Retro Tube Calendar Flip Clock - Instruction Manual</p> <p>Comprehensive instruction manual for the Karlsson KA6045 Retro Tube Calendar Flip Clock, covering setup, operation, alarm setting, maintenance, and warranty information.</p>