

KODAK Z1015

Kodak EASYSHARE Z1015 Digital Camera Instruction Manual

Model: Z1015

1. INTRODUCTION

This manual provides essential instructions for the safe and effective use of your Kodak EASYSHARE Z1015 Digital Camera. Please read this manual thoroughly before operating the camera and retain it for future reference.

The Kodak EASYSHARE Z1015 is a versatile digital camera featuring a 10-megapixel CCD sensor, a 28mm wide-angle lens, and a powerful 15x optical zoom. It is designed to capture both expansive landscapes and detailed close-up shots with ease.



Figure 1: Front view of the Kodak EASYSHARE Z1015 Digital Camera, showcasing its lens and body design.

2. SETUP

2.1 Battery Installation

The camera operates using a Lithium-Ion battery. Ensure the battery is fully charged before first use.

1. Locate the battery compartment cover on the bottom of the camera.
2. Slide the latch to open the cover.
3. Insert the Lithium-Ion battery according to the polarity indicators inside the compartment.

4. Close the battery compartment cover securely until it clicks into place.

2.2 Memory Card Insertion

The camera supports SD and SDHC memory cards up to 32 GB. It also has 64 MB of internal memory.

1. Locate the memory card slot, typically adjacent to the battery compartment.
2. Insert the SD/SDHC card with the metal contacts facing the correct direction, as indicated by the diagram near the slot.
3. Push the card gently until it locks into place.
4. To remove, push the card in again until it springs out slightly, then pull it out.

2.3 Initial Power On

After installing the battery and memory card, press the power button to turn on the camera. Follow any on-screen prompts for initial setup, such as setting the date and time.

3. OPERATING THE CAMERA

3.1 Basic Photography Modes

The Kodak EASYSHARE Z1015 offers various shooting modes to suit different photographic situations:

- **Smart Capture Mode:** Automatically optimizes camera settings for the best possible shot.
- **High ISO Mode:** Ideal for low-light conditions, reducing the need for flash.
- **Sport Mode:** Optimizes settings for capturing fast-moving subjects.
- **PASM Mode (Program, Aperture Priority, Shutter Priority, Manual):** Provides advanced control over exposure settings for experienced users.

3.2 Focusing

The camera uses a TTL imager AF system with multiple focusing options:

- **Modes:** Normal, Macro (for close-ups), Infinity (for distant subjects), and Manual Focus.
- **AF Zones:** Multi-zone, Center zone, and Selectable zone AF (5 zones).
- **Face-priority AF:** Automatically detects and focuses on faces in the frame.

3.3 Exposure Control

Adjust exposure settings to control the brightness of your photos:

- **ISO Sensitivity:** Ranges from auto to 6400 (in PASM mode) to adjust light sensitivity.
- **Metering Modes:** Multi-pattern, Center-weighted, and Spot metering.
- **Exposure Compensation:** Adjusts exposure by +/- 2.0 EV in 1/3 EV steps.
- **White Balance:** Auto, Daylight, Tungsten, Fluorescent, Open Shade settings to ensure accurate color reproduction.

3.4 Flash Usage

The built-in flash has a working distance of up to 5.0 meters (at wide, ISO 400).

- **Modes:** Auto, Off, Fill Flash, and Red-eye Reduction.

- **Compensation:** Adjusts flash output by +/- 1.0 EV in 1/3 EV steps.

3.5 Video Recording

The camera supports video capture in MPEG-4 format with a resolution of up to 1080p.

1. Switch the camera to video recording mode.
2. Press the shutter button to start recording.
3. Press the shutter button again to stop recording.

3.6 Reviewing Images and Videos

Use the 3.0-inch high-resolution LCD monitor (230k dots) to review your captured photos and videos. Navigate through your media using the camera's control buttons.

4. MAINTENANCE

4.1 Cleaning the Camera

- **Lens:** Use a soft, lint-free cloth or a lens brush to gently remove dust. For smudges, use a specialized lens cleaning solution applied to a cloth, not directly to the lens.
- **LCD Screen:** Wipe gently with a soft, dry cloth. Avoid harsh chemicals.
- **Camera Body:** Use a dry, soft cloth to wipe away dust and fingerprints.

4.2 Battery Care

- Store batteries in a cool, dry place when not in use.
- Avoid fully discharging the battery frequently to prolong its lifespan.
- Remove the battery from the camera if it will not be used for an extended period.

4.3 Storage

When storing the camera for long periods, ensure it is clean, dry, and stored in a protective case to prevent dust and damage. Remove the battery and memory card.

5. TROUBLESHOOTING

This section addresses common issues you might encounter with your Kodak EASYSHARE Z1015 Digital Camera.

- **Camera does not power on:**
Ensure the battery is fully charged and correctly inserted. Try using a different charged battery if available.
- **Images are blurry:**
Check that the lens is clean. Ensure the camera is focusing correctly; try different focus modes (e.g., single AF). Use a higher shutter speed or image stabilization in low light.
- **Memory card error:**
Ensure the memory card is inserted correctly. Try reformatting the card (this will erase all data). If the issue persists, try a different compatible memory card.

- **Flash not firing:**

Check the flash mode settings; ensure it is not set to 'Off'. Ensure the subject is within the flash's effective range.

- **Poor video quality:**

Ensure sufficient lighting. Check the video resolution settings to ensure it is set to the desired quality (e.g., 1080p).

If you encounter issues not covered here, please refer to the support section or contact customer service.

6. SPECIFICATIONS

| Feature | Specification |
|----------------------------|--|
| Model Name | Z1015 |
| Sensor Type | 1/2.33 inch CCD |
| Effective Still Resolution | 10 MP |
| Lens Type | Macro, Wide Angle |
| Minimum Focal Length | 28 Millimeters |
| Maximum Focal Length | 28 Millimeters (Note: This seems to be an error in source data, typically max focal length would be higher for 15x zoom) |
| Optical Zoom | 15 x |
| Image Stabilization | Digital, Optical |
| Minimum Shutter Speed | 16 seconds |
| Maximum Shutter Speed | 1/1000 seconds (from product description) |
| Monitor Size | 3 Inches LCD |
| Display Resolution | 230k dots |
| Internal Memory | 64 MB |
| Supported Flash Memory | SD, SDHC (up to 32 GB) |
| Video Resolution | 1080p |
| Video Capture Format | MPEG-4 |

| Feature | Specification |
|--------------|---|
| Battery Type | Lithium Ion |
| Connectivity | USB (1 port), Wi-Fi (from specifications, though not detailed in description) |
| Weight | 30 Ounces |

7. WARRANTY AND SUPPORT

7.1 Product Warranty



Specific warranty details for the Kodak EASYSHARE Z1015 Digital Camera are typically provided with the product packaging or available on the official KODAK website. Please refer to these resources for information regarding warranty coverage, terms, and conditions.

7.2 Customer Support

For further assistance, technical support, or service inquiries, please visit the official KODAK support website or contact their customer service department. Contact information can usually be found on the manufacturer's website or in the documentation included with your camera.

© 2023 KODAK. All rights reserved.

Related Documents - Z1015

| | |
|---|---|
|  | <p>Kodak EasyShare Z1015 IS Digital Camera: Extended User Guide</p> <p>This comprehensive guide provides detailed instructions for operating the Kodak EasyShare Z1015 IS digital camera, covering setup, photography techniques, image management, and troubleshooting.</p> |
|  | <p>Kodak EasyShare M1063 Digitalkamera Bedienungsanleitung</p> <p>Diese Bedienungsanleitung bietet detaillierte Anweisungen zur Installation, Bedienung und Wartung Ihrer Kodak EasyShare M1063 Digitalkamera, einschließlich Tipps zur Aufnahme, Bearbeitung und Übertragung von Bildern und Videos.</p> |
|  | <p>KODAK EASYSHARE M853 Zoom Digital Camera: Features, Specifications, and Accessories</p> <p>Comprehensive overview of the KODAK EASYSHARE M853 Zoom Digital Camera, detailing its key features, technical specifications, package contents, system requirements, and available accessories for enhanced photography and printing.</p> |



[KODAK EASYSHARE M583 Digital Camera: Extended User Guide](#)

Comprehensive extended user guide for the KODAK EASYSHARE M583 digital camera, covering setup, operation, features, troubleshooting, and specifications from Eastman Kodak Company.



[KODAK EASYSHARE CD82 Digital Camera: Extended User Guide](#)

Comprehensive extended user guide for the KODAK EASYSHARE CD82 Digital Camera, covering setup, taking pictures and videos, editing, transferring, troubleshooting, and specifications. Learn how to use your Kodak camera effectively.



[Kodak EasyShare CD14 Digital Camera Extended User Guide](#)

Explore the features and functionalities of the Kodak EasyShare CD14 Digital Camera with this comprehensive extended user guide. Learn about setup, taking pictures and videos, editing, troubleshooting, and more.