

Fiskars 152490-1008

Fiskars SureCut Deluxe Paper Trimmer (Model 152490-1008) Instruction Manual

Your guide to precise and effortless paper cutting.

1. PRODUCT OVERVIEW

The Fiskars SureCut Deluxe Paper Trimmer is engineered for accuracy and ease of use, making it an essential tool for various paper crafting, office, and school projects. Its design incorporates features that ensure straight, clean cuts on a variety of materials.

Key Features:

- **SureCut Wire:** A visible wire indicates the exact cut line for unmatched precision.
- **TripleTrack System:** Interlocks the blade and rail for consistent, straight, and steady cuts.
- **Extended Measurements:** A self-leveling, swing-out arm extends up to 15 inches for larger projects.
- **Versatile Cutting:** Ideal for lightweight and medium-weight materials such as photos, cardstock, and vinyl.
- **Safety Features:** Includes a safety lock and a built-in carrying handle for secure transport and storage.
- **Ergonomic Design:** High-profile blade carriage is easy to grip for comfortable and accurate use.

2. COMPONENTS

Familiarize yourself with the main parts of your Fiskars SureCut Deluxe Paper Trimmer:

- **Cutting Base:** The main platform with measurement grids.
- **Cutting Rail:** The clear plastic guide that holds the blade carriage.
- **Blade Carriage:** Houses the cutting blade and slides along the rail.
- **SureCut Wire:** A thin, clear wire within the cutting rail indicating the cut line.
- **Swing-Out Arm:** An extendable ruler for measuring larger materials.

- **Paper Clamp/Smudge Guard:** Helps hold paper in place during cutting.
- **Safety Lock:** Secures the cutting rail for safe storage.
- **Non-Slip Feet:** Located on the underside to prevent movement during use.



Figure 1: Overview of the Fiskars SureCut Deluxe Paper Trimmer, highlighting its compact design and key dimensions.



Figure 2: The paper trimmer with its 6.25-inch base deck and 15.5-inch swing-out arm extended, demonstrating its capacity for larger materials.

3. SETUP

1. **Unpack:** Carefully remove the paper trimmer from its packaging.
2. **Placement:** Place the trimmer on a stable, flat surface. The non-slip feet will help secure it during use.
3. **Unlock Rail:** If the cutting rail is locked, slide the safety lock mechanism to the unlocked position to allow the blade carriage to move freely.
4. **Extend Arm (Optional):** For larger paper sizes, gently pull out the swing-out arm until it clicks into place, extending your measurement surface.

4. OPERATING INSTRUCTIONS


Follow these steps for accurate and clean cuts:

1. **Position Paper:** Lift the cutting rail. Place your paper or material onto the cutting base, aligning the edge you wish to cut with the desired measurement on the grid.

2. **Secure Paper:** Gently lower the cutting rail and use the paper clamp/smudge guard to hold the material firmly in place. Ensure the paper is flat and wrinkle-free.
3. **Align Cut:** Use the SureCut wire as a visual guide to precisely align your cut. The wire indicates exactly where the blade will cut.
4. **Make the Cut:** Hold the paper firmly with one hand. With the other hand, grasp the blade carriage and slide it firmly along the cutting rail from top to bottom (or bottom to top) to make the cut. Apply even pressure for a clean edge.
5. **Remove Material:** Lift the cutting rail and remove your cut material.



Figure 3: Demonstrating the TripleTrack System in action, ensuring the blade and rail interlock for straight and steady cuts.

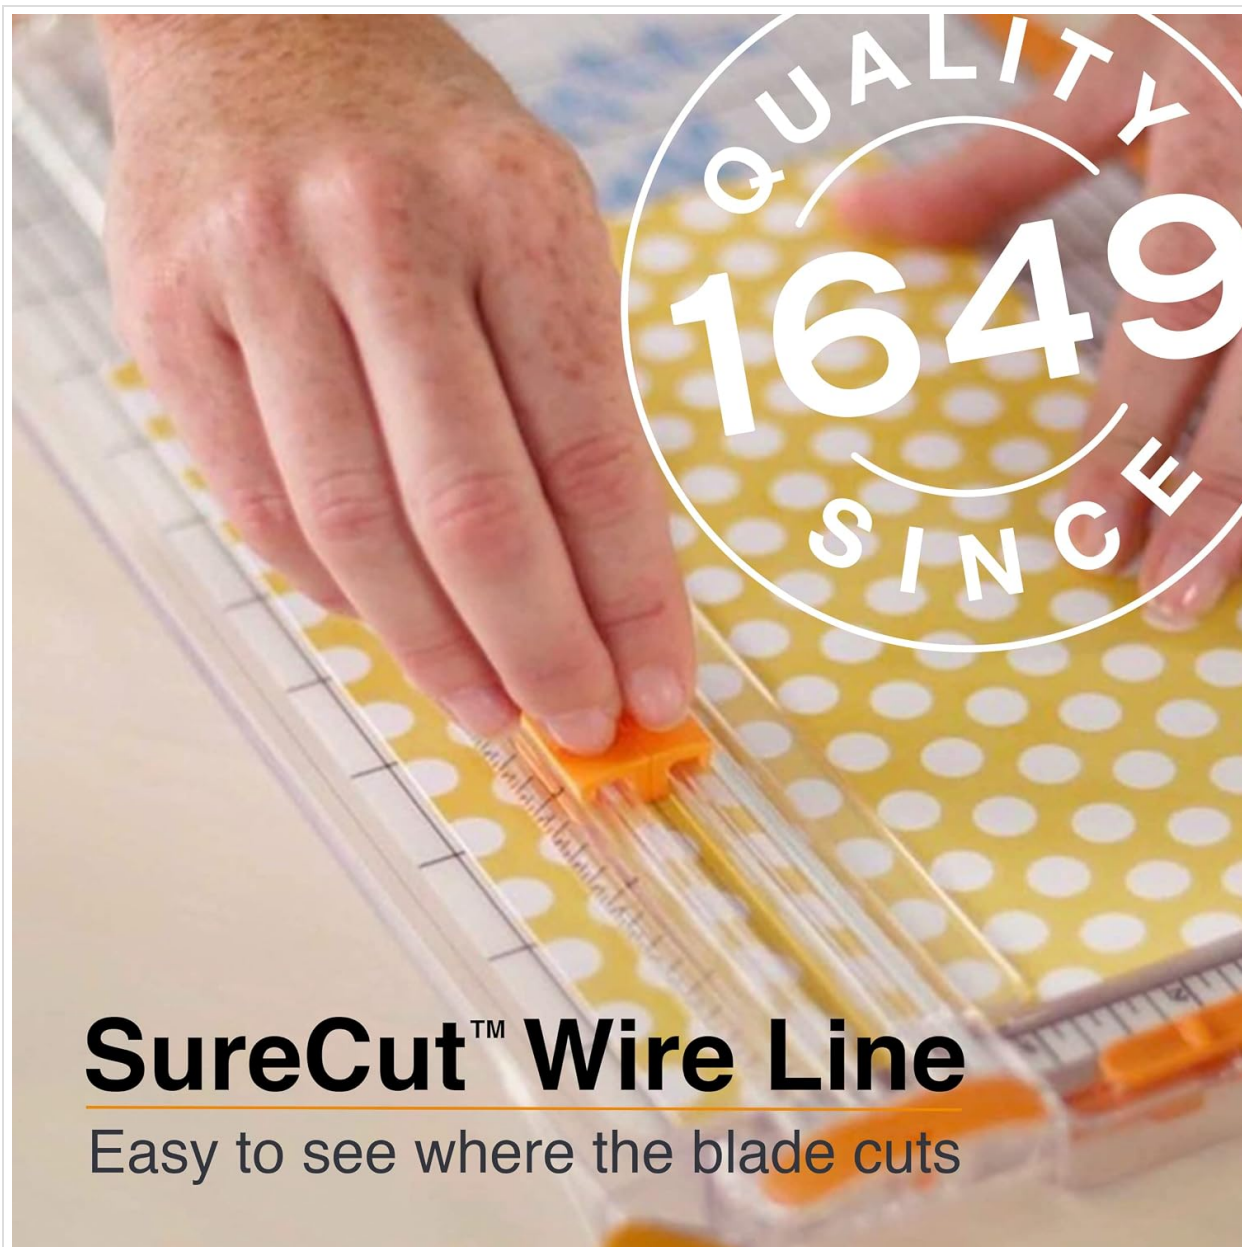

SureCut™ Wire Line

Easy to see where the blade cuts

Figure 4: The SureCut Wire Line provides a clear visual indicator for precise alignment before making a cut.

5. BLADE REPLACEMENT

Over time, the blade may become dull, resulting in less clean cuts. Replacing the blade is a simple process:

1. **Ensure Safety:** Always engage the safety lock before attempting to replace the blade.
2. **Remove Old Blade:** Slide the blade carriage to the middle of the cutting rail. Gently pry open the blade housing to release the dull blade. Dispose of the old blade safely.
3. **Insert New Blade:** Carefully insert a new Fiskars replacement blade into the blade housing, ensuring it snaps securely into place.
4. **Test Cut:** Make a test cut on a scrap piece of paper to ensure the new blade is properly installed and cutting cleanly.

6. CARE AND STORAGE

- **Cleaning:** Wipe the cutting base and rail with a soft, dry cloth to remove paper dust and debris. Avoid abrasive cleaners.

- **Storage:** Store the trimmer in a flat position. Engage the safety lock on the cutting rail to prevent accidental cuts. The lightweight design and built-in handle make it easy to transport and store.

7. TROUBLESHOOTING

- **Uneven or Frayed Cuts:**
 - Ensure the paper is properly aligned and held firmly against the cutting rail.
 - The blade may be dull. Replace with a new Fiskars replacement blade.
 - Check for debris in the cutting channel that might obstruct the blade.
- **Blade Not Moving Smoothly:**
 - Clean the cutting rail and blade carriage to remove any accumulated dust or paper fibers.
 - Ensure the safety lock is fully disengaged.

8. SPECIFICATIONS

Attribute	Detail
Brand	Fiskars
Model Number	152490-1008
Product Dimensions	9.2"L x 15"W x 1"Th
Material	Paper (for cutting)
Recommended Uses	Crafting, Office, School
Item Weight	1.2 Pounds
Cut Length	12 inches (with 15" extended arm)
Blade Type	Rotary (SureCut, TripleTrack System)

9. WARRANTY AND SUPPORT

The Fiskars SureCut Deluxe Paper Trimmer comes with a **Full Lifetime Warranty** (excluding the blade). This warranty guarantees the product against defects in materials and workmanship under normal use. For detailed warranty information and support, please visit the official Fiskars website or contact their customer service. For further assistance or to purchase replacement blades, please refer to the [Fiskars Store](#).