

Simba Toys 106837079

Simba My Music World I-Keyboards 106837079 Instruction Manual

Model: 106837079

INTRODUCTION

This manual provides essential information for the safe and effective use of your Simba My Music World I-Keyboards, model 106837079. This electronic keyboard is designed to introduce children aged 6 and above to musical exploration. It features standard keyboard functions, various instrument sounds, rhythms, demo songs, and the unique ability to connect an MP3 player to play along with your favorite music.

Please read this manual thoroughly before operating the device and retain it for future reference.

SAFETY INFORMATION

- This product is suitable for children aged 6 years and older.
- Use only the recommended battery type (AAA) and ensure correct polarity during installation.
- Do not mix old and new batteries, or different types of batteries.
- Remove batteries if the device will not be used for an extended period.
- Keep the device away from water and moisture. This product is for indoor use only.
- Avoid dropping the device or subjecting it to strong impacts.
- Do not attempt to disassemble or modify the keyboard. Repairs should only be performed by qualified personnel.
- Dispose of batteries and the device responsibly according to local regulations.

PRODUCT OVERVIEW

The Simba My Music World I-Keyboards is a 69 cm electronic musical instrument. It features a full set of keys, a control panel with various function buttons, and a dedicated compartment for connecting an MP3 player.



Figure 1: Overall view of the Simba My Music World I-Keyboard.

Control Panel

The control panel, located above the keys, provides access to various functions including instrument selection, rhythm patterns, demo songs, volume control, tempo adjustment, and recording capabilities.



Figure 2: Detail of the control panel with function buttons.

MP3 Player Connection

A dedicated compartment and audio input jack allow for easy connection of most standard MP3 players, enabling users to play along with their favorite tracks.



Figure 3: MP3 player connected to the keyboard's input.

SETUP

Battery Installation

1. Locate the battery compartment on the underside of the keyboard.
2. Open the battery compartment cover.
3. Insert the required AAA batteries, ensuring correct polarity (+/-) as indicated inside the compartment.
4. Close the battery compartment cover securely.

The keyboard operates on batteries. No assembly is required for the main unit.

OPERATING INSTRUCTIONS

Power On/Off

Locate the power button, typically on the control panel or side of the keyboard. Press it once to turn the keyboard on, and press it again to turn it off.

Playing the Keyboard

Press the keys to produce musical notes. The keyboard features various instrument sounds that can be selected from the control panel.

Instrument Selection

The keyboard offers 8 different instrument sounds. Use the dedicated instrument selection buttons on the control panel to cycle through or directly select sounds such as Piano, Violin, Guitar, Trumpet, Organ, Bell, and others.

Rhythm Functions

Choose from 8 built-in rhythm patterns like Slow Rock, Rock, Waltz, Samba, New Age, and Disco to accompany your playing. Press the rhythm selection buttons to activate and change patterns.

Demo Songs

The keyboard includes 6 demo songs. Press the "Demo" button to play a single demo song, or "Demo All" to play all demo songs consecutively. Press any key or the "Demo" button again to stop playback.

Volume and Tempo Control

- **Volume:** Use the "Volume" up/down buttons to adjust the overall sound level of the keyboard.
- **Tempo:** Use the "Tempo" up/down buttons to increase or decrease the speed of rhythms and demo songs.

Recording and Playback

- **Record:** Press the "Record" button to begin recording your playing. A light may indicate recording is active.
- **Play:** Press the "Play" button to listen to your recorded melody.

MP3 Player Connection

1. Ensure your MP3 player is powered on and has music playing.
2. Connect one end of an audio cable (not included) to the headphone jack of your MP3 player.
3. Connect the other end of the audio cable to the MP3 input jack on the keyboard (located in the dedicated compartment).
4. Adjust the volume on both your MP3 player and the keyboard to a comfortable listening level. You can now play along with your favorite songs.

MAINTENANCE

Cleaning

To clean the keyboard, wipe it with a soft, dry cloth. Do not use abrasive cleaners, solvents, or immerse the device in water. For stubborn dirt, a slightly damp cloth can be used, followed by a dry cloth.

Storage

Store the keyboard in a cool, dry place away from direct sunlight and extreme temperatures. If storing for an extended period, remove the batteries to prevent leakage.

TROUBLESHOOTING

- **No Sound:**
 - Check if the keyboard is powered on.
 - Ensure batteries are correctly installed and not depleted. Replace if necessary.
 - Increase the volume using the volume control buttons.
- **MP3 Player Audio Not Heard:**
 - Verify the audio cable is securely connected to both the MP3 player and the keyboard's input jack.
 - Ensure the MP3 player is playing and its volume is turned up.
 - Check the keyboard's volume.
- **Keys Not Responding:**
 - Turn the keyboard off and then on again.
 - Replace batteries if they are low.

SPECIFICATIONS

Model Number	106837079
--------------	-----------

Brand	Simba Toys
Dimensions (L x W x H)	70.5 x 20 x 6 cm
Weight	1.3 Grams
Power Source	Battery (AAA batteries)
Material	Plastic
Color	Grey
Recommended Age	6 - 8 years
Educational Objective	Develop musical skills and understanding
Special Features	MP3 compatible, 8 instruments, 8 rhythms, 6 demo songs

WARRANTY AND SUPPORT

For warranty information and customer support, please refer to the documentation included with your purchase or contact the manufacturer, Simba Toys, directly. Contact details can typically be found on the product packaging or the official Simba Toys website.

© 2023 Simba Toys. All rights reserved.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

