

[Manuals.plus](#) /

› [TW Steel](#) /

› TW Steel CE2004 Men's Chronograph Watch Instruction Manual

TW Steel CE2004

TW Steel CE2004 Men's Chronograph Watch Instruction Manual

Model: CE2004

1. INTRODUCTION

This manual provides detailed instructions for the proper use, setup, and maintenance of your TW Steel CE2004 Men's Chronograph Watch. Please read this manual thoroughly to ensure optimal performance and longevity of your timepiece.

2. PRODUCT OVERVIEW

The TW Steel CE2004 is a men's chronograph watch featuring a tonneau-shaped case and a leather band. It utilizes an analog display with a chronograph movement, protected by a mineral crystal. The watch includes dedicated displays for minutes and seconds as part of its chronograph functionality.



Image 1: Front view of the TW Steel CE2004 Chronograph Watch. This image displays the watch with its rose gold-toned tonneau-shaped case, black dial with large white numerals, and a black leather strap. The chronograph subdials and pushers are visible.

Key Components:

- **Crown:** Used for setting the time and date.
- **Pushers (A & B):** Used to operate the chronograph functions (start, stop, reset).
- **Main Dial:** Displays the current time (hours, minutes, seconds).
- **Chronograph Subdials:** Measure elapsed time in seconds, minutes, and sometimes hours.
- **Tachymeter Scale:** Located on the outer rim of the dial, used for measuring speed.

3. SETUP

3.1 Setting the Time

1. Pull the crown out to the second click position. The second hand will stop.
2. Turn the crown to set the hour and minute hands to the desired time. Ensure AM/PM is correctly set if your watch has a date function that changes at midnight.
3. Push the crown back into the normal position. The second hand will resume movement.

3.2 Setting the Date (if applicable)

1. Pull the crown out to the first click position.
2. Turn the crown clockwise or counter-clockwise (depending on the movement) to set the date. Avoid setting the date between 9 PM and 3 AM, as this can interfere with the date change mechanism.
3. Push the crown back into the normal position.

3.3 Chronograph Hand Zero Position Adjustment

If the chronograph hands do not return to the zero position after resetting, they may need adjustment:

1. Pull the crown out to the second click position.
2. Press Pusher A (top pusher) repeatedly to advance the chronograph second hand to the zero position.
3. Press Pusher B (bottom pusher) repeatedly to advance the chronograph minute hand to the zero position.
4. Once all chronograph hands are aligned to zero, push the crown back into the normal position.

4. OPERATING THE CHRONOGRAPH

The chronograph function allows you to measure elapsed time independently of the main time display.

1. **Start:** Press Pusher A to start the chronograph. The chronograph second hand will begin to move.
2. **Stop:** Press Pusher A again to stop the chronograph. The elapsed time can be read from the chronograph subdials.
3. **Reset:** After stopping the chronograph, press Pusher B to reset all chronograph hands to their zero positions.
4. **Split Time (if available):** Some chronographs allow for split time measurement. Consult specific movement details if this feature is desired.

5. MAINTENANCE

5.1 Cleaning

To maintain the appearance of your watch:

- Wipe the case and crystal with a soft, dry cloth.
- For the leather band, avoid prolonged exposure to water, direct sunlight, and harsh chemicals. Clean with a specialized leather cleaner if necessary, following product instructions.

5.2 Water Resistance

While many watches offer some level of water resistance, specific ratings are not provided for this model in the product information. To prevent damage, it is recommended to avoid exposing the watch to water, steam, or high humidity. Do not operate the crown or pushers when the watch is wet.

5.3 Battery Replacement

The watch is powered by a quartz movement and requires a battery. When the battery is depleted, the watch will stop. Battery replacement should be performed by a qualified watch technician to ensure proper sealing and function.

6. TROUBLESHOOTING

- **Watch Not Running:** Check if the crown is fully pushed in. If the watch still does not run, the battery may need replacement.
- **Time Inaccurate:** Ensure the crown is fully pushed in after setting the time. Extreme temperatures or strong magnetic fields can affect accuracy.
- **Chronograph Hands Not Resetting to Zero:** Refer to Section 3.3 for chronograph hand zero position adjustment.

For issues not resolved by these steps, please contact customer support or a certified watch repair center.

7. SPECIFICATIONS

Brand	TW Steel
Model Number	CE2004
Watch Shape	Tonneau
Display Type	Analog
Movement Type	Chronograph (Quartz)
Band Material	Leather
Crystal Material	Mineral
Targeted Group	Men
Special Features	Minutes Display, Seconds Display (Chronograph)

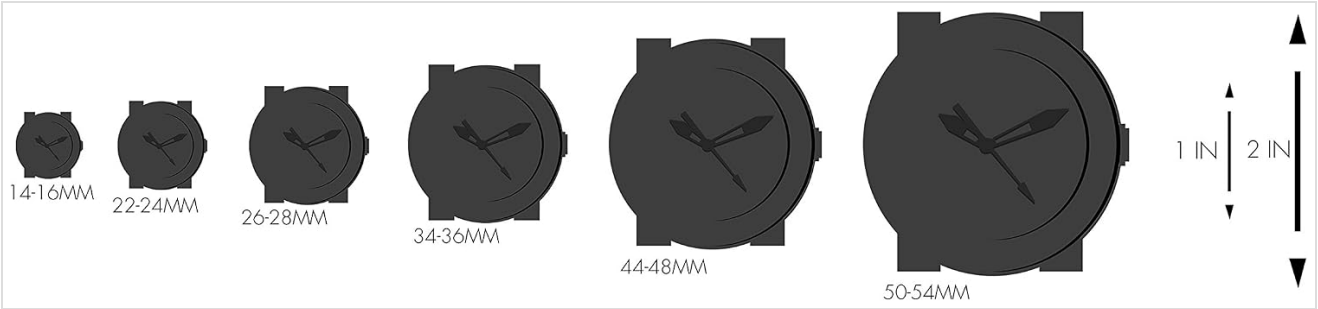


Image 2: Watch size guide illustrating various watch case diameters from 14-16mm up to 50-54mm, providing a visual reference for watch dimensions.

8. WARRANTY AND SUPPORT

For information regarding warranty coverage, service, or technical support, please refer to the official TW Steel website or contact their authorized customer service channels. Keep your purchase receipt as proof of purchase.

© 2023 TW Steel. All rights reserved.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

<https://manuals.plus/asin/B0038LWEDO>

More documents and user manuals: <https://manuals.plus/>