

[manuals.plus](#) /› [Creative](#) /› [Creative A40 2.0 Desktop Speaker System User Manual](#)

Creative A40

Creative A40 2.0 Desktop Speaker System User Manual

1. INTRODUCTION

This manual provides essential instructions for the setup, operation, and maintenance of your Creative A40 2.0 Desktop Speaker System. Designed for clear audio output, these compact speakers are ideal for use with computers, laptops, and other audio devices. Please read this manual thoroughly before using your speakers to ensure optimal performance and longevity.

2. PACKAGE CONTENTS

Verify that all items listed below are present in your package:

- Creative A40 Left Speaker (with integrated USB power cable and 3.5mm audio cable)
- Creative A40 Right Speaker (connected to the left speaker)



Image: The Creative A40 2.0 Desktop Speaker System, showing both speakers and the integrated USB power cable.

3. SETUP

Follow these steps to set up your Creative A40 speakers:

- 1. Speaker Placement:** Position the left and right speakers on either side of your computer monitor or listening area. Ensure they are on a stable, flat surface.
- 2. Connect Audio:** Plug the 3.5mm audio jack from the left speaker into the audio output port (headphone jack) of your computer, laptop, smartphone, or tablet.
- 3. Connect Power:** Insert the USB-A connector from the left speaker into an available USB port on your computer or a compatible USB power adapter (not included). The speakers are USB-powered.
- 4. Power On:** Locate the volume knob on the front of the right speaker. Rotate it clockwise until you hear a click, indicating the speakers are powered on.



Image: A rear view of the Creative A40 speakers, illustrating the integrated cables for USB power and 3.5mm audio connection.

4. OPERATING INSTRUCTIONS

Once set up, operating your Creative A40 speakers is straightforward:

- **Power On/Off:** Rotate the volume knob on the front of the right speaker clockwise to turn on and counter-clockwise until it clicks to turn off.
- **Adjust Volume:** Rotate the volume knob clockwise to increase the volume and counter-clockwise to decrease it. You may also need to adjust the volume on your connected audio device.
- **Audio Playback:** Begin playing audio from your connected device. Ensure the device's volume is not muted and is set to an audible level.



Image: The Creative A40 speakers positioned next to a laptop, demonstrating a typical usage scenario for personal audio playback.

5. MAINTENANCE

Proper care ensures the longevity of your speakers:

- **Cleaning:** Use a soft, dry cloth to wipe the exterior surfaces of the speakers. Do not use liquid cleaners or abrasive materials.
- **Storage:** When not in use for extended periods, store the speakers in a cool, dry place away from direct sunlight and extreme temperatures.
- **Avoid Moisture:** Keep the speakers away from water and other liquids.

6. TROUBLESHOOTING

If you encounter issues, refer to the following common problems and solutions:

Problem	Solution

Problem	Solution
No sound	<ul style="list-style-type: none"> • Ensure the USB power cable is securely connected to a powered USB port. • Verify the 3.5mm audio jack is fully inserted into your device's audio output. • Check that the speakers are powered on (volume knob clicked clockwise). • Increase the volume on both the speakers and your connected device. • Ensure your device's audio output is not muted.
Low volume	<ul style="list-style-type: none"> • Increase the volume using the speaker's volume knob. • Increase the volume on your connected audio device. • Ensure the audio source is providing sufficient output.
Distorted sound	<ul style="list-style-type: none"> • Reduce the volume on both the speakers and your connected device. • Ensure the audio cables are securely connected and not damaged. • Test with a different audio source or device to rule out source issues.

7. SPECIFICATIONS

Detailed technical specifications for the Creative A40 2.0 Desktop Speaker System:

Brand	Creative
Model Number	51MF1640AA001
Speaker Type	2.0 Desktop Speakers (Bookshelf)
Connectivity Technology	USB (for power), 3.5mm Audio Jack (for audio input)
Hardware Interface	USB 2.0
Output Wattage (per speaker)	0.8 Watts
Total Wattage	1.6 Watts
Speaker Count	2
Color	Black
Item Weight	640 g (0.64 Kilograms)
Product Dimensions	15.5 x 7 x 8.5 cm
Special Features	Portable
Recommended Uses	For Computers, For Music Players
Compatible Devices	Laptop, Smartphone, Tablet

8. WARRANTY AND SUPPORT

Your Creative A40 2.0 Desktop Speaker System comes with a **1 Year Warranty** from the date of purchase. This warranty covers manufacturing defects under normal use.

For technical support, warranty claims, or further assistance, please visit the official Creative website or contact their customer service department. Keep your proof of purchase for warranty validation.