

[Manuals.plus](#) /

› [Mainstays](#) /

› Mainstays Digital Kitchen Scale User Manual MS19-041-400-33

Mainstays MS19-041-400-33

Mainstays Digital Kitchen Scale User Manual

Model: MS19-041-400-33

INTRODUCTION

Thank you for purchasing the Mainstays Digital Kitchen Scale. This manual provides essential information for the safe and efficient operation of your new kitchen scale. Please read these instructions thoroughly before use and retain them for future reference.



Image: Mainstays Digital Kitchen Scale. This image displays the digital kitchen scale with its clear weighing platform and digital

display, ready for use in a kitchen setting.

IMPORTANT SAFETY INFORMATION

- Do not immerse the scale in water or other liquids.
- Clean the scale with a damp cloth; do not use abrasive cleaners.
- Do not overload the scale beyond its maximum capacity of 10 lbs (4.53 kg).
- Keep the scale away from extreme temperatures and direct sunlight.
- This scale is intended for household use only.
- Dispose of batteries according to local regulations.

PACKAGE CONTENTS

- Mainstays Digital Kitchen Scale
- 1 x Lithium Battery (included)
- User Manual (this document)

SETUP

1. Battery Installation

1. Locate the battery compartment on the underside of the scale.
2. Open the battery compartment cover.
3. Insert the included lithium battery, ensuring the correct polarity (+/-) as indicated inside the compartment.
4. Close the battery compartment cover securely.

2. Placement

Place the scale on a hard, flat, and stable surface to ensure accurate measurements. Avoid placing it on soft or uneven surfaces, or near sources of vibration.

OPERATING INSTRUCTIONS

1. Power On/Off

- To turn on: Press the **ON/OFF** button. The display will show '0' or '0.0' when ready.
- To turn off: Press and hold the **ON/OFF** button for a few seconds, or the scale will automatically shut off after a period of inactivity to conserve battery life.

2. Unit Conversion (Grams/Ounces)

Press the **UNIT** button to switch between grams (g) and ounces (oz). The selected unit will be displayed on the screen.

3. Tare Function

The tare function allows you to weigh items in a container by subtracting the container's weight.

1. Place an empty container on the scale.
2. Press the **TARE** button. The display will reset to '0'.
3. Add the items you wish to weigh into the container. The display will show the net weight of the items.

4. Weighing Items

1. Ensure the scale is on and displaying '0'.
2. Gently place the item(s) to be weighed onto the center of the weighing platform.
3. Read the weight displayed on the LCD screen.

CARE AND MAINTENANCE

- Clean the scale with a soft, damp cloth. Do not use chemical or abrasive cleaning agents.
- Do not submerge the scale in water.
- Store the scale in a clean, dry place when not in use.
- Remove the battery if the scale will not be used for an extended period to prevent leakage.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Scale does not turn on	Dead or incorrectly installed battery	Check battery polarity; replace battery if necessary.
Inaccurate readings	Uneven surface; scale overloaded; external interference	Place on a flat, stable surface. Do not exceed 10 lbs. Keep away from electronic devices.
Display shows 'Err' or 'O-Ld'	Overload indication	Remove item immediately. The scale has been overloaded.
Display shows 'Lo'	Low battery indication	Replace the battery.

SPECIFICATIONS

Feature	Detail
Model Number	MS19-041-400-33
Weight Capacity	Up to 10 lbs (4.53 kg)
Measurement Units	Grams (g), Ounces (oz)
Display Type	LCD
Power Source	1 x Lithium Battery (included)
Product Dimensions	7.8 x 3.3 x 9.1 inches

Feature	Detail
Item Weight	1.1 pounds

WARRANTY AND SUPPORT

For warranty information or support inquiries, please refer to the product packaging or contact Mainstays customer service. Keep your purchase receipt as proof of purchase.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Email

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Details

Submit question