

Manuals.plus /

› Funkey /

› Funkey 61 SL Electronic Keyboard User Manual

Funkey 00015909

Funkey 61 SL Electronic Keyboard User Manual

Model: FunKey 61 (00015909)

1. INTRODUCTION

Thank you for choosing the Funkey 61 SL Electronic Keyboard. This instrument is designed for beginners and offers a wide range of features to explore the world of music. With 61 keys, 100 tones, 100 rhythms, and various functions, it provides an engaging learning experience. This manual will guide you through the setup, operation, and maintenance of your new keyboard.

2. PACKAGE CONTENTS

Please ensure all items are present in the package:

- Funkey 61 SL Electronic Keyboard
- Power Supply Unit
- Music Stand
- User Manual

3. SETUP

Follow these steps to set up your Funkey 61 SL Electronic Keyboard:

3.1 Powering the Keyboard

The keyboard can be powered using the included AC adapter or by batteries.

Using the AC Adapter:

1. Connect the power supply unit to the DC IN jack on the back of the keyboard.
2. Plug the AC adapter into a standard wall outlet.



Image: The included power adapter for the Funkey 61 SL Electronic Keyboard.

Using Batteries:

1. Locate the battery compartment on the underside of the keyboard.
2. Insert the required number of batteries (typically AA or D, refer to the compartment label) ensuring correct polarity.
3. Close the battery compartment cover securely.

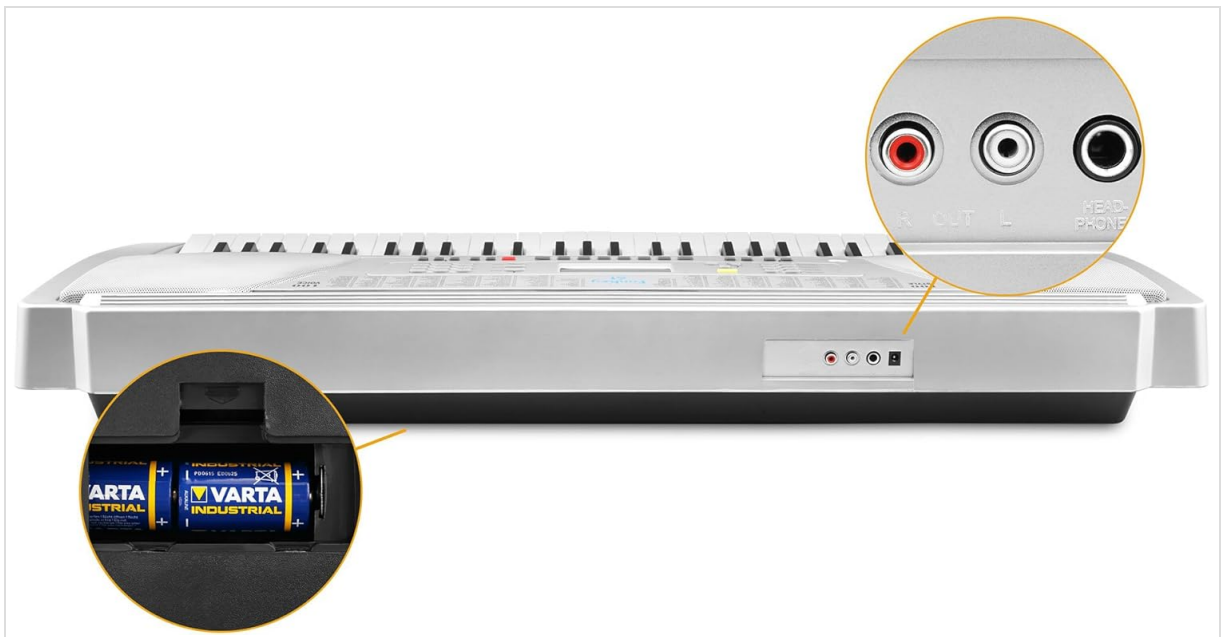


Image: Rear panel of the Funkey 61 SL Keyboard showing the RCA output, headphone jack, and a close-up of the battery compartment.

3.2 Attaching the Music Stand

Slide the music stand into the designated slot on the top panel of the keyboard. This provides a convenient place to hold sheet music or a tablet.



Image: The Funkey 61 SL Keyboard with the music stand attached, holding sheet music.

3.3 Connecting Headphones or External Speakers

For private practice, connect standard 3.5mm headphones to the HEADPHONE jack. To connect to an external stereo system or amplifier, use RCA cables with the RCA OUT (R/L) jacks on the rear panel.

4. OPERATING INSTRUCTIONS

Familiarize yourself with the control panel to utilize the keyboard's features.

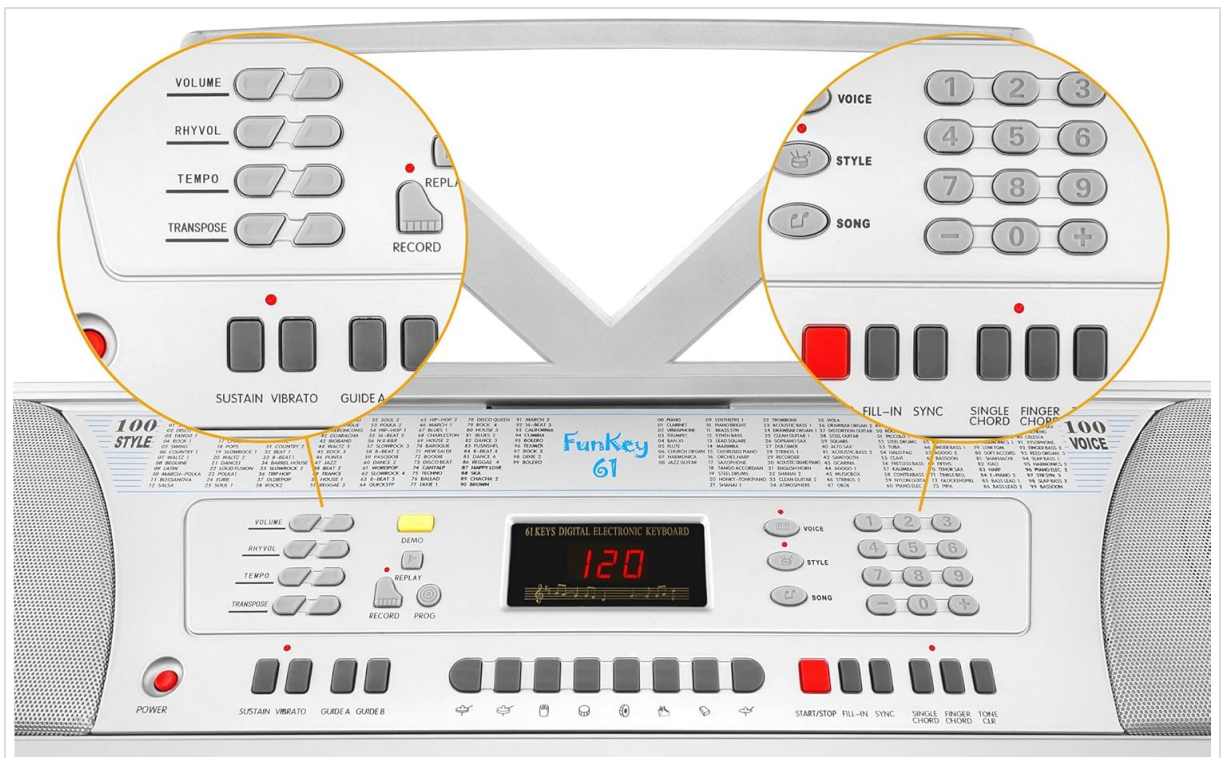


Image: Close-up view of the Funkey 61 SL Keyboard's control panel, showing buttons for volume, rhythm, tempo, transpose, voice, style, and song selection.

4.1 Power On/Off

Press the **POWER** button located on the left side of the control panel to turn the keyboard on or off.

4.2 Selecting Tones (Voices)

The keyboard features 100 different tones. Use the **VOICE** section buttons (numbered 0-9) to select a desired instrument sound. The currently selected voice number will be displayed on the LED screen.

4.3 Selecting Rhythms (Styles)

The keyboard includes 100 rhythms. Use the **STYLE** section buttons (numbered 0-9) to choose a rhythm. Press **START/STOP** to begin or end the rhythm playback.

4.4 Adjusting Tempo

Use the **TEMPO** buttons (up/down arrows) to increase or decrease the speed of the selected rhythm or demo song.

4.5 Demo Songs

The keyboard has 8 integrated demo songs. Press the **DEMO** button to cycle through and play the demo songs. These can be used for listening or for practicing with the Intelligent Guide function.

4.6 Recording and Playback

The record function allows you to capture your performances:

- Press **RECORD** to start recording your playing.
- Press **PLAY** to listen to your recorded performance.

4.7 Special Effects and Functions

- **SUSTAIN:** Adds a decaying effect to notes, similar to a piano pedal.
- **VIBRATO:** Adds a slight pitch variation to notes for expressive playing.
- **TRANSPOSE:** Allows you to shift the pitch of the entire keyboard up or down in semitone steps, useful for playing in different keys without changing finger positions.
- **GUIDE:** The Intelligent Guide function helps you learn the 8 integrated demo songs note by note.
- **CHORD FUNCTIONS:** Includes Single Finger Chord and Fingered Chord modes for automatic accompaniment.

5. MAINTENANCE

To ensure the longevity and optimal performance of your Funkey 61 SL Electronic Keyboard, follow these maintenance guidelines:

- **Cleaning:** Use a soft, dry cloth to wipe the surface of the keyboard. For stubborn dirt, slightly dampen the cloth with water and a mild soap, then wipe dry immediately. Avoid abrasive cleaners, solvents, or waxes.
- **Storage:** Store the keyboard in a cool, dry place away from direct sunlight, extreme temperatures, and high humidity.
- **Handling:** Avoid dropping the keyboard or subjecting it to strong impacts. Do not place heavy objects on top of it.
- **Power:** Disconnect the power adapter when the keyboard is not in use for extended periods. Remove batteries if the keyboard will not be used for a long time to prevent leakage.

6. TROUBLESHOOTING

If you encounter any issues with your Funkey 61 SL Electronic Keyboard, refer to the following common problems and solutions:

- **No Sound:**
 - Ensure the keyboard is powered on.
 - Check the master volume level.
 - If headphones are connected, disconnect them to check speaker output.
 - Verify external speaker connections if applicable.
- **Keys Not Responding:**
 - Ensure the keyboard is powered on.
 - Check if any specific mode (e.g., Guide mode) is active that might restrict normal playing.
- **Rhythm/Accompaniment Not Playing:**
 - Ensure a rhythm (style) is selected.
 - Press the **START/STOP** button.
 - Check the rhythm volume level.
- **Distorted Sound:**
 - Reduce the master volume.
 - Check connections to external speakers or headphones for proper seating.

7. SPECIFICATIONS

Detailed technical specifications for the Funkey 61 SL Electronic Keyboard:

Model Name	FunKey 61
Item Model Number	00015909
Number of Keys	61
Tones	100
Rhythms	100
Demo Songs	8
Display	LED
Speakers	2 x 6 W (12 Watts Output)
Power Source	Battery Powered / AC Adapter
Headphone Jack	3.5mm Jack
Output Connectors	RCA
Product Dimensions	95.5 x 38.0 x 13.5 cm
Item Weight	5 kg
Manufacturer	FunKey
Country Produced In	China

8. WARRANTY AND SUPPORT

For warranty information, please refer to the documentation provided at the time of purchase or contact

your retailer. For technical support or further assistance, please reach out to Funkey customer service through their official website or the contact details provided with your product.