

## Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

› [Oasis](#) /

› [Oasis PG8ACSL Versa II Water Cooler Instruction Manual](#)

## Oasis PG8ACSL

# Oasis PG8ACSL Versa II Water Cooler Instruction Manual

Model: PG8ACSL | Brand: Oasis

## INTRODUCTION AND SAFETY INFORMATION

---

This manual provides essential instructions for the safe installation, operation, and maintenance of your Oasis PG8ACSL Versa II Water Cooler. Please read all instructions carefully before installation and use to ensure proper function and to prevent injury or damage.

### Product Overview

- The Oasis PG8ACSL is a split-level, refrigerated water cooler designed for durability and efficiency.
- Constructed from heavy-gauge galvanized steel with a stainless steel top and finish.
- Features energy and water conservation technology, including mechanically activated push pads and a water-saver bubbler.
- Equipped with a high-efficiency cooling system using R-134a refrigerant, delivering 8.0 gallons of chilled drinking water per hour.
- Includes a built-in 100-micron strainer to filter particles from the waterway.
- Designed to be ADA compliant when properly installed, ensuring accessibility.
- cUL listed and NSF/ANSI Standard 61, Annex G certified, ensuring quality and safety.
- Waterways are lead-free in materials and construction.

### Important Safety Instructions

- Always disconnect power before performing any service or maintenance.
- Ensure proper grounding to avoid electrical shock.
- Do not operate the unit if the power cord is damaged.
- Installation must comply with all local plumbing and electrical codes.
- Keep ventilation openings clear of obstructions.

## SETUP AND INSTALLATION

---

Proper installation is crucial for the performance and longevity of your water cooler. It is recommended that installation be performed by a qualified plumber and electrician.

## Unpacking and Inspection

1. Carefully remove the water cooler from its packaging.
2. Inspect the unit for any shipping damage. Report any damage to your supplier immediately.
3. Ensure all components, including any plumbing tools, are present.

## Location Requirements

- Install on a sturdy, level surface capable of supporting the unit's weight (approximately 64 lbs).
- Ensure adequate clearance around the unit for ventilation and maintenance access.
- Locate near a suitable cold water supply line and a drain.
- Ensure a properly grounded 120VAC, 4.4 Amp electrical outlet is available.

## Plumbing Connection

1. Turn off the main water supply before beginning plumbing work.
2. Connect the water supply line to the inlet connection on the water cooler. Refer to local plumbing codes for specific requirements.
3. Ensure all connections are secure and leak-free.
4. Flush the water lines thoroughly before connecting to the unit to remove any debris.

## Electrical Connection

1. Ensure the electrical supply matches the unit's requirements (120VAC, 4.4 Amps).
2. Plug the polarized plug into a dedicated, properly grounded electrical outlet.
3. Do not use extension cords or adapters.

## Final Checks

- Verify that the unit is level and stable.
- Check for any leaks in the plumbing connections.
- Ensure side and front panels are securely in place after installation, as they provide access for maintenance.
- Confirm ADA compliance for proper height and clear floor space if applicable.



Image: Front view of the Oasis PG8ACSL Versa II Water Cooler, showcasing its stainless steel finish and dual-level design.

## OPERATING INSTRUCTIONS

---

The Oasis PG8ACSL water cooler is designed for simple and reliable operation.

### Dispensing Water

1. Once the unit is properly installed and connected to power and water, it will begin chilling water. Allow approximately 30 minutes for the water to reach optimal cold temperature.
2. To dispense water, press either the front or side push pad. The bubbler will activate, providing a stream of water.
3. Release the push pad to stop the water flow.



Image: A person using the Oasis PG8ACSL water cooler, demonstrating the activation of the bubbler by pressing the side push pad.

## Adjusting Stream Height

The water stream height can be adjusted externally. Locate the stream height adjustment screw, typically near the bubbler, and turn it clockwise to decrease the stream height or counter-clockwise to increase it. Adjust as needed to prevent splashing and ensure comfortable use.

## MAINTENANCE

---

Regular maintenance ensures optimal performance and extends the life of your Oasis water cooler. Always disconnect power before performing maintenance.

### Cleaning the Exterior

- Wipe down the stainless steel exterior and basin regularly with a soft, damp cloth and mild soap.
- Avoid abrasive cleaners or scouring pads, which can damage the finish.
- Ensure the fountain basin is kept clean to eliminate standing water and prevent mineral buildup.

### Strainer Cleaning

The unit features a built-in 100-micron strainer to prevent particles from entering the waterway. Periodically, this strainer may need cleaning, especially if water flow decreases.

1. Turn off the water supply to the unit.
2. Disconnect the power supply.

3. Access the strainer, typically located near the water inlet. Refer to the unit's internal diagrams if necessary (access may require removing side or front panels).
4. Remove and rinse the strainer under clean running water to clear any accumulated debris.
5. Reinstall the strainer, reconnect water and power, and check for leaks.

## Condenser Coil Cleaning

The condenser coils should be cleaned annually or more frequently in dusty environments to maintain cooling efficiency. Access to the coils typically requires removing the side or front panels.

- Disconnect power to the unit.
- Remove the appropriate panels to access the condenser coils.
- Use a brush or vacuum cleaner to gently remove dust and lint from the coils.
- Replace panels and reconnect power.

## TROUBLESHOOTING

This section addresses common issues you might encounter with your water cooler. For problems not listed here, contact customer support.

Problem	Possible Cause	Solution
No water flow or low water flow	Water supply turned off Clogged strainer Kinked water line	Ensure water supply valve is open. Clean the 100-micron strainer (see Maintenance). Check water lines for obstructions or kinks.
Water not cold	Unit not plugged in or power off Insufficient ventilation Dirty condenser coils Thermostat setting	Verify power connection and outlet. Ensure adequate airflow around the unit. Clean condenser coils (see Maintenance). Contact service for thermostat adjustment if necessary.
Water splashing or spilling	Stream height too high Bubbler guard issues	Adjust the external stream height (see Operating Instructions). Inspect the flexible one-piece water saver bubbler guard for damage or misalignment.
Unit making unusual noise	Loose components Compressor issue	Check that all panels and internal components are secure. If noise persists, contact customer support.

## SPECIFICATIONS

<b>Model Number</b>	PG8ACSL
<b>Brand</b>	Oasis
<b>Color/Finish</b>	Stainless Steel
<b>Capacity</b>	8 Gallons Per Hour (GPH)
<b>Dimensions (D x W x H)</b>	18.63" x 34.25" x 24.91"
<b>Item Weight</b>	64 pounds

<b>Installation Type</b>	Plumbed
<b>Power Source</b>	Electricity
<b>Voltage</b>	120VAC
<b>Amperage</b>	4.4 Amps
<b>Refrigerant</b>	R-134a
<b>Compliance</b>	ADA Compliant (when properly installed), cUL Listed, NSF/ANSI Standard 61 Annex G Certified
<b>UPC</b>	092026168871, 092026168864

## WARRANTY INFORMATION

---

Oasis provides a limited 5-year warranty for the PG8ACSL Versa II Water Cooler. This warranty covers defects in materials and workmanship under normal use and service. For specific terms, conditions, and to register your product, please refer to the warranty card included with your purchase or visit the official Oasis website.

## CUSTOMER SUPPORT

---

If you require assistance with installation, operation, maintenance, or troubleshooting beyond the scope of this manual, please contact Oasis customer support.

- **Online Support:** Visit the official Oasis website for FAQs, product documentation, and contact forms.
- **Technical Service:** For technical inquiries or service requests, please refer to the contact information provided on the Oasis website or your purchase documentation.

When contacting support, please have your model number (PG8ACSL) and serial number ready.