

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [Lutron](#) /

› [Lutron Claro CW-4-LA 4-Gang Screwless Wall Plate Instruction Manual](#)

Lutron CW-4-LA

Lutron Claro CW-4-LA 4-Gang Screwless Wall Plate Instruction Manual

Model: CW-4-LA | Brand: Lutron

PRODUCT OVERVIEW

The Lutron Claro 4-Gang Screwless Wall Plate (Model CW-4-LA) offers a clean and modern aesthetic for your electrical switches and outlets. Designed to seamlessly integrate with decorator-style dimmers, switches, and accessories, this wall plate features a screwless face for an uncluttered appearance. Its oversized design helps conceal imperfections around wall boxes, ensuring a flush and secure fit on various wall surfaces.

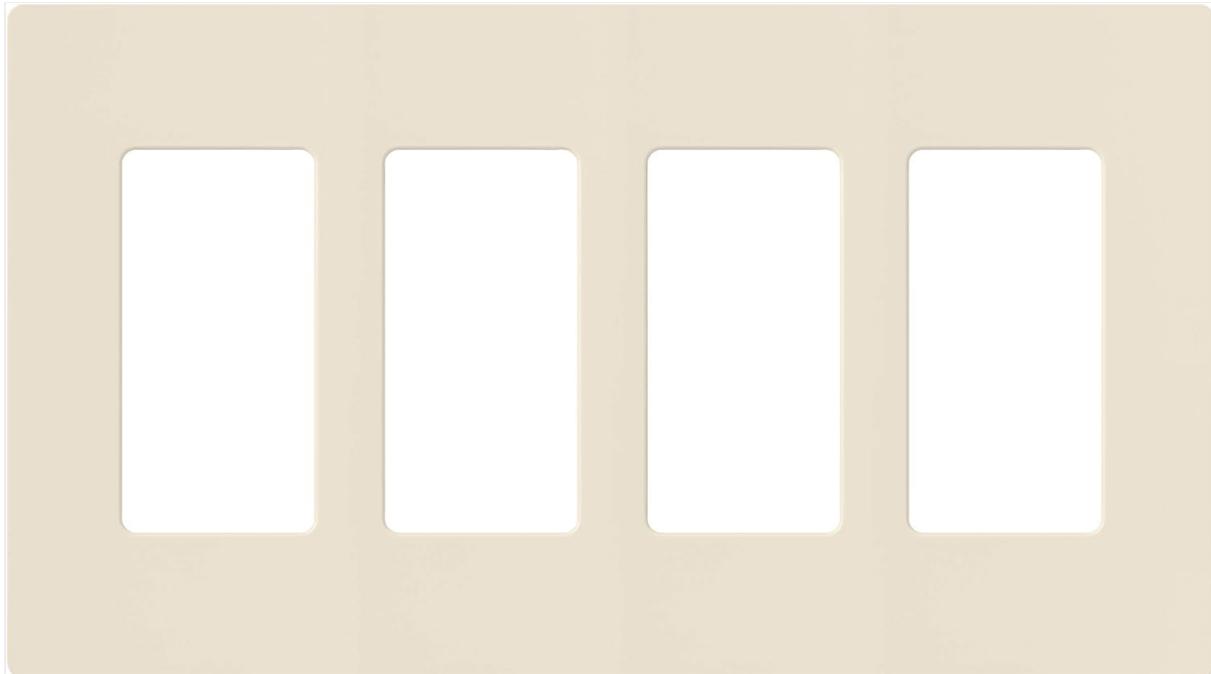


Image: The Lutron Claro 4-Gang Screwless Wall Plate in Light Almond, showcasing its clean, minimalist design.

KEY FEATURES

- **Screwless Design:** Provides a smooth, clean face without visible screws.
- **Flush Mount:** Attaches securely and sits flush against the wall surface.
- **Oversized Dimensions:** Helps to hide gaps and irregularities around electrical wall boxes.
- **Durable Construction:** Made from high-quality plastic for long-lasting performance.
- **Compatibility:** Designed for use with decorator-style dimmers, switches, and accessories.

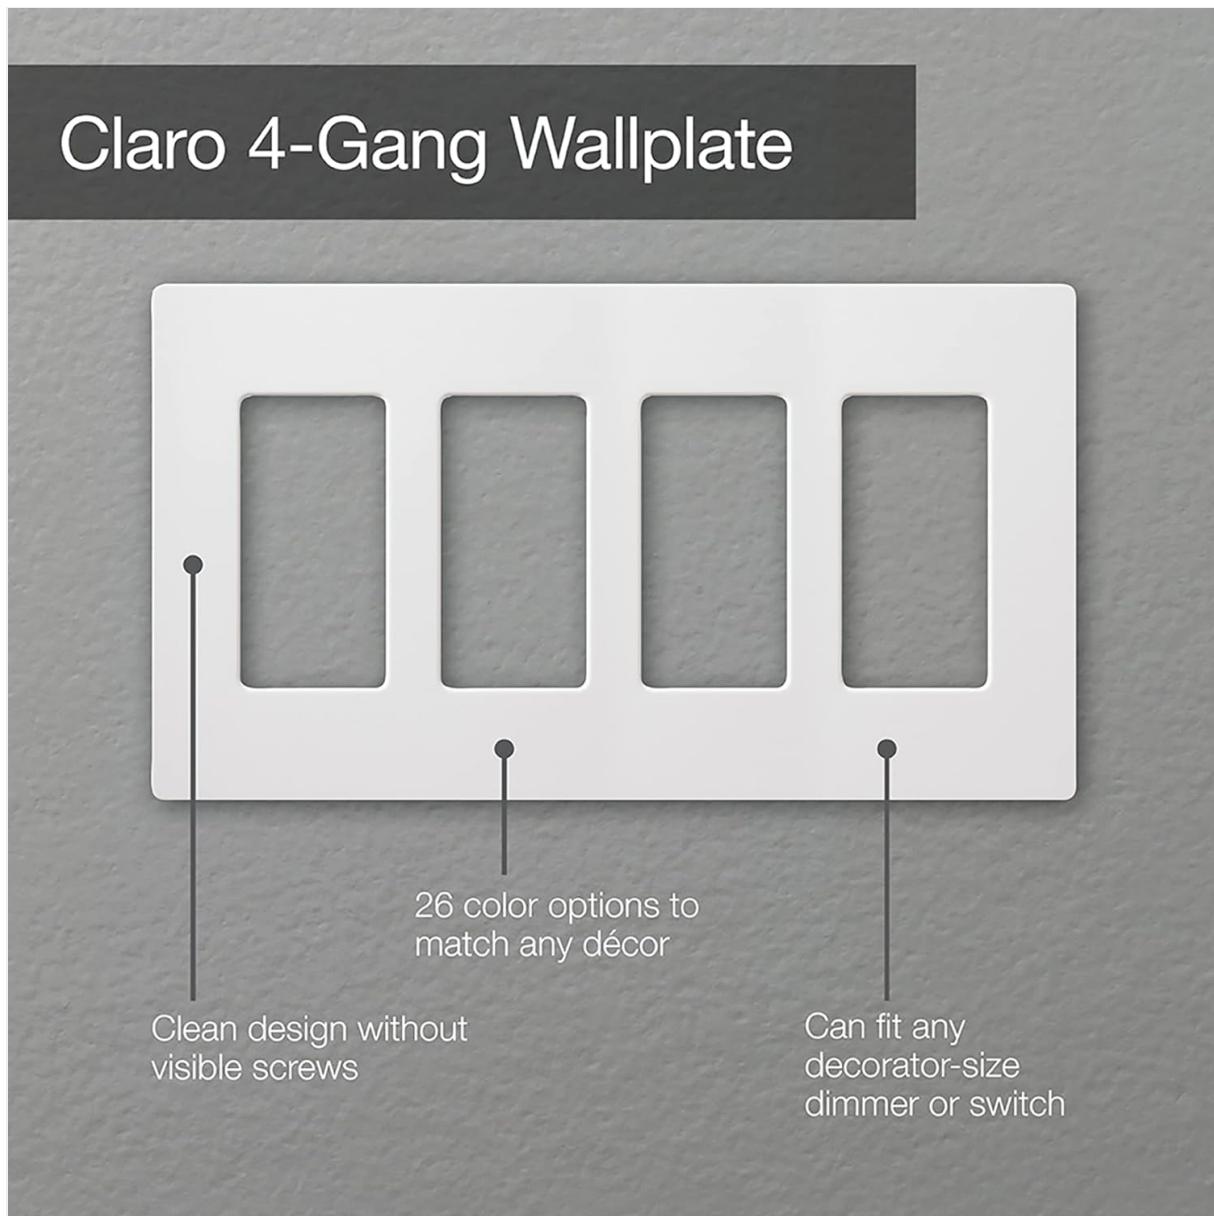


Image: A diagram highlighting the key features of the Claro 4-Gang Wallplate, including its clean design without visible screws and compatibility with decorator-size dimmers or switches.

SETUP AND INSTALLATION

Installation of the Lutron Claro wall plate is designed to be straightforward. Follow these steps for a secure and aesthetically pleasing result:

1. **Prepare the Electrical Box:** Ensure power to the electrical box is turned off at the circuit breaker before beginning installation.
2. **Install Switches/Dimmers:** Install your decorator-style switches, dimmers, or accessories into the electrical box. It is recommended to tighten the mounting screws just enough to hold the devices in place, allowing for slight adjustment later.
3. **Attach Back Plate:** Separate the front plate from the back plate. Position the back plate over the

installed devices and secure it to the wall box using the provided screws. Adjust the devices and back plate to ensure they are level and flush with the wall surface before fully tightening the screws.

4. **Snap on Front Plate:** Align the screwless front plate with the back plate and gently press it into place until it snaps securely. Ensure all edges are flush.



Image: A hand demonstrating the snap-on installation of a Lutron Claro wall plate, showing the two-piece design.

Installation Video

Your browser does not support the video tag.

Video: A quick demonstration of how to install a Lutron Claro wall plate, highlighting the simple snap-on process.

Product Overview Video

Your browser does not support the video tag.

Video: An overview of Lutron Claro wall plates, showcasing their design, features, and various applications in a home setting.

OPERATING THE WALL PLATE

The Lutron Claro wall plate itself does not have operational functions. Its purpose is to provide a protective and aesthetic cover for your electrical switches, dimmers, and outlets. To operate the electrical devices, simply interact with the switches or dimmers as designed by their respective manufacturers.



Image: An illustration showing the compatibility of Lutron Claro wall plates with various designer-style light controls such as Caséta, Diva, Maestro, and Skylark.

MAINTENANCE

The durable plastic construction of the Lutron Claro wall plate makes it easy to maintain. For cleaning, simply wipe the surface with a soft, damp cloth. Avoid using abrasive cleaners or harsh chemicals, as these may damage the finish.

TROUBLESHOOTING

- **Wall Plate Not Sitting Flush:** Ensure that the electrical devices (switches, dimmers) are properly aligned and securely fastened within the electrical box. Sometimes, slightly loosening and then retightening the device screws after the back plate is installed can help achieve a flush fit.
- **Difficulty Removing Front Plate:** If the front plate is difficult to remove, gently slide a thin, non-abrasive object (such as a credit card) into the seam along the top or side and carefully pry it away from the back plate. This will help release the snap-on tabs without causing damage.

SPECIFICATIONS

Model Number	CW-4-LA
Material	Plastic
Color	Light Almond
Finish Type	Gloss
Configuration	Quad (4-Gang)
Product Dimensions	0.4"W x 10"H (Note: Image PT02 indicates approximate dimensions of 8.2"L x 4.7"H)
Installation Type	Screw-In (for back plate)
Item Weight	4 ounces (0.25 Pounds)
UPC	027557513920

Claro 4-Gang Wallplate

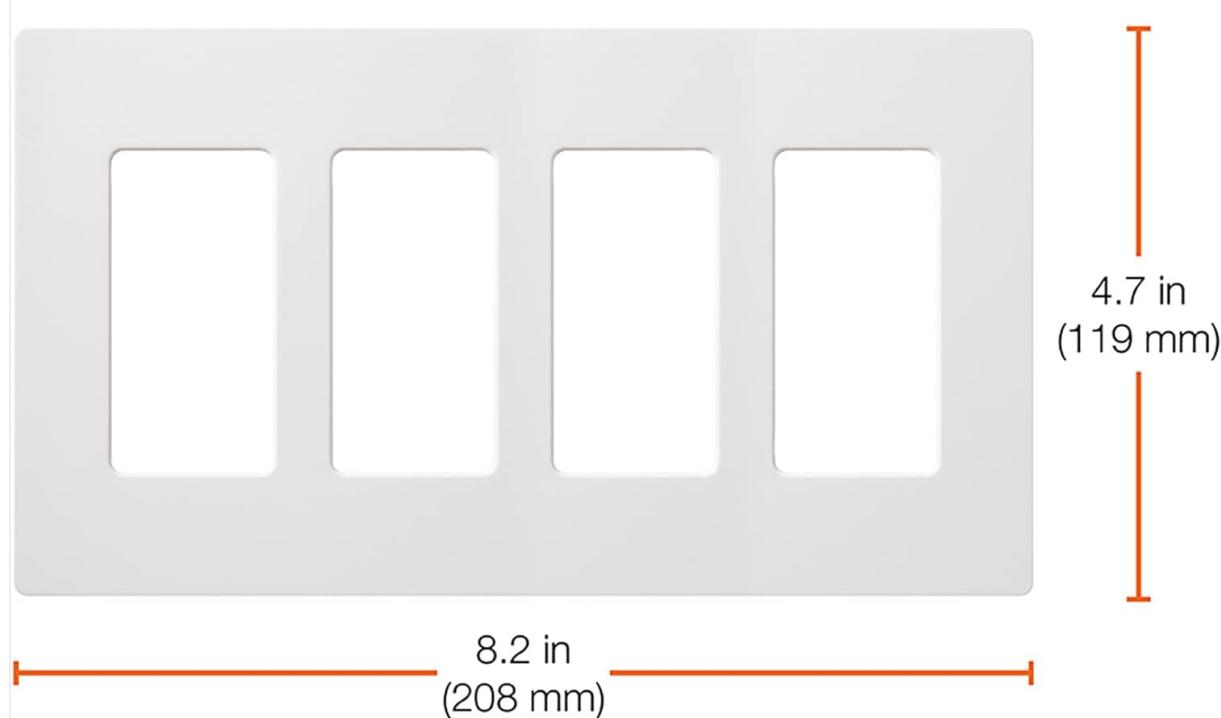


Image: Diagram showing the approximate dimensions of the Lutron Claro 4-Gang wall plate: 8.2 inches (208 mm) long and 4.7 inches (119 mm) high.

WARRANTY

This Lutron Claro wall plate comes with a **1-year limited warranty** on materials and manufacture. Please retain your proof of purchase for warranty claims.

SUPPORT

For any questions or technical assistance, please contact Lutron's 24/7 U.S.-based tech support:

Website: lutron.com/Support

Phone: 1-844-LUTRON1 (1-844-588-7661)