

[Manuals.plus](#) /

› [Kimberly-Clark](#) /

› KIMBERLY-CLARK PROFESSIONAL Kleenex Hand Cleanser Instruction Manual

Kimberly-Clark 91565_azty

KIMBERLY-CLARK PROFESSIONAL Kleenex Hand Cleanser Instruction Manual

1. PRODUCT OVERVIEW

The KIMBERLY-CLARK PROFESSIONAL Kleenex Hand Cleanser is designed for use with the KIMBERLY-CLARK PROFESSIONAL Skin Care Cassette Dispenser (model 92144, sold separately). This hand cleanser refill offers a 1000-ml (1-liter) capacity, reducing the frequency of refilling compared to standard 800-ml refills. Each refill includes a fresh pump, ensuring optimal performance and hygiene. The design also facilitates easy recycling once the pump is removed.



Image: KIMBERLY-CLARK PROFESSIONAL Kleenex Hand Cleanser refill bottle, showing the product packaging and pump mechanism.

Key Features

- Designed for use with KIMBERLY-CLARK PROFESSIONAL Skin Care Cassette Dispenser (model 92144).
- Includes a fresh pump with each refill.
- 1,000-ml (1-liter) capacity for extended use.
- Facilitates easy recycling by allowing pump removal.
- Sold as 6 units per carton.

2. SETUP AND INSTALLATION

Follow these steps to install the Kleenex Hand Cleanser refill into a compatible dispenser:

1. **Prepare Dispenser:** Ensure you have a compatible KIMBERLY-CLARK PROFESSIONAL Skin Care Cassette Dispenser (model 92144).

- 2. **Remove Old Refill:** Open the dispenser and remove any empty or used hand cleanser cassette.
- 3. **Insert New Refill:** Align the new 1000-ml Kleenex Hand Cleanser cassette with the dispenser's slot. Push firmly until it clicks into place. The new refill comes with a fresh pump pre-attached.
- 4. **Close Dispenser:** Securely close the dispenser cover.
- 5. **Prime Pump:** Press the pump head several times until the cleanser is dispensed smoothly.

3. OPERATING INSTRUCTIONS

To effectively wash your hands using the Kleenex Hand Cleanser:

- 1. **Dispense Cleanser:** Place your hand under the dispenser nozzle and press the pump to dispense an adequate amount of Kleenex Hand Cleanser into your palm.
- 2. **Lather Hands:** Rub your hands together thoroughly, ensuring the cleanser covers all surfaces, including palms, backs of hands, between fingers, and under nails.
- 3. **Rinse Hands:** Rinse your hands thoroughly under clean, running water until all traces of cleanser are removed.
- 4. **Dry Hands:** Dry your hands completely using a clean towel or air dryer.

4. MAINTENANCE

Proper maintenance ensures continued hygiene and product longevity:

- **Refill Replacement:** Replace the hand cleanser cassette when it is empty. Each new cassette includes a fresh pump.
- **Recycling:** For environmental responsibility, remove the pump from the empty cassette before recycling the plastic container according to local recycling guidelines.

5. TROUBLESHOOTING

If you encounter issues with your Kleenex Hand Cleanser refill, consider the following:

- **No Cleanser Dispensed:**
 - Check if the cassette is properly installed and clicked into place within the dispenser.
 - Ensure the pump has been adequately primed by pressing it several times.
 - Verify that the cassette is not empty.
- **Dispenser Malfunction:** If the dispenser itself is not functioning correctly, refer to the instruction manual for the KIMBERLY-CLARK PROFESSIONAL Skin Care Cassette Dispenser (model 92144).

6. SPECIFICATIONS

Attribute	Value
Product Dimensions	3 x 6.25 x 9.25 inches
Item Weight	1.95 pounds
Manufacturer	KIMBERLY-CLARK PROFESSIONAL*
ASIN	B003AK6XFI

Attribute	Value
Item Model Number	91565_azty
Volume	1 Liters
Scent	Fresh
Age Range (Description)	Adult
Item Package Quantity	1

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question