

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

› [Radio Flyer](#) /

› [Radio Flyer 4-in-1 Stroll 'N Trike Model 811A Instruction Manual](#)

Radio Flyer 811A

Radio Flyer 4-in-1 Stroll 'N Trike Instruction Manual

Model: 811A

INTRODUCTION

The Radio Flyer 4-in-1 Stroll 'N Trike is designed to adapt and grow with your child, offering four distinct riding stages from 9 months to 5 years of age. This versatile trike transitions from a secure stroller to a steering trike, then to a learning-to-ride trike, and finally to a classic independent trike. It features a sturdy steel frame, quiet ride tires, and an adjustable seat to ensure durability and comfort through each stage.

Product Overview Video

Your browser does not support the video tag.

This video demonstrates the various features and transformations of the Radio Flyer 4-in-1 Stroll 'N Trike, showcasing its adaptability for children from 9 months to 5 years old.

SAFETY INFORMATION

WARNING: Adult assembly required. Read all instructions before assembly and use. Keep instructions for future reference.

- Always supervise children when using the trike.
- Ensure all fasteners are securely tightened before each use.
- Do not use near stairs, hills, roadways, or swimming pools.
- Children should wear a helmet when riding the trike in its independent modes.
- The 3-point harness and safety tray should be used for younger riders as specified in the operating modes section.
- Maximum weight capacity: 49 lbs (22.2 kg).

Please refer to the detailed safety instructions provided inside the product packaging for complete

information.

WHAT'S IN THE BOX

Carefully unpack all components and ensure you have the following parts:

- Trike Frame
- Wheels (Front and Rear)
- Handlebar
- Push Handle (Adjustable)
- Safety Tray with Cup Holder
- UV Protection Canopy
- Headrest
- 3-Point Harness
- Hardware Pack (screws, nuts, washers)

ASSEMBLY INSTRUCTIONS

Follow these general steps for initial assembly. Refer to the detailed diagrams in your printed manual for specific part identification and fastening instructions.

1. **Attach Rear Wheels:** Securely attach the rear wheels to the trike frame using the provided hardware. Ensure they spin freely but are firmly attached.
2. **Install Front Wheel and Fork:** Insert the front wheel assembly into the trike frame. Attach the handlebar to the fork.
3. **Mount Seat:** Position the seat onto the trike frame and secure it with the designated fasteners.
4. **Assemble Push Handle:** Connect the adjustable push handle components and attach it to the rear of the trike.
5. **Attach Safety Tray and Harness:** For the toddler stage, attach the wrap-around safety tray and install the 3-point harness to the seat.
6. **Install Canopy:** Mount the UV protection canopy to the push handle or seat back, depending on the design.
7. **Final Check:** Verify all screws, bolts, and connections are tight and secure before first use.

OPERATING MODES (4-IN-1 GROWTH STAGES)

The Radio Flyer 4-in-1 Stroll 'N Trike is designed to evolve with your child's development. Here are the four stages:



Visual representation of the four growth stages of the trike.

Stage 1: Toddler Trike (9 - 18 Months)

In this stage, the trike functions like a stroller, providing maximum safety and comfort for the youngest riders. The child is secured by a 3-point harness and a wrap-around safety tray with a cup holder. The adjustable UV protection canopy shields from the sun, and parents maintain full control with the height-adjustable push handle.



Toddler Trike mode with safety features engaged.

**Snack tray and
cup holder**



Detail of the wrap-around safety tray with cup holder.

Stage 2: Steering Trike (18 - 24 Months)

As your child grows, the safety tray can be removed, allowing more freedom while still being secured by the 3-point harness. The parent continues to steer the trike using the push handle, guiding the child as they begin to understand steering and movement.



Steering Trike mode, with parent control.



Parent-controlled steering mechanism.

Stage 3: Learn-to-Ride Trike (2 - 3 Years)

At this stage, the 3-point harness and canopy can be removed. The child can now practice pedaling and steering independently, with the parent still providing guidance and stability using the push handle. The adjustable seat can be moved forward to allow the child to reach the pedals comfortably.



Learn-to-Ride Trike mode, with parent assistance.

Adjustable seat



Adjustable seat for growing children.

Stage 4: Classic Trike (3 - 5 Years)

Once your child is confident and capable of riding independently, the push handle can be completely removed. The trike transforms into a classic tricycle, allowing the child to pedal and steer on their own, fostering independence and active play.




Classic Trike mode for independent riding.

KEY FEATURES

- **4-in-1 Design:** Easily converts between toddler trike, steering trike, learn-to-ride trike, and classic trike.
- **Adjustable Push Handle:** Height-adjustable parent push handle for comfortable control, removable for independent riding.

- **Safety Features:** Includes a removable wrap-around safety tray with cup holder and snack compartment, and a 3-point harness for younger riders.
- **UV Protection Canopy:** Adjustable canopy provides shade and protection from the sun.
- **Quiet Ride Tires:** High-density foam tires ensure a smooth and quiet ride.
- **Adjustable Seat:** The seat can be adjusted to accommodate growing children.
- **Storage Bin:** A convenient storage bin is located at the rear for carrying small items.

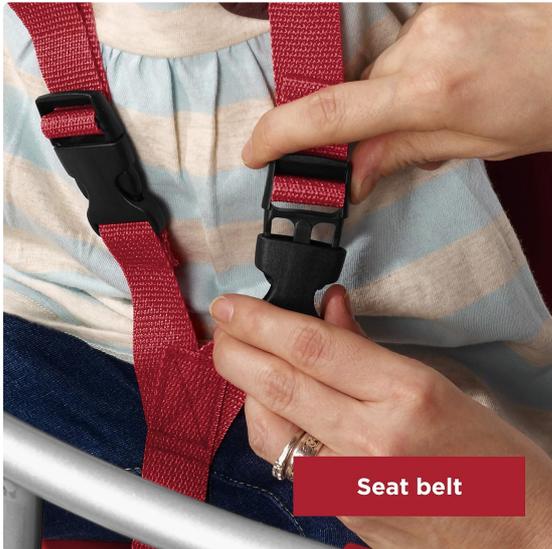

Secure 3-point harness for child safety.

MAINTENANCE

Regular maintenance will ensure the longevity and safe operation of your Radio Flyer 4-in-1 Stroll 'N Trike.

- **Cleaning:** Wipe down the trike with a damp cloth and mild soap. Avoid abrasive cleaners.
- **Inspection:** Periodically check all nuts, bolts, and fasteners to ensure they are tight. Tighten as necessary.
- **Tire Care:** The high-density foam tires are maintenance-free. Avoid sharp objects that could puncture them.
- **Storage:** Store the trike in a dry place away from direct sunlight and extreme temperatures to prevent material degradation.

TROUBLESHOOTING

Here are solutions to common issues you might encounter:

- **Loose Parts:** If any parts feel loose, identify the corresponding fastener and tighten it securely. Do not overtighten.
- **Squeaky Wheels:** Apply a small amount of silicone-based lubricant to the wheel axles if squeaking occurs. Avoid oil-based lubricants that can attract dirt.

- **Steering Difficulty:** Ensure the parent push handle is correctly engaged and all steering connections are secure. If the child is in a learning stage, ensure the parent has control.
- **Pedals Not Engaging:** Check if the pedal mechanism is properly connected to the front wheel. Some models have a clutch for parent-controlled pushing; ensure it's in the correct position.

SPECIFICATIONS

Feature	Detail
Product Dimensions	19.88 x 35.04 x 40.75 inches
Item Weight	15.23 pounds
Item Model Number	811A
Manufacturer Recommended Age	9 months - 5 years
Manufacturer	Radio Flyer

WARRANTY AND SUPPORT

Radio Flyer products are built with quality and durability in mind. For specific warranty details, please refer to the warranty card included with your product or visit the official Radio Flyer website. For customer support, replacement parts, or any questions regarding your 4-in-1 Stroll 'N Trike, please contact Radio Flyer customer service directly.

You can find contact information and further resources on the [Radio Flyer Store on Amazon](#).