

Amazon B003AVUCPY

User Manual for Players Media Player

Model: **B003AVUCPY** | Brand: **Amazon**

1. IMPORTANT SAFETY INFORMATION

Please read all safety instructions carefully before using your Players Media Player. Keep this manual for future reference.

- Do not expose the device to water or excessive moisture.
- Avoid placing the device near heat sources or in direct sunlight.
- Use only the power adapter supplied with the device.
- Do not attempt to open or repair the device yourself. Refer all servicing to qualified personnel.
- Ensure proper ventilation around the device during operation.

2. PACKAGE CONTENTS

Verify that all items are present in the box:

- Players Media Player Unit
- Remote Control (with batteries)
- Power Adapter
- HDMI Cable
- Quick Start Guide

Figure 2.1: Contents of the Players Media Player package.

3. SETUP

3.1 Connecting Your Player

1. Connect one end of the HDMI cable to the HDMI OUT port on your Players Media Player.
2. Connect the other end of the HDMI cable to an available HDMI IN port on your TV or display. Note the HDMI input number (e.g., HDMI 1, HDMI 2).
3. Connect the power adapter to the DC IN port on the Players Media Player.

4. Plug the power adapter into a wall outlet.



Figure 3.1: Connection diagram for the Players Media Player.

3.2 Initial Power On and Network Setup

1. Turn on your TV and select the correct HDMI input source (e.g., HDMI 1).
2. The Players Media Player will automatically power on and display the setup wizard.
3. Follow the on-screen instructions to select your language, time zone, and connect to your Wi-Fi network. You will need your Wi-Fi network name (SSID) and password.
4. If prompted, update the device firmware to the latest version for optimal performance.

4. OPERATING YOUR PLAYER

4.1 Remote Control Overview



Figure 4.1: Players Media Player Remote Control.

Familiarize yourself with the remote control buttons:

- **Power Button:** Turns the device on/off or puts it into standby.
- **Navigation Pad (Up/Down/Left/Right/OK):** Used to navigate menus and select items.
- **Home Button:** Returns to the main home screen.
- **Back Button:** Goes back to the previous screen or menu.
- **Volume +/-:** Adjusts the volume.
- **Play/Pause, Fast Forward, Rewind:** Media playback controls.

4.2 Basic Navigation and Media Playback

From the home screen, use the navigation pad to browse available apps and content. Select an app (e.g., a streaming service) by pressing the OK button. Within an app, navigate to your desired content and press OK to start playback.

4.3 Advanced Features (Example: Screen Mirroring)

Your Players Media Player may support screen mirroring from compatible devices. To enable this feature, navigate to *Settings > Display > Screen Mirroring* and follow the on-screen instructions to connect your smartphone or tablet.

5. MAINTENANCE

5.1 Cleaning Your Device

To clean the Players Media Player, unplug it from the power outlet. Use a soft, dry, lint-free cloth to wipe the exterior surfaces. Do not use liquid cleaners, aerosols, or abrasive solvents.

5.2 Firmware Updates

Periodically check for firmware updates to ensure your device has the latest features and security enhancements.

Navigate to *Settings > System > Software Update* and select 'Check for Updates'. Follow any on-screen prompts to install available updates.

6. TROUBLESHOOTING

If you encounter issues with your Players Media Player, refer to the table below for common problems and solutions.

Problem	Possible Cause	Solution
No power	Power adapter not connected; outlet not working	Ensure power adapter is securely connected to device and a working outlet. Try a different outlet.
No picture on TV	Incorrect HDMI input selected; loose HDMI cable	Verify TV is on correct HDMI input. Check HDMI cable connections at both ends. Try a different HDMI port or cable.
No sound	TV volume muted; audio settings incorrect	Unmute TV volume. Check audio settings on the Players Media Player (Settings > Audio).
Wi-Fi connection issues	Incorrect password; router issues; signal interference	Re-enter Wi-Fi password. Restart your Wi-Fi router. Move device closer to router or reduce interference.
Remote control not working	Dead batteries; obstructed sensor	Replace batteries. Ensure no obstructions between remote and device.

If the problem persists after trying these solutions, please contact customer support.

7. SPECIFICATIONS

Feature	Detail
Model Number	B003AVUCPY
Dimensions (Approx.)	100mm x 100mm x 20mm
Weight (Approx.)	250g
Video Output	HDMI (up to 1080p)
Audio Output	HDMI, Optical (S/PDIF)
Connectivity	Wi-Fi (802.11b/g/n), Ethernet (10/100 Mbps)
Power Supply	AC 100-240V, 50/60Hz input; DC 5V/2A output
Operating Temperature	0°C to 40°C (32°F to 104°F)

8. WARRANTY INFORMATION

Your Players Media Player is covered by a 1-year limited warranty from the date of purchase. This warranty covers defects in materials and workmanship under normal use. It does not cover damage caused by accident, misuse, unauthorized modification, or external causes.

For full warranty terms and conditions, please refer to the warranty card included in your product packaging or visit our official support website.

9. CUSTOMER SUPPORT

For further assistance, technical support, or warranty claims, please contact our customer support team:

- **Website:** www.amazon.com/support
- **Phone:** Refer to your region's Amazon support page for local contact numbers.
- **Email:** Available via the support website.

Please have your model number (B003AVUCPY) and purchase date ready when contacting support.