

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

- › [Hasbro Gaming](#) /
- › [Hasbro Gaming Scrabble Flash Electronic Word Game Instruction Manual \(Model 24860\)](#)

Hasbro Gaming 24860

Hasbro Gaming Scrabble Flash Electronic Word Game Instruction Manual (Model 24860)

[Introduction](#) [Package Contents](#) [Safety Information](#) [Setup](#) [Operating Instructions](#) [Game Modes](#) [Maintenance](#) [Troubleshooting](#) [Specifications](#) [Support](#)

1. INTRODUCTION

The Hasbro Gaming Scrabble Flash electronic word game offers a compact and modern version of the classic word-building game. Designed for players aged 8 years and older, this game features five interactive SmartLink tiles that electronically track words and points. It provides engaging gameplay for individuals or groups, making it suitable for various settings including travel and family activities.

2. PACKAGE CONTENTS

The Scrabble Flash game package includes the following items:

- Five (5) SmartLink electronic letter cubes
- Five (5) CR2032 batteries (pre-installed)
- One (1) Storage box
- One (1) Instruction booklet



Figure 1: SmartLink tiles and storage box. The image displays five red electronic tiles, each showing a letter, alongside a black rectangular storage box.

3. SAFETY INFORMATION

WARNING: This product contains small parts and is not suitable for children under three (3) years of age due to choking hazards.

Ensure proper battery handling. Do not mix old and new batteries. Do not mix alkaline, standard (carbon-zinc), or rechargeable (nickel-cadmium) batteries. Remove batteries if the product is not used for an extended period.

4. SETUP

1. **Unpack Components:** Carefully remove the five SmartLink cubes, storage box, and instruction booklet from the packaging.
2. **Battery Installation:** The five CR2032 batteries are pre-installed in the SmartLink cubes. If replacement is needed, refer to the "Maintenance" section for instructions.
3. **Power On:** Press the power button on each SmartLink cube to turn them on. The tiles will emit a chime and display a letter.
4. **Prepare for Play:** Place the SmartLink cubes on a flat surface. Ensure they are close enough to each other to allow for easy arrangement into words.



Figure 2: Preparing SmartLink tiles for play. The image shows hands manipulating the electronic tiles on a surface.

5. OPERATING INSTRUCTIONS

Scrabble Flash utilizes SmartLink technology, allowing the electronic tiles to communicate when they touch. This enables the game to recognize formed words and track scores automatically.

Basic Gameplay:

1. **Start a Game:** After powering on, the tiles will display a random set of letters.
2. **Form Words:** Arrange the SmartLink tiles by sliding, swapping, and shuffling them to create valid words. The tiles must be touching for the game to recognize the word.
3. **Word Recognition:** When a valid word is formed, the tiles will light up and emit a beep, confirming the word.
4. **Scoring:** The game automatically keeps track of your score. At the end of a round or game, the tiles will digitally display your total score.
5. **Reset:** To start a new game with a fresh set of letters, press the reset button on one of the tiles.



Figure 3: Player interacting with SmartLink tiles. The image shows a person focused on arranging the electronic letter tiles.

6. GAME MODES

Scrabble Flash offers three distinct game modes for solo or group play:

6.1. Flash Mode

- **Objective:** Form as many words as possible from the same five letters within a 75-second time limit.
- **Bonus:** Each five-letter word successfully formed adds an additional five seconds to the timer.

6.2. Five Letter Flash Mode

- **Objective:** Find one five-letter word. Upon successful completion, you receive five new letters.
- **Goal:** Continue spelling as many words as possible with the new letters within the allotted 75 seconds.

6.3. Pass Flash Mode

- **Objective:** Players take turns passing the tiles. The goal is to form a five-letter word within a set time limit.
- **Elimination:** If a player fails to spell a word quickly enough, they are eliminated from the round. Play continues until only one player remains.

Adjustable Difficulty:

- For younger players or a simpler challenge, any game mode can be played using only four (4) tiles instead of five.

How many words can you make with these letters?

Got a minute? That's about all you need to play this addictive, fast-paced version of SCRABBLE. Just line up the letter tiles, then shuffle and slide them to find words fast and beat the clock!



The tiles flash when you form a word!

PAN

ANTS

PANS PAST PANTS

PANT

S

TAN SNAP

NAP SPAN

3 Solo or Competitive Games!

Game 1: SCRABBLE® FLASH
Find as many 3-to-5-letter words as you can!

Game 2: SCRABBLE® FIVE-LETTER FLASH
Find a 5-letter word for each new letter mix!

Game 3: SCRABBLE® PASS FLASH
Be the last player left in a faster and faster 5-letter-word battle!

Want an extra challenge?
Play with only 4 tiles!

S

N

A

P

Interactive SmartLink Tiles



- ⋮ Flash and beep with each word you make
- ⋮ Automatically time your turns
- ⋮ Display your score and the max possible score

Portable Storage Box

lets you play SCRABBLE Flash anytime, anywhere!



Contents: 5 SmartLink Letter Tiles, Storage Box, Rules

More Ways to Play!





Go to Hasbro.EA.com





Game code and certain audio visual materials © 2009 Electronic Arts Inc. EA, EA logo and Pogo.com are trademarks or registered trademarks of Electronic Arts Inc. All Rights Reserved. Published by Electronic Arts Inc. under license from Hasbro, Inc. All other trademarks are the property of their respective owners.

Not all titles available in all countries or on all platforms.

Figure 4: Overview of Scrabble Flash game modes. This image provides a visual summary of the different ways to play, including solo and competitive options.

7. MAINTENANCE

7.1. Cleaning:

- Wipe the SmartLink cubes and storage box with a soft, dry cloth.
- Do not use abrasive cleaners or immerse the electronic components in water.

7.2. Battery Replacement:

The SmartLink cubes require five (5) CR2032 batteries. To replace them:

1. Locate the battery compartment on each cube.
2. Using a small screwdriver, open the battery compartment cover.
3. Remove the old CR2032 batteries and dispose of them properly.
4. Insert new CR2032 batteries, ensuring correct polarity (+/-).
5. Close the battery compartment cover securely.

8. TROUBLESHOOTING

Problem	Possible Cause	Solution
Tiles not turning on.	Dead or incorrectly installed batteries.	Check battery polarity. Replace batteries if necessary (refer to Maintenance).
Tiles not recognizing words.	Tiles not touching properly or word is invalid.	Ensure all tiles forming the word are in full contact. Verify the word is a valid English word.
Inaccurate scoring or unexpected behavior.	Temporary electronic glitch.	Perform a soft reset by turning the tiles off and then on again. If issues persist, try replacing batteries.

9. SPECIFICATIONS

Feature	Detail
Model Number	24860
Brand	Hasbro Gaming
Product Dimensions	2.52 x 7.87 x 10.51 inches
Item Weight	15.2 ounces
Recommended Age	8 years and up
Batteries Required	5 x CR2032 (included)

10. SUPPORT

For further assistance, product information, or to inquire about warranty details, please visit the official Hasbro Gaming website or contact their customer support directly.

Website: www.hasbro.com

Please have your product model number (24860) available when contacting support.



© 2025 Hasbro Gaming. All rights reserved. Scrabble Flash is a trademark of Hasbro.