

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [Bomann](#) /

› [Bomann MWG 2216 H EB Built-in Microwave with Grill and Convection Instruction Manual](#)

Bomann MWG 2216 H EB

Bomann MWG 2216 H EB Built-in Microwave with Grill and Convection

Instruction Manual

1. INTRODUCTION

Thank you for choosing the Bomann MWG 2216 H EB Built-in Microwave with Grill and Convection. This manual provides essential information for the safe and efficient operation, installation, and maintenance of your appliance. Please read these instructions carefully before use and keep them for future reference.

This appliance combines microwave cooking, grilling, and convection functions to offer versatile cooking options for your kitchen.

2. IMPORTANT SAFETY INSTRUCTIONS

When using electrical appliances, basic safety precautions should be followed, including the following:

- Read all instructions before using the appliance.
- Ensure the voltage indicated on the appliance corresponds to your local mains voltage before connecting.
- Do not operate any appliance with a damaged cord or plug, or after the appliance malfunctions or has been damaged in any manner.
- Do not heat liquids or other foods in sealed containers as they are liable to explode.
- Only allow children to use the oven without supervision when adequate instructions have been given so that the child is able to use the oven in a safe way and understands the hazards of improper use.
- Always use microwave-safe cookware. Metal containers are not suitable for microwave cooking.
- Regularly clean the oven cavity, door, and seals.
- Do not attempt to service or repair the appliance yourself. Contact qualified service personnel.

3. PRODUCT OVERVIEW


Familiarize yourself with the components and control panel of your Bomann MWG 2216 H EB microwave.



Figure 3.1: Front view of the Bomann MWG 2216 H EB microwave oven, showing the door, digital display, and control panel with various buttons and a rotary knob.

Inklusive Drehteller & Grillrost

Doppelseitiger Grillrost für mehr Flexibilität

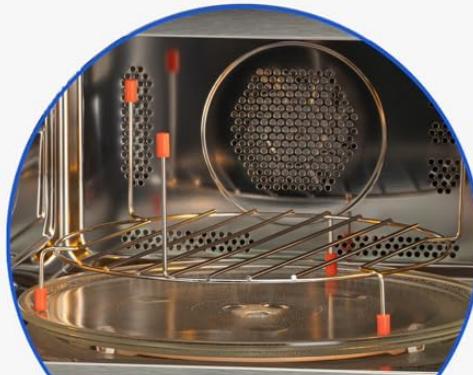

Grillrost #1
Ø 26 cm



Grillrost #2
Ø 26 cm



Drehteller
Ø 32 cm

Figure 3.2: Interior view of the microwave, illustrating the included glass turntable (32 cm diameter) and two different grill racks (26 cm diameter) for flexible cooking options.

Main Components:

- **Control Panel:** Digital display, function buttons, and rotary knob for settings.
- **Oven Door:** With viewing window and safety lock.
- **Turntable:** Glass plate for even cooking.
- **Grill Rack:** Used for grilling functions.
- **Oven Cavity:** Stainless steel interior for durability and easy cleaning.

4. SETUP AND INSTALLATION

This appliance is designed for built-in installation. Ensure proper ventilation and clearance as specified in the installation diagram.

3in1

Einbau-Mikrowelle

mit Rahmen

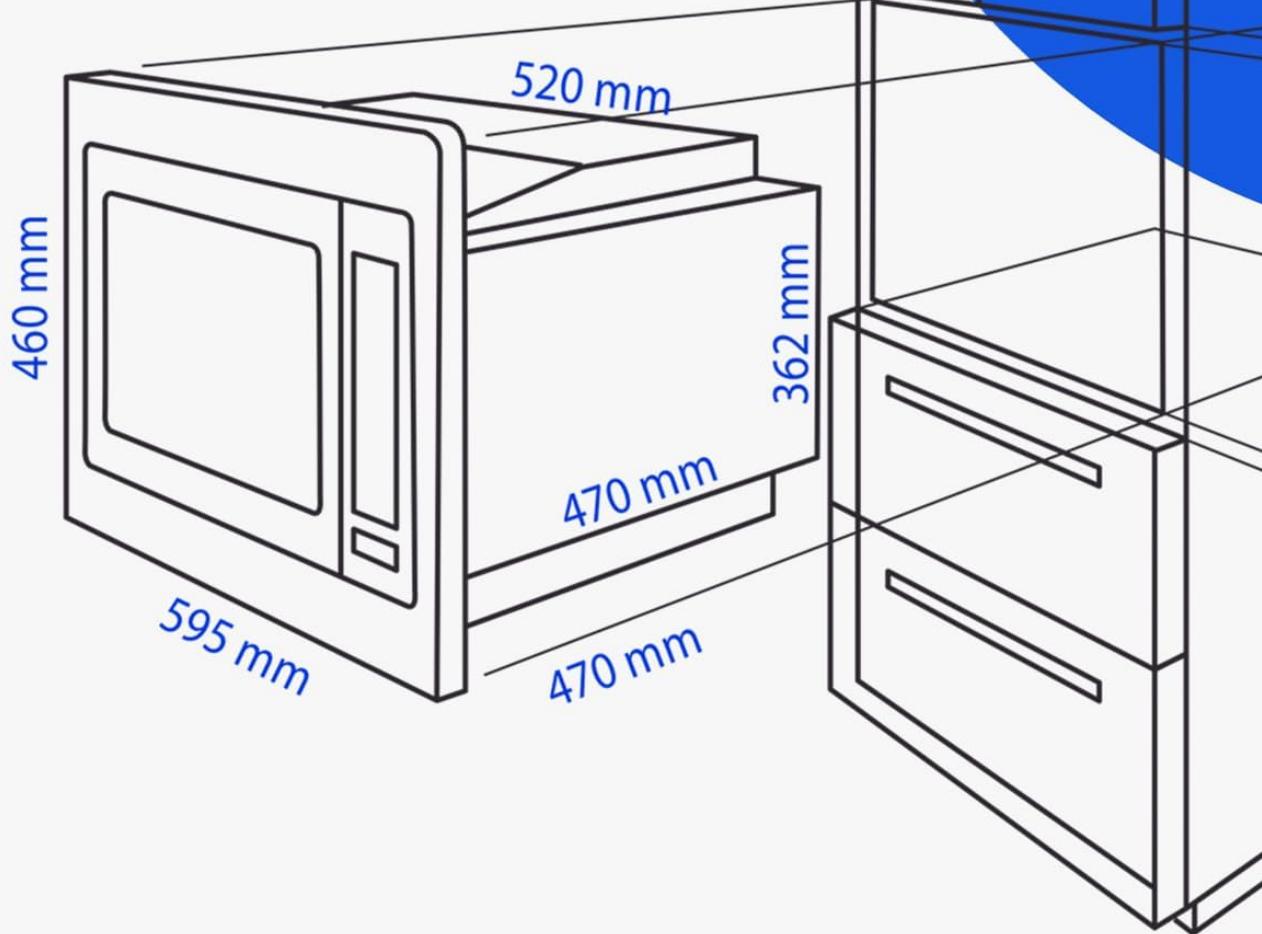


Figure 4.1: Dimensional diagram for built-in installation, showing the appliance's width (595 mm), height (460 mm), and depth (470 mm), along with cabinet cutout requirements.

Installation Steps:

1. Unpack the microwave and all accessories. Inspect for any damage.
2. Place the microwave into the prepared cabinet opening, ensuring it is level and securely fitted. Refer to the provided installation template for precise measurements.
3. Connect the power cord to a properly grounded electrical outlet (230V).
4. Ensure adequate ventilation around the appliance. Do not block any ventilation openings.
5. Place the turntable and turntable support ring inside the oven cavity.

For detailed installation instructions, consult the separate installation guide if provided with your appliance.

5. OPERATING INSTRUCTIONS

Your Bomann MWG 2216 H EB offers various cooking modes and features.



Edelstahlfront & -innenraum

Perfekt integriert in jede Küche

Figure 5.1: The microwave features a Quick Start function and Hot Air (convection) cooking with a temperature range of 130°C to 220°C, along with a stainless steel front and interior.

5.1. Setting the Clock

After plugging in the appliance, the display will show "0:00".

1. Press the "Clock/Pre-Set" button once.
2. Turn the rotary knob to set the hour.
3. Press "Clock/Pre-Set" again.
4. Turn the rotary knob to set the minutes.
5. Press "Clock/Pre-Set" to confirm.

5.2. Microwave Cooking

This appliance offers 5 microwave power levels (900W maximum).

1. Place food in a microwave-safe container on the turntable.

2. Press the "Microwave" button repeatedly to select the desired power level.
3. Turn the rotary knob to set the cooking time.
4. Press "Start/Quick Start" to begin cooking.

5.3. Grill Function

The grill function operates at 1400W. Use the grill rack for best results.

1. Place food on the grill rack.
2. Press the "Grill/Combi" button once for grill mode.
3. Turn the rotary knob to set the grilling time.
4. Press "Start/Quick Start" to begin grilling.

5.4. Hot Air (Convection) Cooking

The convection function allows for oven-like cooking with hot air circulation (2500W, 130°C - 220°C).

1. Place food in a heat-resistant container on the turntable or grill rack.
2. Press the "Convection" button.
3. Turn the rotary knob to select the desired temperature.
4. Press "Convection" again to confirm temperature.
5. Turn the rotary knob to set the cooking time.
6. Press "Start/Quick Start" to begin.

5.5. Combination Cooking

The appliance offers 4 combination power levels (Grill/Microwave & Microwave/Hot Air).

1. Place food in a suitable container.
2. Press the "Grill/Combi" button repeatedly to select the desired combination mode (e.g., C-1, C-2, C-3, C-4).
3. Turn the rotary knob to set the cooking time.
4. Press "Start/Quick Start" to begin.

5.6. Defrost Function

The defrost function allows thawing food by weight or time, with 2 dedicated programs.

1. Press the "Defrost" button.
2. Turn the rotary knob to select defrost by weight or time, and adjust the value.
3. Press "Start/Quick Start" to begin defrosting.

5.7. Automatic Cooking Menus

The microwave includes 10 pre-set automatic cooking menus for common foods.

10x Automatikprogramme

+ Heißluft (130°C–220°C)



inkl. 2x Auftau-
programme



Figure 5.2: The appliance features 10 automatic cooking programs and 2 defrost programs, with a generous 25-liter cooking capacity.

1. Press the "Auto Menu" button.
2. Turn the rotary knob to select the desired menu number (e.g., A-1 for pizza, A-2 for vegetables).
3. Press "Start/Quick Start" to confirm and begin.

5.8. Child Lock

To prevent unintended operation, especially by children, activate the child lock.



5x Mikrowellen-Leistungsstufen

+ 4x Kombi-Leistungsstufen
Grill/Mikrowelle & Mikrowelle/Heißluft

Figure 5.3: Key features include a child safety lock, a 95-minute timer with an end signal, 5 microwave power levels, and 4 combination power levels (Grill/Microwave & Microwave/Hot Air).

- **To activate:** Press and hold the "Stop/Clear" button for 3 seconds. A lock icon will appear on the display.
- **To deactivate:** Press and hold the "Stop/Clear" button for 3 seconds again. The lock icon will disappear.

6. MAINTENANCE AND CLEANING

Regular cleaning and proper maintenance will ensure the longevity and optimal performance of your microwave oven.

- **Cleaning the Exterior:** Wipe the exterior surfaces with a soft, damp cloth. Do not use abrasive cleaners or harsh chemicals.
- **Cleaning the Interior:** For spills and splatters, wipe the interior with a damp cloth immediately. For stubborn stains, place a bowl of water with lemon juice inside and microwave for a few minutes to loosen residue, then wipe clean.
- **Turntable and Support:** The glass turntable and support ring can be removed and washed in warm soapy

water or in a dishwasher.

- **Door Seals:** Keep the door seals clean to ensure a proper seal during operation.
- **Grill Element:** After grilling, ensure the grill element is cool before wiping away any food residue.

Always unplug the appliance before cleaning.

7. TROUBLESHOOTING

If you encounter problems with your microwave, refer to the following table for common issues and solutions.

Problem	Possible Cause	Solution
Microwave does not start.	Power cord unplugged; Door not closed properly; Child lock activated; Fuse blown.	Check power connection; Close door firmly; Deactivate child lock; Check household fuse.
Food not cooking evenly.	Food not stirred or rotated; Turntable not rotating; Incorrect power level/time.	Stir or rotate food during cooking; Ensure turntable is correctly placed and rotates freely; Adjust power and time settings.
Light inside oven not working.	Bulb needs replacement.	Contact qualified service personnel for bulb replacement.
Unusual noise during operation.	Turntable not correctly seated; Foreign object in cavity.	Re-seat turntable; Check for and remove any foreign objects.

If the problem persists after checking these points, please contact customer service.

8. SPECIFICATIONS

Technical specifications for the Bemann MWG 2216 H EB microwave oven.

Feature	Detail
Brand	Bemann
Model Number	MWG 2216 H EB
Color	Silver
Capacity	25 Liters
Microwave Power	900 Watts
Grill Power	1400 Watts
Convection Power	2500 Watts
Voltage	230 Volts

Feature	Detail
Material	Stainless Steel
Product Dimensions (D x W x H)	47 x 59.5 x 46 cm
Item Weight	21 Kilograms
Special Features	Defrost function, Automatic shut-off, 10 Auto menus, Child lock, Hot Air (Convection)
Installation Type	Built-in

9. WARRANTY AND SUPPORT

This product comes with a standard manufacturer's warranty. Please refer to the warranty card included with your purchase for specific terms and conditions.

For technical support, service, or spare parts, please contact your retailer or the authorized Bomann service center in your region. Do not attempt to repair the appliance yourself, as this may void the warranty and pose safety risks.