

## Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

Manuals.plus /

› [Kashimura](#) /

› [Kashimura LCD Simple Phone 2 SS-06 Instruction Manual](#)

## Kashimura SS-06

# Kashimura LCD Simple Phone 2 SS-06 Instruction Manual

Model: SS-06

[Information](#)   [Setup](#)   [Operation](#)   [Introduction](#)   [Safety](#)   [Maintenance](#)   [Troubleshooting](#)   [Specifications](#)   [Warranty & Support](#)

## 1. INTRODUCTION

---

Thank you for purchasing the Kashimura LCD Simple Phone 2, Model SS-06. This corded telephone is designed for ease of use, featuring a large 16-digit LCD display, luminous dial keys, and hands-free communication. This manual provides detailed instructions for setup, operation, maintenance, and troubleshooting to ensure optimal performance and longevity of your device. Please read this manual thoroughly before using the phone and keep it for future reference.

## 2. SAFETY INFORMATION

---

To prevent damage to your phone or injury to yourself or others, please observe the following safety precautions:

- Do not expose the phone to water or excessive moisture.
- Avoid placing the phone in direct sunlight or near heat sources.
- Do not attempt to disassemble or repair the phone yourself. Refer all servicing to qualified personnel.
- Keep the phone away from strong magnetic fields.
- Use only the provided cables and accessories.
- Clean the phone with a soft, dry cloth. Do not use liquid or aerosol cleaners.
- Ensure the phone is placed on a stable surface to prevent accidental falls.

## 3. PACKAGE CONTENTS

---

Verify that all items are present in the package:

- Kashimura LCD Simple Phone 2 (Main Unit)
- Handset
- Handset Cord

- Telephone Line Cord
- Instruction Manual (this document)



Figure 1: Contents of the Kashimura LCD Simple Phone 2 SS-06 package. The image displays the white telephone unit with its handset and coiled cord, a separate telephone line cord, the product box, and the instruction manual. The phone features a large LCD screen and a standard numeric keypad.

## 4. PRODUCT OVERVIEW

Familiarize yourself with the various parts of your Kashimura LCD Simple Phone 2:

- **LCD Display:** Large 16-digit screen for displaying numbers, call duration, and other information.
- **Keypad:** Standard numeric keys (0-9, \*, #) for dialing. Features luminous backlighting for visibility in low light.
- **Handset:** For traditional voice communication.
- **Speaker Button:** Activates hands-free calling.
- **Redial Button:** Dials the last number called.
- **Hold Button:** Places the current call on hold, often accompanied by a melody.
- **Catch Button (Call Waiting):** Used to switch between calls if call waiting service is active.
- **Ringer Volume Switch:** Adjusts the incoming call volume.
- **Line Jack:** Connects the phone to the telephone wall outlet.
- **Handset Jack:** Connects the handset to the main unit.

## 5. SETUP

---

### 5.1 Connecting the Phone

1. Connect one end of the coiled handset cord to the handset and the other end to the handset jack on the main phone unit.
2. Connect one end of the telephone line cord to the LINE jack on the back or side of the phone unit.
3. Connect the other end of the telephone line cord to your telephone wall outlet.
4. Ensure all connections are secure. The phone is now ready for use.

### 5.2 Wall Mounting (Optional)

The SS-06 can be mounted on a wall. Refer to the mounting holes on the back of the unit. Use appropriate screws (not included) and wall anchors suitable for your wall type. Ensure the phone is securely fastened before use.

## 6. OPERATING INSTRUCTIONS

---

### 6.1 Making a Call

1. Lift the handset or press the **Speaker** button for hands-free mode.
2. Listen for a dial tone.
3. Dial the desired phone number using the keypad. The number will appear on the LCD display.
4. Once the call is connected, begin your conversation.
5. To end the call, replace the handset or press the **Speaker** button again.

### 6.2 Receiving a Call

1. When the phone rings, lift the handset or press the **Speaker** button to answer.
2. To end the call, replace the handset or press the **Speaker** button.

### 6.3 Redial Function

To redial the last number called, simply lift the handset (or press **Speaker**) and then press the **Redial** button.

### 6.4 Hold Function

During a call, press the **Hold** button to place the caller on hold. A hold melody may play. To resume the call, press the **Hold** button again or lift the handset if it was placed down.

### 6.5 Call Waiting (Catch Function)

If you subscribe to call waiting service and hear a call waiting tone during a conversation, press the **Catch** button to switch to the incoming call. Press **Catch** again to switch back to the original call.

### 6.6 Ringer Volume Adjustment

Locate the ringer volume switch on the side or back of the phone. Adjust it to your preferred volume level (e.g., High, Low, Off).

### 6.7 Luminous Dial Light

The keypad features a luminous backlight that activates when keys are pressed or during certain operations, making it easy to dial in dimly lit environments.

## 7. MAINTENANCE

---

Proper care ensures the longevity of your phone:

- **Cleaning:** Wipe the phone's surface with a soft, dry, lint-free cloth. Do not use abrasive cleaners, waxes, or solvents.
- **Storage:** If storing the phone for an extended period, disconnect it from the telephone line and store it in a cool, dry place away from direct sunlight.
- **Cords:** Periodically check the handset and line cords for any signs of wear or damage. Replace if necessary.

## 8. TROUBLESHOOTING

---

If you encounter issues with your phone, try the following solutions before seeking professional assistance:

Problem	Possible Cause	Solution
No dial tone.	Phone line not connected properly or line issue.	Ensure the telephone line cord is securely connected to both the phone and the wall outlet. Test with another phone if available.
Cannot make or receive calls.	Incorrect connection, service issue, or phone malfunction.	Check all connections. Verify your telephone service is active. If problem persists, contact your service provider.
LCD display is blank.	No power to the phone (unlikely for corded, but check line).	Ensure the phone line is connected. The phone draws power from the line. If the line is active, the display should function.
Ringer does not sound.	Ringer volume set to Off or Low.	Adjust the ringer volume switch to a higher setting.
Keypad lights are not working.	This feature activates upon key press or during certain operations.	Press any key to see if the backlight activates. If not, and the phone functions otherwise, this may indicate a minor issue not affecting core functionality.

## 9. SPECIFICATIONS

---

Feature	Detail
Model Number	SS-06
Brand	Kashimura
Display	16-digit LCD
Keypad Type	Single Keypad with Luminous Dial Light
Power Source	Corded Electric (Line Powered)
Functions	Hands-free, Redial, Call Waiting (Catch), Hold Melody, Ringer Volume Adjustment

Feature	Detail
Compatibility	Dial Pulse and Tone Lines
Mounting	Desk or Wall Mountable
Product Weight	563 g
Package Dimensions	19.7 x 19.5 x 6.3 cm

## 10. WARRANTY AND SUPPORT

---

Kashimura products are manufactured to high-quality standards. For information regarding warranty coverage, please refer to the warranty card included with your product or visit the official Kashimura website. If you require technical support or have questions not covered in this manual, please contact Kashimura customer service through their official channels.

*Note: The purchase of this product is restricted to individuals 18 years or older.*

