

Logitech 915-000113

Logitech Harmony 600 Universal Remote Instruction Manual

Model: 915-000113

INTRODUCTION

The Logitech Harmony 600 Universal Remote is designed to simplify your home entertainment experience by consolidating control of multiple devices into a single, easy-to-use remote. Its intuitive design, backlit screen, and one-click activity buttons allow for seamless operation of your television, sound system, and other media devices.

This remote replaces up to five other remotes and supports over 5,000 brands and 225,000 devices, ensuring compatibility with your current and future entertainment setup.



Figure 1: Front view of the Logitech Harmony 600 Universal Remote. This image displays the remote's full layout, including the LCD screen, activity buttons, navigation controls, and numeric keypad, highlighting its ergonomic shape and button arrangement.

Key Features:

- Controls up to 5 home entertainment devices.
- Backlit keypad for easy use in low light conditions.
- Easy access to movies, TV, music, and other activities with one-click buttons.
- Supports over 5,000 brands and 200,000 devices.
- Features a USB Mini-B port for computer connectivity and programming.

SETUP GUIDE

1. Package Contents

Before you begin, ensure all components are present:

- Logitech Harmony 600 Universal Remote
- USB Mini-B Cable (for computer connection)
- User Documentation (this manual)

2. Battery Installation

The Harmony 600 remote requires two (2) AA batteries (not included) for operation.

1. Locate the battery compartment on the back of the remote.
2. Slide the battery cover downwards and lift it off.
3. Insert two AA batteries, ensuring the positive (+) and negative (-) terminals align with the indicators inside the compartment.
4. Replace the battery cover by sliding it back into place until it clicks securely.



Figure 2: Side view of the Logitech Harmony 600 Universal Remote. This image illustrates the remote's ergonomic design and the location of the battery compartment on the underside, which is accessed from the back.

3. Initial Configuration and Programming

To program your Harmony 600 remote, you will need a computer with internet access. The remote is configured using Logitech's Harmony software.

1. **Download Software:** Visit the official Logitech Harmony website (logitech.com/harmony) and download the Harmony software for your operating system.
2. **Connect Remote:** Connect the Harmony 600 remote to your computer using the provided USB Mini-B cable.
3. **Launch Software:** Open the Harmony software and follow the on-screen instructions to create an account or log in.
4. **Add Devices:** The software will guide you through adding your home entertainment devices (TV, DVD player, audio receiver, etc.) by brand and model number.

5. **Create Activities:** Define "Activities" such as "Watch TV," "Watch a Movie," or "Listen to Music." The software will automatically configure the remote to turn on the necessary devices and switch to the correct inputs for each activity.
6. **Sync Remote:** Once configuration is complete, sync the settings to your Harmony 600 remote via the USB connection.

Note: Ensure your computer's internet connection is stable during the software download and device configuration process.

OPERATING YOUR HARMONY 600 REMOTE

Once configured, the Harmony 600 remote simplifies control of your entertainment system.



Figure 3: Angled view of the Logitech Harmony 600 Universal Remote. This perspective showcases the remote's ergonomic curve and the arrangement of its buttons, including the activity buttons at the top and the navigation cluster.

1. Using Activity Buttons

The most powerful feature of your Harmony remote is its Activity buttons, located at the top of the remote. Pressing an Activity button (e.g., "Watch TV," "Watch a Movie") will automatically:

- Turn on all necessary devices (e.g., TV, cable box, audio receiver).
- Switch each device to the correct input.
- Map the remote's buttons to the appropriate device (e.g., volume controls the receiver, channel controls the cable box).

2. Navigating the Backlit Screen

The backlit LCD screen displays commands and options relevant to your current activity or device. Use the navigation buttons (up, down, left, right, OK) around the screen to select options or view additional commands.

3. Device Control

While in an activity, the remote intelligently controls the correct device. If you need to control a specific device directly (e.g., adjust settings on your TV while watching a movie), you can press the "Devices" button on the screen or a dedicated device button if configured, then select the desired device.

4. Help Feature

If an activity does not start correctly or you encounter an issue, press the "Help" button on the remote. The remote will guide you through troubleshooting steps on its screen to resolve common problems.

MAINTENANCE

Cleaning Your Remote

To maintain the appearance and functionality of your Harmony 600 remote:

- Use a soft, lint-free cloth to wipe the surface of the remote.
- For stubborn smudges, slightly dampen the cloth with water. Avoid using harsh chemicals or abrasive cleaners.
- Do not allow moisture to enter any openings.

Battery Replacement

When the remote's performance degrades or the screen dims, it's time to replace the batteries. Follow the battery installation steps outlined in the "Setup Guide" section. Always replace both AA batteries simultaneously with new ones.

TROUBLESHOOTING

If you encounter issues with your Logitech Harmony 600 remote, try the following solutions:

Problem	Possible Solution
Remote is unresponsive or screen is blank.	Check battery levels and replace if necessary. Ensure batteries are inserted with correct polarity.
Devices do not turn on or switch inputs during an activity.	Press the "Help" button on the remote and follow the on-screen prompts. Ensure the remote is pointed directly at your devices. Verify that all devices are correctly added and configured in the Harmony software. Re-sync the remote if changes were made. Check that there are no obstructions between the remote and your devices.
Specific buttons do not work for a device.	Ensure you are in the correct activity or have selected the correct device. Re-program the specific button or device using the Harmony software.
Remote loses settings.	This is rare. Re-sync the remote with the Harmony software. Ensure batteries are not completely drained for extended periods.

SPECIFICATIONS

Feature	Detail
Model Number	915-000113
Product Dimensions (L x W x H)	5.39 x 18.5 x 9.53 inches
Item Weight	13.6 ounces
Batteries Required	2 AA batteries (not included)
Max Number of Supported Devices	5
Compatible Devices	Television, DVD players, Audio receivers, etc. (configurable via software)

Feature	Detail
Connectivity	Infrared (IR), USB Mini-B (for programming)
Color	Silver/Grey
Date First Available	May 23, 2010

WARRANTY AND SUPPORT

Warranty Information

Please note that this product is often sold "as is." For specific warranty details, if any, please refer to the original purchase documentation or contact the retailer from whom the product was acquired. Logitech's official website may provide general warranty terms for their products.

Customer Support




For further assistance, technical support, or to access the latest software and drivers for your Harmony 600 remote, please visit the official Logitech support website:


[Logitech Support Website](#)

You may also find helpful FAQs and community forums on their website.

© 2024 Logitech. All rights reserved. Harmony is a trademark of Logitech.

Related Documents

	<p>Logitech Harmony One User Manual</p> <p>This user manual provides comprehensive instructions for setting up, using, personalizing, and troubleshooting the Logitech Harmony One Advanced Universal Remote. Learn how to control your home entertainment system with ease.</p>
	<p>Logitech Harmony 785 Remote User Manual</p> <p>User manual for the Logitech Harmony 785 universal remote control, detailing setup, features, customization, and troubleshooting.</p>
	<p>Logitech Harmony 700 Remote Setup Guide: Effortless Home Entertainment</p> <p>Learn how to set up your Logitech Harmony 700 remote for seamless control of your home entertainment system. Includes package contents, device setup, charging, and support.</p>

 890 Harmony Remote <small>User Manual version 1.1</small>	<p>Logitech Harmony 890 Remote User Manual</p> <p>User manual for the Logitech Harmony 890 remote, detailing setup, features, customization, and troubleshooting for home entertainment systems.</p>
--	--