

Homebasix C31020ASK3L

HOMEBASIX C31020ASK3L Fireplace Screen User Manual

Model: C31020ASK3L

1. INTRODUCTION

Thank you for choosing the HOMEBASIX C31020ASK3L Fireplace Screen. This manual provides essential information for the safe and effective use of your new fireplace screen. The C31020ASK3L is an arch-style, three-panel fireplace screen featuring a tubular frame with an antique silver finish and black trim. Its dimensions are approximately 30.5 inches in height and 52 inches in width. Please read all instructions carefully before setup and operation.

2. SAFETY INFORMATION

- Always position the fireplace screen at a safe distance from the fire to prevent direct contact with flames or excessive heat, which could damage the screen or cause burns.
- Ensure the screen is stable and cannot be easily knocked over, especially in households with children or pets.
- Do not use the fireplace screen as a barrier for unattended fires. Always supervise active fires.
- The screen is designed to contain sparks and embers, but it does not eliminate the risk of fire. Keep flammable materials away from the fireplace area.
- Allow the screen to cool completely before attempting to move or clean it.
- Inspect the screen regularly for any damage, such as bent panels or loose connections. Do not use if damaged.

3. PACKAGE CONTENTS

Verify that all components are present before proceeding with setup.

- 1 x HOMEBASIX C31020ASK3L Fireplace Screen (Pre-assembled, three-panel unit)



Image 1: The HOMEBASIX C31020ASK3L Fireplace Screen, showing its three-panel arch design with antique silver and black trim.

4. SETUP

The HOMEBASIX C31020ASK3L Fireplace Screen comes pre-assembled and requires no tools for setup.

1. **Unpack the Screen:** Carefully remove the fireplace screen from its packaging. Retain packaging materials for future storage or transport if needed.
2. **Position the Screen:** Place the fireplace screen directly in front of your fireplace opening.
3. **Adjust Panels:** Gently unfold the side panels to create a stable, self-standing structure. Adjust the angle of the side panels until the screen stands securely and covers the entire fireplace opening. Ensure there are no gaps that could allow sparks or embers to escape.
4. **Check Stability:** Lightly push on the top of the screen to confirm it is stable and will not tip over easily. Adjust the panel angles further if necessary.

5. OPERATING INSTRUCTIONS

The fireplace screen is designed for passive operation, providing a protective barrier.

- Once set up as described in Section 4, the screen acts as a shield against sparks and embers from an active fire.
- Do not attempt to move the screen while a fire is burning or while the screen is hot.
- To access the fireplace, carefully fold one or both side panels inward, or temporarily remove the entire screen once the fire has subsided and the screen is cool enough to handle.

6. MAINTENANCE

Proper care will ensure the longevity and appearance of your fireplace screen.

- **Cleaning:** Allow the screen to cool completely before cleaning. Use a soft, dry cloth to wipe away dust and soot. For more stubborn marks, a slightly damp cloth with mild soap can be used, followed by immediate drying with a clean, dry cloth. Avoid abrasive cleaners or harsh chemicals, as these can damage the powder-coated finish.
- **Inspection:** Periodically check the screen for any signs of wear, rust, or damage to the mesh or frame. Address any issues promptly to maintain safety and appearance.
- **Storage:** When not in use, especially during off-seasons, the screen can be folded flat for compact storage. Store in a dry place to prevent rust.

7. TROUBLESHOOTING

Problem	Possible Cause	Solution
Screen is unstable or tips easily.	Panels are not angled correctly. Uneven floor surface.	Adjust the angle of the side panels to create a wider, more stable base. Ensure the screen is placed on a flat, level surface.
Soot or ash buildup on screen.	Normal use near a fireplace.	Allow screen to cool. Wipe with a dry, soft cloth. For heavier buildup, use a slightly damp cloth with mild soap and dry immediately.
Damage to mesh or frame.	Impact or excessive heat exposure.	Discontinue use if structural integrity is compromised. Contact customer support for replacement options if within warranty.

8. SPECIFICATIONS

Feature	Detail
Brand	Homebasix
Model Number	C31020ASK3L
Product Dimensions	9.3 x 27 x 31.5 inches (approx. 30.5"H x 52"W when unfolded)
Item Weight	8.27 pounds
Finish Type	Powder Coated
Style	Traditional
Assembly Required	No
Batteries Required	No
GTIN / UPC	045734990647 / 783329982690

9. WARRANTY INFORMATION

Specific warranty details for the HOMEBASIX C31020ASK3L Fireplace Screen are not provided in the available product information. Please refer to your purchase receipt or contact the retailer for information regarding warranty coverage.

10. CUSTOMER SUPPORT

For further assistance or inquiries regarding your HOMEBASIX C31020ASK3L Fireplace Screen, please contact the retailer where the product was purchased. Manufacturer contact information was not provided in the available product details.

