

[Manuals.plus](#) /

› [DUALIT](#) /

› Dualit 47030 New Generation Vario Toaster Instruction Manual

DUALIT 47030

Dualit 47030 New Generation Vario Toaster

INSTRUCTION MANUAL

1. Product Overview

The Dualit 47030 New Generation Vario Toaster is a robust and versatile 4-slice toaster, hand-built in England since 1950. Designed for longevity and repairability, it features visible screws allowing for full disassembly and replacement of all components. This model includes defrost and bagel functions, along with an energy-saving option to activate individual slots. Its patented ProHeat elements are protected by a durable coating, making them highly resistant to damage. The manual timer and mechanical 'Pick & Pop' lever provide precise control over the toasting process.



Image: The Dualit 47030 New Generation Vario Toaster in polished silver, featuring four toasting slots and manual control knobs on the right side.



Image: The Dualit 47030 Toaster positioned on a kitchen counter, alongside a matching kettle and toasted bread.

2. Safety Information

- **Electrical Safety:** Always ensure the toaster is unplugged from the mains supply before cleaning or if it is not in use. Do not immerse the toaster, cord, or plug in water or any other liquid.
- **Heat Warning:** The exterior surfaces of the toaster can become very hot during operation. Always use the controls and avoid touching hot surfaces. Allow the toaster to cool completely before handling or cleaning.
- **Proper Placement:** Place the toaster on a stable, heat-resistant surface, away from flammable materials such as curtains or walls. Ensure adequate ventilation around the appliance.
- **Food Items:** Do not toast items that are too large or irregularly shaped, as they may get stuck. Never insert metal objects into the toaster slots.
- **Crumb Tray:** Regularly empty the crumb tray to prevent the build-up of crumbs, which can pose a fire hazard.
- **Supervision:** This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety. Children should be supervised to ensure that they do not play with the appliance.
- **Damaged Cord:** If the supply cord is damaged, it must be replaced by the manufacturer, its service agent, or similarly qualified persons in order to avoid a hazard.

3. Setup

1. **Unpacking:** Carefully remove the toaster from its packaging. Retain the packaging for future storage or transport if

needed.

2. **Placement:** Position the toaster on a flat, stable, and heat-resistant surface. Ensure there is sufficient space around the toaster for ventilation, at least 10 cm (4 inches) from walls or other appliances.
3. **First Use:** Before toasting food for the first time, operate the toaster without bread on a medium setting (e.g., '3' on the browning control) for a few cycles. This will burn off any manufacturing residues and eliminate initial odors. Ensure the area is well-ventilated during this process.
4. **Power Connection:** Plug the toaster into a grounded electrical outlet. Ensure the voltage rating of the toaster matches your local power supply.

4. Operating Instructions

The Dualit Vario Toaster offers precise control over your toasting experience. Familiarize yourself with the control knobs and levers.



Image: A detailed view of the Dualit toaster's control panel, highlighting the browning control dial and the individual slot selector switches.

4.1. Basic Toasting

1. **Insert Bread:** Place slices of bread into the desired toasting slots.
2. **Select Slots:** Use the individual slot selector switches (located above the browning dial) to activate only the slots you intend to use. This saves energy. For example, if toasting one slice, activate only one slot.
3. **Set Browning:** Turn the browning control dial (the larger dial) to your desired level of browning. Settings typically range from 1 (light) to 8 (dark).
4. **Lower Lever:** Push down the 'Pick & Pop' lever (the black knob on the front) to lower the bread into the toaster. The toaster will begin toasting.
5. **Ejection:** The toaster features a manual timer. When the timer reaches zero, the toast will automatically pop up. You can also manually lift the 'Pick & Pop' lever at any time to check the toast or remove it.

4.2. Defrost Function

To toast frozen bread, place the bread in the slots, select the desired slots, and then turn the browning control dial to the snowflake symbol (❄) before selecting your browning level. This will extend the toasting time to properly defrost and toast the bread.

4.3. Bagel Function

The bagel function toasts only the cut side of the bagel while warming the outer side. To use, slice your bagel and place it into the slots with the cut side facing inwards. Select the desired slots and turn the browning control dial to the bagel symbol (◯) before selecting your browning level.

5. Maintenance and Cleaning

Regular cleaning ensures optimal performance and extends the life of your Dualit toaster. Always unplug the toaster and allow it to cool completely before cleaning.

5.1. Crumb Tray Cleaning

1. **Unplug:** Ensure the toaster is unplugged from the power outlet.
2. **Remove Tray:** Locate the crumb tray at the bottom of the toaster. Pull the tray out completely.
3. **Empty:** Dispose of accumulated crumbs.
4. **Clean:** Wipe the tray with a damp cloth. For stubborn residue, a mild detergent can be used, but ensure the tray is thoroughly dried before reinserting.
5. **Reinsert:** Slide the crumb tray back into its position until it clicks securely.



Image: The Dualit toaster with its crumb tray partially pulled out, demonstrating the ease of access for cleaning.

5.2. Exterior Cleaning

- Wipe the exterior of the toaster with a soft, damp cloth. For polished surfaces, a non-abrasive stainless steel cleaner can be used to maintain its shine.
- Do not use abrasive cleaners, scouring pads, or harsh chemicals, as these can damage the finish.
- Ensure the toaster is completely dry before plugging it back in.

6. Troubleshooting

Problem	Possible Cause	Solution
Toaster not turning on.	Not plugged in; power outlet not working; faulty fuse/circuit breaker.	Ensure the toaster is securely plugged into a working outlet. Check your household fuse box or circuit breaker.

Problem	Possible Cause	Solution
Bread not toasting or toasting unevenly.	Browning control set too low; incorrect slot selection; elements dirty or damaged.	Adjust the browning control to a higher setting. Ensure the correct slots are selected. If elements appear dirty, refer to maintenance. If elements are damaged, contact a qualified technician.
Smoke coming from toaster.	Crumbs accumulated in tray; food stuck in slots; first use residue.	Immediately unplug the toaster. Empty the crumb tray. If food is stuck, carefully remove it after the toaster has cooled and is unplugged. Smoke on first use is normal but ensure ventilation.
Lever not staying down.	Toaster not powered on; bread too thick or stuck.	Ensure the toaster is plugged in and the power is on. Check if bread is obstructing the lever mechanism.

7. Specifications

Feature	Detail
Brand	DUALIT
Model Number	47030
Color	Silver (Polished)
Product Dimensions	36 x 21 x 22 cm (L x D x H)
Item Weight	4.2 Kilograms
Power	2200 Watts
Voltage	220 Volts
Material	Die-cast Aluminum, Stainless Steel
Number of Slices	4
Additional Features	Crumb tray, Bagel function, Defrost function, Individual slot control (energy saving)

8. Warranty and Support

The Dualit 47030 New Generation Vario Toaster is designed and hand-built for exceptional durability and a long lifespan. A key feature of Dualit Classic toasters is their repairability; all components are designed to be replaceable. This commitment to repairability ensures that your toaster can be maintained and serviced for many years.

For specific warranty terms, service inquiries, or to purchase replacement parts, please refer to the official Dualit website or contact Dualit customer support directly. Contact information can typically be found on the product packaging or the manufacturer's official website.

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question