

## Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [KidKraft](#) /

› [KidKraft Wooden Fire Station Set Model 63236 Instruction Manual](#)

### KidKraft 63236

# KidKraft Wooden Fire Station Set Instruction Manual

MODEL: 63236

## Introduction

Welcome to the world of imaginative play with your new KidKraft Wooden Fire Station Set. This playset is designed to inspire heroic adventures and provide hours of engaging fun for children. Crafted from durable wood and featuring vibrant, hand-drawn graphics, this fire station is built to last and encourage creative storytelling. Kids will love pretending they are real-life heroes as they interact with the various features and accessories of this adorable wooden fire station.



*Image: A young child engages with the KidKraft Wooden Fire Station Set, moving a firefighter figure near the fire truck. The playset features multiple levels, a helipad, and detailed interior designs.*

## Package Contents

Your KidKraft Wooden Fire Station Set includes the following components:

- Wooden Fire Station structure
- 15 total play pieces, including:
  - Helicopter
  - Bendable firefighter figures (quantity may vary, typically includes at least one)
  - Dalmatian dog figure
  - Fire truck with extending ladder
  - Various furniture and accessories (e.g., bunk beds, desk, chairs, fire extinguisher)



*Image: A detailed look inside the fire station, highlighting the bunk beds, a Dalmatian dog figure, and a small dressing table, all part of the playset's accessories.*

## Setup and Assembly

Your KidKraft Wooden Fire Station Set features EZ Kraft Assembly™ technology, designed for quicker and easier setup. Follow the included graphical instructions carefully to assemble the playset. All necessary tools and hardware are typically provided. Ensure all pieces are securely fastened before play begins.

### Assembly Tips:

- Lay out all components and hardware before starting.
- Follow the step-by-step diagrams provided in the separate assembly guide.
- Tighten all screws and connectors firmly, but do not overtighten.
- Ensure the playset is placed on a flat, stable surface.

## Operating Instructions

Engage in various scenarios with your fire station playset:

- **Garage Doors:** The garage doors on the ground floor can be opened and closed manually, allowing

the fire truck to enter and exit the station.

- **Fire Bell:** Ring the bell located on the top of the station to signal an emergency or alert firefighters to action.
- **Fire Truck:** The included fire truck features an extending ladder for reaching high places during rescue missions.
- **Helicopter:** Position the helicopter on the helipad on the roof for aerial support during emergencies.
- **Figures:** Use the bendable firefighter figures and Dalmatian dog to create dynamic rescue scenes and daily life at the fire station.



*Image: A close-up of a child's hand operating the functional red garage doors of the fire station, which open and close to allow vehicles access.*



*Image: A child is shown playing with the red fire truck accessory, demonstrating its extendable ladder feature, ready for rescue scenarios.*

## Maintenance

To ensure the longevity and cleanliness of your KidKraft Wooden Fire Station Set:

- Wipe down all wooden and plastic surfaces with a damp cloth and mild soap as needed.
- Avoid using harsh chemical cleaners or abrasive materials, as these may damage the finish.
- Regularly inspect all parts for any signs of wear, damage, or loose connections.
- Store the playset in a dry environment away from direct sunlight or extreme temperatures to prevent warping or fading.

## Troubleshooting

If you encounter any issues with your playset, consider the following:

- **Loose Parts:** Check all screws and fasteners. Tighten them if necessary, but do not overtighten.
- **Sticking Doors/Mechanisms:** Ensure no debris is obstructing moving parts. A small amount of food-grade lubricant can be applied to hinges if needed.
- **Missing Pieces:** Refer to the package contents list. If a piece is missing, contact KidKraft customer support.

## Specifications

- **Product Dimensions:** 16 x 16 x 20 inches
- **Item Weight:** 9.92 pounds
- **Item Model Number:** 63236
- **Manufacturer Recommended Age:** 36 months - 3 years
- **Material:** Wood, plastic (for some accessories)
- **Assembly Required:** Yes (EZ Kraft Assembly™)



*Image: A diagram illustrating the approximate height of the fire station playset, measuring 27 inches (68 cm) from base to top.*

## Safety Information

Please ensure safe play by adhering to the following guidelines:

- Always supervise children during play.
- This product is intended for children aged 36 months to 3 years. Keep small parts away from younger children to prevent choking hazards.
- Regularly check the playset for any loose or broken parts that could pose a safety risk. Discontinue use if damage is found.
- Do not allow children to climb on the playset, as it is not designed to support a child's weight.

## **Warranty and Support**

---

KidKraft products are designed for quality and durability. For specific warranty information, please refer to the documentation included with your purchase or visit the official KidKraft website. If you require assistance with assembly, missing parts, or have any questions regarding your product, please contact KidKraft customer support directly.