

Vicks V1800

Vicks Waterless Vaporizer V1800 Instruction Manual

MODEL: V1800

Introduction

The Vicks Waterless Vaporizer V1800 is designed to provide soothing menthol vapors without the need for water. Its compact design and integrated nightlight make it suitable for bedside use, offering up to 8 hours of comfort per VapoPad. This manual provides essential information for the safe and effective operation and maintenance of your vaporizer.

Important Safety Instructions

- Read all instructions before using this appliance.
- Do not place the vaporizer in water or other liquids.
- Always unplug the vaporizer when not in use or before cleaning.
- Keep out of reach of children and pets.
- Do not use with extension cords. Plug directly into a 120V AC wall outlet.
- Do not block air vents.
- Use only Vicks VapoPads with this device.
- If the power cord or plug is damaged, do not operate the appliance. Contact customer support for assistance.

Package Contents

- Vicks Waterless Vaporizer V1800 Unit
- 5 Vicks VapoPads (initial supply)

Setup

1. Open the lid of the Vicks Waterless Vaporizer.
2. Tear open one Vicks VapoPad packet.

3. Insert the VapoPad into the designated slot inside the vaporizer.
4. Close the lid securely.
5. Place the vaporizer on a firm, level surface away from walls or fabrics that could block airflow.
6. Plug the vaporizer into a standard 120V AC wall outlet.



Image: The Vicks Waterless Vaporizer V1800 unit shown alongside a box of VapoPads and an individual VapoPad packet, illustrating the product and its consumables.

Operating Instructions

1. Once plugged in, the vaporizer will begin to warm up and release menthol vapors.
2. The unit features **3 settings for scent intensity control**. Adjust the slider switch located on the side of the unit to your desired intensity level (1, 2, or 3).
3. The integrated **nightlight glows** for nighttime visibility, providing a soft illumination.
4. Each VapoPad provides up to 8 hours of soothing vapors.
5. To turn off the vaporizer, unplug it from the wall outlet.

Maintenance and Care

- **Replacing VapoPads:** After approximately 8 hours of use, the VapoPad will no longer release scent. Unplug the unit, open the lid, remove the old pad, and insert a new one as described in the Setup section.
- **Cleaning:** Ensure the unit is unplugged and completely cool before cleaning. Wipe the exterior surfaces with a soft, damp cloth. Do not use abrasive cleaners or immerse the unit in water.
- **Storage:** Store the vaporizer in a cool, dry place when not in use.

Troubleshooting

- **No Vapor/Scent:** Ensure the unit is plugged in and the VapoPad is fresh. Check if the intensity setting is too low.
- **Unit Not Turning On:** Verify the unit is securely plugged into a working electrical outlet. Check for any visible damage to the cord or plug.
- **Weak Scent:** Replace the VapoPad with a new one. Adjust the intensity setting to a higher level.

Specifications

Brand	Vicks
Model Number	V1800
Product Dimensions	3.94 x 3.94 x 5.12 inches
Item Weight	7.2 ounces
Power Source	Corded Electric (120V AC)
Special Features	3 Scent Intensity Settings, Compact Design, 6-foot Cord, Nightlight
Included Components	Scent Pad (initial 5 included)
Manufacturer	Kaz USA, Inc.

Warranty and Customer Support

For warranty information or customer support, please refer to the packaging or contact Kaz USA, Inc. directly. Keep your purchase receipt as proof of purchase.