

## Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

> [Advance](#) /

> [Advance Kent Euroclean UZ964 Hip Vac Vacuum Bags - Instruction Manual](#)

## Advance UZ964

# Advance Kent Euroclean UZ964 Hip Vac Vacuum Bags

Instruction Manual for Models UZ964, UZ964-H, UZ964-SR, UZ964-400

## INTRODUCTION

---

This manual provides essential instructions for the proper installation, operation, and maintenance of Advance / Kent Hip Vac vacuum cleaner bags. These bags are designed for use with Advance and Euroclean Kent UZ964 series Hip Vac models, including UZ 964, UZ 964-H, UZ 964-SR, and UZ 964-400. Utilizing Micro-Plus micro-filtration media, these bags are engineered to capture up to 99% of particles smaller than 1 micron, ensuring efficient dust and allergen retention.

## IMPORTANT SAFETY INFORMATION

---

- Always disconnect the vacuum cleaner from the power source before installing or replacing vacuum bags or filters.
- Ensure the vacuum bag is correctly seated and sealed within the vacuum cleaner to prevent dust leakage.
- Do not reuse disposable vacuum bags. Replace them when full to maintain optimal vacuum performance and filtration.
- Keep vacuum bags and filters out of reach of children.
- Dispose of used vacuum bags according to local waste disposal regulations.

## PACKAGE CONTENTS

---

Each package contains the following items:

- 10 x Advance / Kent Hip Vac Vacuum Bags
- 1 x Filter



This image displays the packaging for the Advance Kent Euroclean UZ964 Hip Vac Vacuum Bags, showing a pack of ten bags and one filter.

## SETUP INSTRUCTIONS

---

### Installing the Vacuum Bag

1. **Power Off:** Ensure the vacuum cleaner is unplugged from the electrical outlet before proceeding.
2. **Open Compartment:** Locate and open the vacuum bag compartment on your Advance / Kent Hip Vac vacuum cleaner. Refer to your vacuum cleaner's user manual for specific instructions on opening the compartment.
3. **Remove Old Bag (if applicable):** Carefully remove the full or old vacuum bag. Seal the opening of the old bag if possible to prevent dust escape during disposal.
4. **Insert New Bag:** Take a new Advance / Kent Hip Vac vacuum bag. Align the bag's cardboard collar or rubber gasket with the inlet tube inside the vacuum compartment. Push firmly until the bag is securely seated and sealed.
5. **Close Compartment:** Close the vacuum bag compartment securely. Ensure it latches properly to maintain suction and prevent dust leakage.

## OPERATING INSTRUCTIONS

---

### General Use

Once the new vacuum bag is installed, your Advance / Kent Hip Vac vacuum cleaner is ready for operation. Plug the vacuum cleaner into a suitable electrical outlet and turn it on. The Micro-Plus filtration system in these bags will effectively capture fine dust and debris during cleaning. Monitor the vacuum's performance; a decrease in suction power often indicates a full bag or a clogged filter.

## MAINTENANCE

---

### Replacing the Vacuum Bag

It is recommended to replace the vacuum bag when it is approximately two-thirds full, or when you notice a significant reduction in suction power. Overfilling the bag can strain the vacuum motor and reduce cleaning efficiency.

1. **Power Off:** Unplug the vacuum cleaner from the power source.
2. **Open Compartment:** Open the vacuum bag compartment.
3. **Remove Full Bag:** Carefully detach the full bag from the inlet tube. Many bags have a self-sealing collar; if not, pinch the opening closed to prevent dust from escaping.
4. **Dispose:** Dispose of the full bag in a sealed trash receptacle.
5. **Install New Bag:** Follow the "Installing the Vacuum Bag" steps outlined in the Setup section to install a fresh bag.

## Filter Replacement

The included filter should be replaced periodically, typically with every 5-10 bag changes, or if it appears visibly dirty or damaged. Refer to your vacuum cleaner's manual for the exact location and replacement procedure for the filter. Ensure the replacement filter is compatible with your specific Hip Vac model.

## TROUBLESHOOTING

| Problem                  | Possible Cause               | Solution  |
|--------------------------|------------------------------|---|
| Reduced Suction          | Vacuum bag is full.          | Replace the vacuum bag.   |
| Reduced Suction          | Filter is clogged.           | Replace the filter.   |
| Dust Leaking from Vacuum | Bag not installed correctly. | Ensure the bag's collar is securely sealed around the inlet tube. |
| Dust Leaking from Vacuum | Bag is damaged.              | Replace with a new, undamaged bag.                                |

## SPECIFICATIONS

- **Product Type:** Disposable Vacuum Bags and Filter
- **Compatibility:** Advance / Euroclean Kent UZ964, UZ 964-H, UZ 964-SR, UZ 964-400 Hip Vac models, and other compatible models (e.g., UZ964SR, UZ964P, UZ964H, UZ964-230, Adgility UZ964, Ergoclean UZ964, SerVac UZ964, Tennant UZ964).
- **Replaces Part Numbers:** 140655405, 1406554010, 1406554020, 14-2426-05
- **Filtration:** Micro-Plus micro-filtration, capturing up to 99% of particles smaller than 1 micron.
- **Quantity:** 10 Vacuum Bags, 1 Filter
- **Manufacturer:** Advance
- **Item Model Number:** 8542021125

## WARRANTY INFORMATION

These vacuum bags and filters are manufactured to high-quality standards. For specific warranty details regarding manufacturing defects or product performance, please refer to the packaging or contact the retailer from whom the product was purchased. Keep your proof of purchase for any warranty claims.

## CUSTOMER SUPPORT

If you have any questions regarding the installation, compatibility, or performance of your Advance / Kent Hip Vac vacuum bags, please contact your retailer or the manufacturer's customer service department. Always provide the product's model number and any relevant purchase information when seeking support.