

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

- › [Bunker Hill Security](#) /
- › [Bunker Hill Security Model 95276 Battery Operated LED Motion Sensor Light User Manual](#)

Bunker Hill Security 95276

User Manual

BUNKER HILL SECURITY BATTERY OPERATED LED MOTION SENSOR LIGHT

Model: 95276

Introduction

This manual provides instructions for the proper setup, operation, and maintenance of your Bunker Hill Security Battery Operated LED Motion Sensor Light, Model 95276. This device is designed to provide illumination in areas without electrical outlets, such as sheds, closets, and stairwells, offering both convenience and security.

The light features a super bright LED lamp and a three-way switch for continuous, automatic (motion-activated), or off operation, allowing for energy saving in auto mode.



Figure 1: Front view of the Bunker Hill Security Battery Operated LED Motion Sensor Light, showing the light panel and motion sensor lens.

Safety Information

- Read all instructions before use.
- Do not mix old and new batteries. Do not mix alkaline, standard (carbon-zinc), or rechargeable (nickel-cadmium) batteries.
- Dispose of used batteries properly according to local regulations.
- Do not expose the unit to extreme temperatures or moisture.
- This product is intended for indoor use or sheltered outdoor locations where it will not be directly exposed to weather elements.

Package Contents

- 1 x Bunker Hill Security Battery Operated LED Motion Sensor Light (Model 95276)
- User Manual
- *Note: Four AA batteries are required for operation and are not included.*

Setup

1. Battery Installation

1. Locate the battery compartment cover on the back of the unit.
2. Slide or unclip the cover to open the compartment.
3. Insert four (4) AA batteries, ensuring correct polarity (+/-) as indicated inside the compartment.
4. Replace the battery compartment cover securely.

2. Mounting and Placement

The light can be placed on a flat surface or mounted to a wall. Consider the following for optimal performance:

- Choose a location where the motion sensor will have an unobstructed view of the area you wish to monitor.
- Avoid placing the light near heat sources or in direct sunlight, as this may affect sensor performance.
- For wall mounting, use appropriate screws (not included) to secure the unit through the designated mounting holes on the back.

Operating Instructions

The Bunker Hill Security LED Motion Sensor Light features a three-way switch located on the unit. This switch controls the operating mode:

- **OFF:** In this position, the light is completely off and will not activate.
- **ON (Continuous):** In this position, the light will remain continuously illuminated, regardless of motion or ambient light conditions.
- **AUTO:** In this position, the light will activate automatically when motion is detected within its range, provided the ambient light is low enough. The light will turn off automatically after a period of no motion. This mode is designed to save energy.

Select the desired mode by sliding the switch to the corresponding position.

Maintenance

Battery Replacement

When the light begins to dim or stops functioning, it is time to replace the batteries. Follow the battery installation steps outlined in the Setup section.

Cleaning

To clean the unit, wipe it with a soft, dry cloth. Do not use abrasive cleaners or solvents, as these may damage the finish or internal components.

Troubleshooting

Problem	Possible Cause	Solution
Light does not turn on.	<ol style="list-style-type: none">1. Batteries are dead or incorrectly installed.2. Switch is in the 'OFF' position.3. Ambient light is too bright (in 'AUTO' mode).	<ol style="list-style-type: none">1. Replace batteries and ensure correct polarity.2. Slide switch to 'ON' or 'AUTO'.3. Test in a darker environment.
Light stays on continuously (in 'AUTO' mode).	<ol style="list-style-type: none">1. Switch is in the 'ON' position.2. Continuous motion detected within sensor range.	<ol style="list-style-type: none">1. Slide switch to 'AUTO'.2. Relocate the light to an area with less constant activity or adjust its angle.
Light is dim.	Batteries are low.	Replace all four AA batteries.

Specifications

Brand: Bunker Hill Security

Model: 95276

Power Source: 4 x AA Batteries (not included)

Bulb Type: LED

Wattage: 5 watts

Special Features: Motion-Sensor, Three-way switch (OFF/ON/AUTO)

Material: Hard Plastic

Color: White

Item Weight: 3.2 ounces

Overall Dimensions: 1-5/8" L x 3-1/4" W x 4-5/8" H

Warranty and Support

Specific warranty information and customer support contact details are not provided in the product description. Please refer to the product packaging or the retailer where the item was purchased for warranty terms and support options.

