

[Manuals.plus](#) /

› [Basic Fun](#) /

› Basic Fun Fisher-Price Classics Record Player Instruction Manual

Basic Fun 83008-4331-122

Basic Fun Fisher-Price Classics Record Player Instruction Manual

Model: 83008-4331-122

INTRODUCTION

The Fisher-Price Classics Record Player, originally known as the Fisher-Price Change-A-Record Music Box, is a classic toy designed for toddlers and young children. This interactive toy features a wind-up mechanism to play melodies from included records, offering a screen-free play experience. It is designed for children aged 18 months and up.

WHAT'S IN THE BOX

- 1 Fisher-Price Classics Record Player
- 5 Double-Sided Records (featuring 10 classic songs)

SETUP

1. **Unpack:** Carefully remove all components from the packaging.
2. **Record Placement:** Select one of the 5 double-sided records. Place the record onto the turntable spindle, ensuring it sits flat.
3. **Position the "Needle":** Gently move the yellow "needle" arm over the record.



Image: The Fisher-Price Classics Record Player with its five colorful records. The records are placed on the turntable, and the yellow "needle" arm is positioned over one of them, ready for play.

OPERATING INSTRUCTIONS

1. **Play Music:** Once a record is placed and the "needle" is positioned, locate the winding knob on the side of the record player. Turn the knob to wind the internal mechanism. The music will begin to play as the record spins.
2. **Change Songs/Records:** To change the song, lift the "needle" arm off the record, remove the current record, and replace it with another. Reposition the "needle" and wind the knob to play.
3. **Carrying Handle:** Use the integrated yellow carrying handle for easy portability.



Image: A young child sitting on the floor, actively engaging with the Fisher-Price Classics Record Player. They are placing a record onto the turntable, demonstrating the interactive nature of the toy.

FEATURES

- **10 Classic Tunes:** Comes with 5 double-sided records, each featuring two classic songs, for a total of 10 melodies.
- **Internal Record Storage:** Records can be conveniently stored inside the record player's compartment when not in use.
- **Portable Design:** Equipped with a sturdy carrying handle, making it easy for children to take their music on the go.
- **Tactile Play:** Encourages hands-on interaction with its wind-up mechanism and physical records.

MAINTENANCE

- **Cleaning:** Wipe the record player and records with a soft, damp cloth. Do not immerse in water.
- **Storage:** Store the toy and records in a cool, dry place away from direct sunlight to prevent damage.

- **Handling:** Encourage gentle handling of the records and the "needle" arm to ensure longevity of the toy.

TROUBLESHOOTING

- **No Sound:** Ensure the "needle" arm is correctly placed on the record and the winding mechanism is fully wound.
- **Skipping/Distorted Sound:** Check if the record is clean and properly seated on the turntable. Ensure the "needle" arm is not obstructed.
- **Mechanism Not Winding:** If the winding knob feels stuck or does not engage, do not force it. Contact customer support.

SPECIFICATIONS

Model Number:	83008-4331-122
Product Dimensions:	10.5 x 5.5 x 10 inches
Item Weight:	1.6 pounds
Recommended Age:	18 months and up
Material:	Plastic
Color:	Blue/Yellow/White
Power Source:	Wind-up mechanism (no batteries required)

SAFETY INFORMATION

- Always supervise young children during play.
- Keep small parts away from children under 3 years of age to prevent choking hazards.
- Inspect the toy regularly for any damage or loose parts. Discontinue use if damaged.

WARRANTY AND SUPPORT

For warranty information, product support, or to inquire about replacement parts, please visit the official Basic Fun website or contact their customer service department. Keep your purchase receipt as proof of purchase.

You can visit the [Basic Fun Store on Amazon](#) for more information.

