

[manuals.plus](#) /› [Casio](#) /› [Casio G-Shock GA100A-9A Watch Instruction Manual](#)**Casio GA-100A-9ADR**

Casio G-Shock GA100A-9A Watch Instruction Manual

Model: GA-100A-9ADR

INTRODUCTION

This manual provides detailed instructions for the proper use and care of your Casio G-Shock GA100A-9A watch. Designed for durability and functionality, this timepiece features a robust yellow resin case and strap, a black dial with yellow-tone hands, and both analog and digital displays. It is built to withstand challenging conditions, offering magnetic resistance, shock resistance, and water resistance up to 200 meters.

Key features include multiple alarms, a stopwatch function, and a quartz movement for reliable timekeeping. Please read this manual thoroughly to ensure optimal performance and longevity of your watch.



Front view of the Casio G-Shock GA100A-9A watch, showcasing its yellow resin case and black dial.

SETUP

Initial Time Setting

- Enter Time Setting Mode:** Press and hold the 'ADJUST' button (top left) until the city code starts to flash on the digital display.
- Select Home City:** Use the 'FORWARD' (top right) and 'REVERSE' (bottom right) buttons to select your desired home city code.
- Adjust Daylight Saving Time (DST):** Press the 'MODE' button (bottom left) to cycle through settings. When DST is flashing, use 'FORWARD' or 'REVERSE' to toggle it ON or OFF.
- Set Time and Date:** Continue pressing 'MODE' to navigate through the settings (12/24-hour format, seconds, hour, minute, year, month, day). Use 'FORWARD' and 'REVERSE' to adjust each value.
- Exit Setting Mode:** Press the 'ADJUST' button to save your settings and return to the timekeeping mode. The analog hands will automatically adjust to match the digital time.

Hand Home Position Correction

If the analog hands do not match the digital time after initial setup or battery change, perform a hand home position correction:

- In Timekeeping Mode, press and hold 'ADJUST' until the city code flashes.
- Press 'MODE' repeatedly until 'H.SET' appears on the digital display.
- Use 'FORWARD' or 'REVERSE' to move the hour and minute hands to the 12 o'clock position.
- Press 'ADJUST' to confirm and exit. The hands will then move to the current time.

OPERATING INSTRUCTIONS

Mode Navigation

Press the 'MODE' button (bottom left) to cycle through the different modes:

- **Timekeeping Mode:** Displays current time, day, and date.
- **World Time Mode:** View current time in various cities around the globe.
- **Stopwatch Mode:** Measure elapsed time, split times, and 1st-2nd place times.
- **Timer Mode:** Countdown timer function.
- **Alarm Mode:** Set up to 5 daily alarms and a snooze alarm.

Using the Stopwatch

1. Navigate to Stopwatch Mode using the 'MODE' button.
2. Press the 'START/STOP' button (bottom right) to start and stop the stopwatch.
3. Press the 'SPLIT/RESET' button (top left) to record split times while the stopwatch is running.
4. When the stopwatch is stopped, press 'SPLIT/RESET' to reset it to zero.

Setting Alarms

1. Navigate to Alarm Mode using the 'MODE' button.
2. Use 'FORWARD' or 'REVERSE' to select the alarm number you wish to set (AL1 to AL5, or SNZ for snooze alarm).
3. Press and hold 'ADJUST' until the alarm time starts to flash.
4. Use 'MODE' to move between hour and minute settings, and 'FORWARD'/'REVERSE' to adjust the values.
5. Press 'ADJUST' to confirm and exit.
6. To turn an alarm ON/OFF, select the alarm number and press 'START/STOP'.



Detailed view of the watch face and control buttons for mode navigation and settings.



The Casio G-Shock GA100A-9A watch worn on a wrist, demonstrating its size and fit.

Your browser does not support the video tag.

Official product video showcasing the Casio Men's G-Shock Watch GA100A-9A, highlighting its design and features.

MAINTENANCE

Cleaning Your Watch

- Wipe the watch regularly with a soft, dry cloth to remove dirt and moisture.
- For stubborn dirt, use a soft brush and mild soap solution, then rinse thoroughly with fresh water and dry completely.
- Avoid using chemical cleaners or solvents, as these can damage the resin materials.

Water Resistance Guidelines

The GA100A-9A is water resistant to 200 meters (660 feet). This means it is suitable for recreational scuba diving, but not for saturation diving. Do not operate buttons while the watch is wet or submerged to prevent water intrusion.

Battery Replacement

This watch uses a single Lithium Metal battery. Battery life varies depending on usage. When the display becomes dim or functions become erratic, it is time to replace the battery. It is recommended to have the battery replaced by an authorized Casio service center to ensure proper water resistance and function.

TROUBLESHOOTING

- **Hands Not Matching Digital Time:** Perform the Hand Home Position Correction procedure as described in the Setup section.
- **Digital Display is Blank or Dim:** The battery may be low. Replace the battery as soon as possible.
- **Buttons Not Responding:** Ensure the watch is not in a locked mode. If the issue persists, a reset may be required (refer to the full user manual for advanced reset procedures).
- **Watch Not Functioning After Water Exposure:** Immediately take the watch to an authorized service center. Do not attempt to open the watch yourself.

SPECIFICATIONS

Feature	Detail
Model Number	GA-100A-9ADR
Case Material	Resin
Band Material	Resin

Case Diameter	50 mm
Case Thickness	17 mm
Water Resistance	200 meters (660 feet)
Movement	Quartz
Battery	1 Lithium Metal battery (included)
Special Features	Magnetic Resistant, Shock Resistant, Multiple Alarms, Stopwatch, Digital/Analog Display
Product Dimensions	2.02 x 0.67 x 2.17 inches
Item Weight	2.47 ounces



Side profile of the Casio G-Shock GA100A-9A watch, highlighting its robust case design.



Rear view of the Casio G-Shock GA100A-9A watch, showing the stainless steel case back and strap details.

WARRANTY AND SUPPORT

Your Casio G-Shock GA100A-9A watch is covered by a manufacturer's warranty. For specific warranty terms and conditions, please refer to the warranty card included with your purchase or visit the official Casio website.

For further assistance, technical support, or to locate an authorized service center, please visit the [Casio Store on Amazon](#) or the official Casio support website.



The packaging box for the Casio G-Shock watch, typically containing the watch and documentation.