

- Manuals.plus /
- > Hasbro /
 - > Hasbro TRANSFORMERS Movie 2 Deluxe Rampage Action Figure (Model 94567) Instruction Manual

Hasbro 94567

Hasbro TRANSFORMERS Movie 2 Deluxe Rampage Action Figure Instruction Manual

Model: 94567

INTRODUCTION

The TRANSFORMERS Movie 2 Deluxe Rampage figure brings the thrilling action of the movie to life. This DECEPTICON villain is designed for dynamic play, featuring two distinct modes: a four-legged robot attack mode and a jackhammer machine mode. Experience the excitement of transforming Rampage and engaging in epic battles.

SETUP AND TRANSFORMATION

Your Rampage figure can transform between two modes. Follow these steps for transformation:

Robot Mode



Image: Rampage in its four-legged robot attack mode. The figure is red with black treads that extend from its back, resembling whips. Its head features a detailed, menacing design.

In robot mode, Rampage stands on four legs, ready for combat. The treads on its back can be positioned as whip accessories for imaginative battle scenarios.

Transformation to Jackhammer Machine Mode

1. **Fold the Legs:** Carefully fold the robot's four legs inward and upward, aligning them with the main body.
2. **Position the Treads:** Reconfigure the black treads to form the continuous track system of the jackhammer machine. Ensure they are securely connected.
3. **Form the Blade:** Adjust the front sections of the robot mode to form the large, red bulldozer blade at the front of the machine.
4. **Engage MECH ALIVE Gearing:** As you complete the transformation, the internal MECH ALIVE gearing will activate, revealing the intimidating moving "piston" parts, characteristic of the jackhammer machine mode.
5. **Secure all Panels:** Ensure all panels and parts are securely locked into place to maintain the structural integrity of the jackhammer machine mode.



Image: Rampage in its jackhammer machine mode, appearing as a robust red bulldozer with black treads and a prominent front blade. The top section shows mechanical details.

To convert back to robot mode, reverse these steps carefully.

OPERATING YOUR FIGURE

Once transformed, your Rampage figure is ready for action.

- **Robot Mode Play:** In robot mode, pose Rampage using its articulated limbs. Utilize the tread-whip accessories for imaginative battle scenarios.
- **Jackhammer Machine Mode Play:** In jackhammer machine mode, roll the figure along flat surfaces. Observe the MECH ALIVE gearing and moving "piston" parts for realistic mechanical action.

MAINTENANCE

To ensure the longevity of your TRANSFORMERS Rampage figure, follow these simple maintenance guidelines:

- **Cleaning:** Wipe the figure with a soft, dry cloth to remove dust. For stubborn dirt, use a slightly damp cloth and mild soap, then wipe dry immediately. Avoid harsh chemicals or abrasive cleaners.
- **Storage:** Store the figure in a cool, dry place away from direct sunlight and extreme temperatures, which can cause discoloration or material degradation.
- **Handling:** Handle the figure with care, especially during transformation, to prevent stress on joints and moving parts. Avoid forcing parts that do not move easily.

TROUBLESHOOTING

If you encounter any issues with your Rampage figure, consider the following:

- **Difficulty Transforming:** Ensure all previous steps are completed correctly. Refer to the transformation steps and images. Do not apply excessive force; parts should move smoothly when aligned correctly.
- **Loose Joints:** Over time, some joints may become slightly loose. This is generally part of normal wear and tear. If a joint is excessively loose, contact customer support.
- **Missing or Damaged Parts:** Inspect the figure upon receipt. If any parts are missing or damaged, contact Hasbro customer support immediately.

SPECIFICATIONS

Brand: Hasbro

Model Number: 94567

Product Dimensions: 2.76 x 7.52 x 12.01 inches

Item Weight: 8.8 ounces

Manufacturer Recommended Age: 5 years and up

ASIN: B003D53K7E

WARRANTY AND SUPPORT

For warranty information, product support, or to inquire about replacement parts, please contact Hasbro customer service. Refer to the packaging for specific contact details or visit the official Hasbro website.

© Hasbro. All rights reserved.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

<https://manuals.plus/asin/B003D53K7E>

More documents and user manuals: <https://manuals.plus/>